



Grandstream Networks, Inc.

IPVT10 External Network – Typical Network Solutions



Table of Contents

TYPICAL NETWORK SOLUTIONS - External network.....	3
Scenario.....	3
Options Descriptions.....	4

Table of Figures

Figure 1: Network Deployment Diagram – External	3
Figure 2: Configure External Network Adapter	3
Figure 3: Service IP Address Config - External Adapter	4

Table of Tables

Table 1: Parameters Descriptions	4
--	---



TYPICAL NETWORK SOLUTIONS - External network

Scenario

The server is deployed on the external network. Users could access the server via the public network. Users need to configure the external network IP address in the server. If users register accounts and start conferences on the public network, and other participants are all on the public network, users could only deploy the server on the public network and configure the public network adapter.


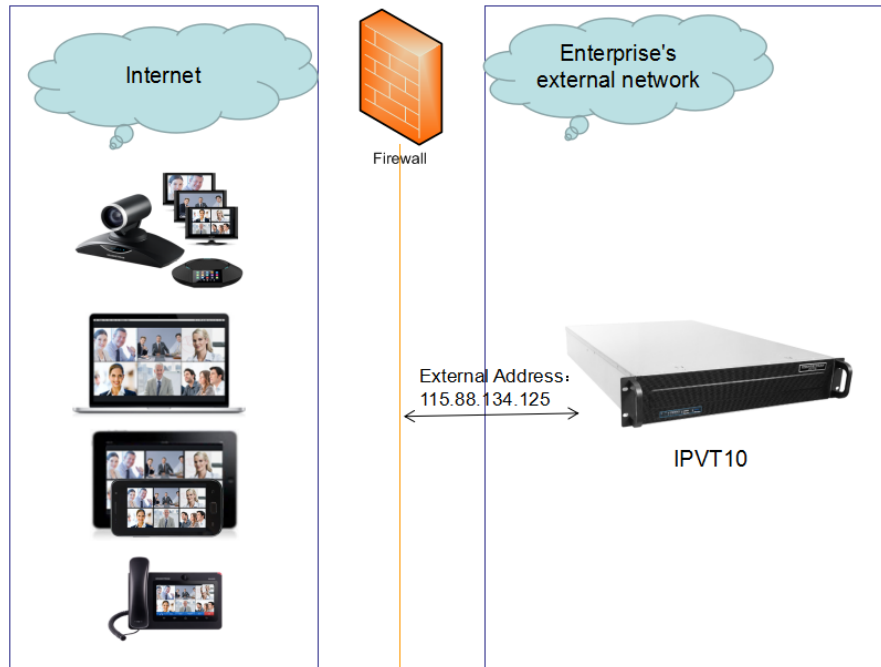


Figure 1: Network Deployment Diagram – External

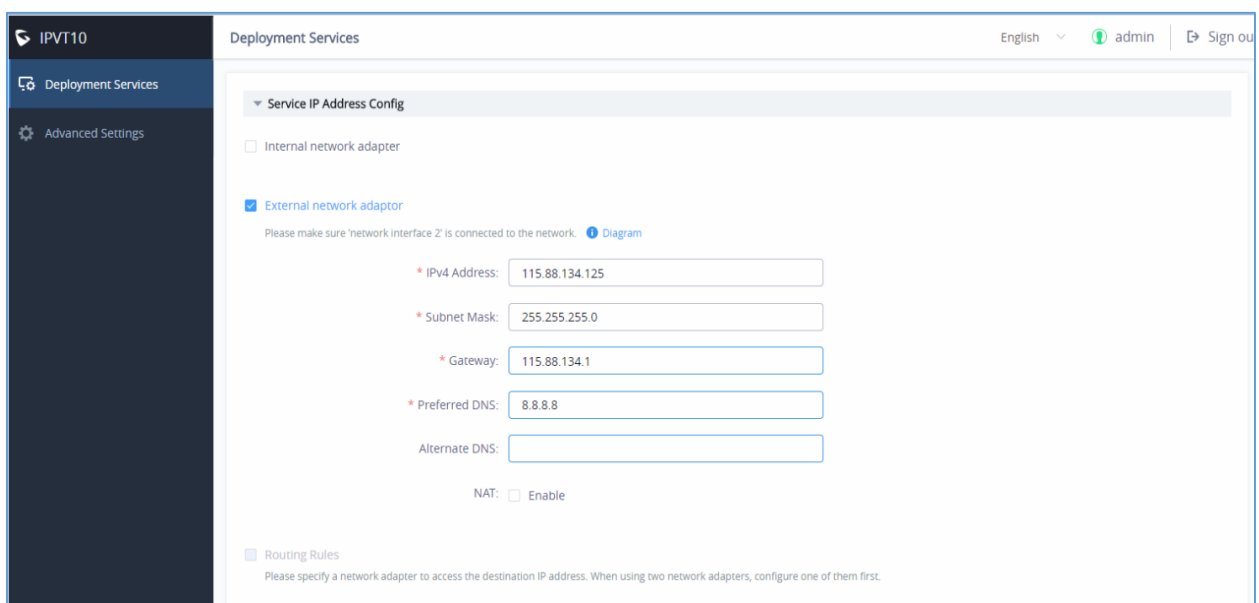

The screenshot shows the 'Deployment Services' configuration page for IPVT10. The 'Service IP Address Config' section is expanded, and the 'External network adaptor' checkbox is checked. Below this, there are input fields for:

- * IPv4 Address: 115.88.134.125
- * Subnet Mask: 255.255.255.0
- * Gateway: 115.88.134.1
- * Preferred DNS: 8.8.8.8
- Alternate DNS: (empty field)

 The 'NAT' checkbox is unchecked. At the bottom, the 'Routing Rules' checkbox is also unchecked. The interface includes a sidebar with 'IPVT10', 'Deployment Services', and 'Advanced Settings' options, and a top navigation bar with 'English', 'admin', and 'Sign out' links.

Figure 2: Configure External Network Adaptor

Options Descriptions

Table 1: Parameters Descriptions

Parameters	Description
Internal Network Adapter	Configures Internal Network Adapter's parameters.
External Network Adapter	Configures External Network Adapter's parameters.
IPv4 Address	Configures the IP Address for IPVideoTalk Portal.
Subnet Mask	Configures the Subnet Mask.
Gateway	Configures the default Gateway.
Preferred DNS	Set the Preferred DNS.
Alternative DNS	Set the Alternative DNS.
NAT	Enable/Disable NAT, and set the NAT IP address.
Routing Rules	Set the advanced configuration Routing Rules to ensure accessing the destination IP address when using two Network Adapters.

Please, refer to the following steps:

1. Login IPVT10 Web UI.
2. Go to "Deployment Services", and configure "Service IP Address Config" options, as the figure shown below:

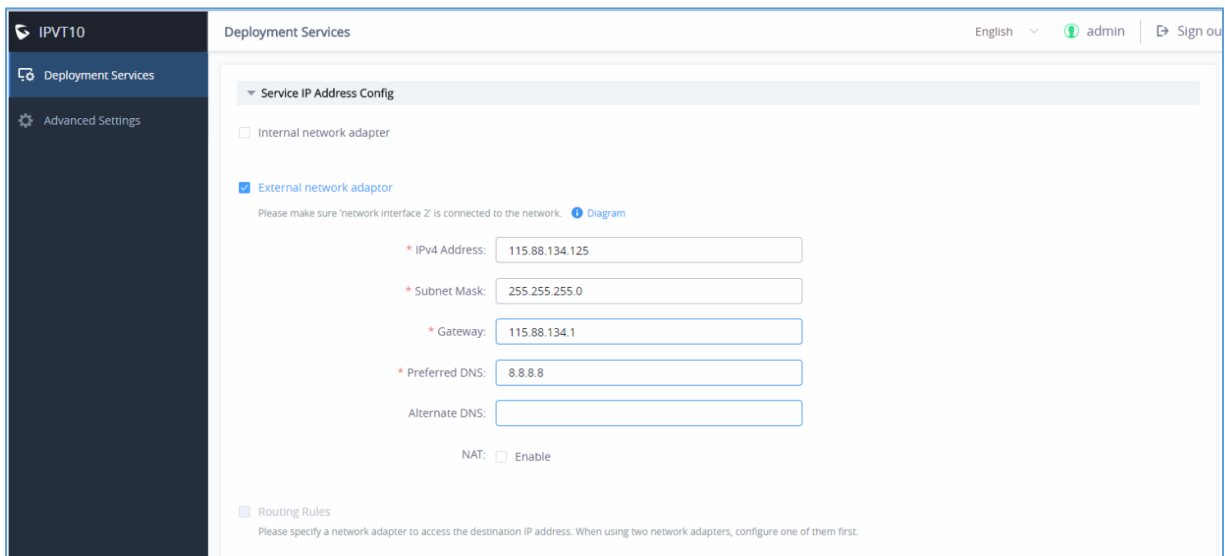


Figure 3: Service IP Address Config - External Adapter

3. According to the actual requirements, users could configure External Network Adapter only.
4. Users need to configure "IPv4 Address", "Subnet Mask", "Gateway", "Preferred DNS", "Alternative DNS" (optional) for the network adapter.



Note: Please make sure that there should be no conflict in the IP address. Otherwise, the service will be unavailable.

5. Continue to fill in the other configuration options. For the first deployment, users have to fill in all required fields.
6. Click on “Deploy to Server Now” to apply the entire configurations of this page to the server. When the deployment is complete, it will take effect immediately.

 **Notes:**

- When the deployment is complete, users need to check whether all network interfaces of the server are all connected. For a single network, only one network interface needs to be connected to the network (Internal Network – Network Interface 1, External Network – Network Interface 2).
 - If users modify the IP address of the server during the conferences, it may cause the abnormal issues for the ongoing conferences, and the scheduled conferences will be inaccessible.
 - When users modify the parameters of the server, the server will restart the service automatically.
-

