

Grandstream Networks, Inc.

GWN76XX Wi-Fi Access Points **Rogue AP Detection Guide**





Table of Content

SUPPORTED DEVICES	4
INTRODUCTION	5
ROGUE AP DETECTION CONFIGURATION	6
Configuration Steps	6
Enabling Rogue AP Detection Feature	6
Adding the Spoofing SSID String	8
Adding Trusted AP	9
Adding Untrusted AP	10
DETECTED ROGUE ACCESS POINTS	12
ROGUE AP CONTAINMENT	13





Table of Figures

Figure 1: Enable Rogue AP Detection Feature	6
Figure 2: Spoofing SSID String	8
Figure 3: Detected Spoofing SSID	8
Figure 4: Add Trusted AP – Configuration Page	9
Figure 5: Add Trusted AP - Detected Page	9
Figure 6: Detected Trusted AP	10
Figure 7: Add Untrusted AP - Configuration Page	10
Figure 8: Add Untrusted AP - Detected Page	11
Figure 9: Detected Trusted and Untrusted APs	12
Figure 10: Detected Rogue Page	12
Figure 11: Rogue AP Containment	13
Figure 12: Contained AP - Detected Page	





SUPPORTED DEVICES

Following table shows Grandstream Wi-Fi Access Points supporting the Rogue AP Detection feature:

Model	Supported	Firmware
GWN7615	Yes	1.0.19.9 or higher
GWN7600 / GWN7600LR	Yes	1.0.19.9 or higher
GWN7605 / GWN7605LR	Yes	1.0.19.9 or higher
GWN7630 / GWN7630LR	Yes	1.0.19.9 or higher

Note: This feature is not supported in GWN7610 and GWN7602.





INTRODUCTION

The GWN Access Points offer the ability to prevent malicious intrusion to the network and increases the wireless security access of clients when introducing Rogue AP Detection feature.

A Rogue AP is an access point that has been installed on a secure network without explicit authorization from network administrators. Rogue access points can negatively impact the performance of wireless networks and pose a security threat because anyone with access to the premises can ignorantly or maliciously plug a wireless AP to the local network which can undermine the security of an enterprise network by potentially allowing unchallenged and unauthorized access.

In this guide, we will go through the configuration steps to enable the AP Rogue Detection feature on a GWN76xx access point.





ROGUE AP DETECTION CONFIGURATION

Configuration Steps

In the next sections, we provide the needed configuration steps to enable Rogue AP Detection feature on GWN access points:

Enabling Rogue AP Detection Feature

To enable the Rogue AP Detection feature, Access the GWN76xx web GUI, and navigate to "**Security**" \rightarrow "**Rogue AP**" \rightarrow "**Configuration**" as shown in below screenshot.

=	Access Points	~	Enable Rogue AP Detection	
(;•	SSIDs		Detect range ② 💿 Same channel 🔿 All channels	
÷	Clients		Countermeasure level ② Disable	~
₩	Access Control		Containment Range 💿 Same channel 💿 All channels	
≔	Captive Portal		Sub-string for Spoofing SSID ③	•
))	Radio		Add new ite	em 🕂
٢	Security		Trusted AP ③	•
	Rogue AP		Add new ite	em 🕕
	Firewall		Untrusted AP 💿	
≡	Service		Add new itr	em 🕂
۵	System	~	Save	

Figure 1: Enable Rogue AP Detection Feature

In below table you can find the description for the related parameters and options.

	Table 1: Rogue AP Parameters Description								
Field	Description								
Enable Rogue AP Detection	Select to either to enable or disable Rogue AP scan.								
Detect range	 Specify the Rogue AP detect range. Same channel: AP will execute simple detection on the APs around, this mode almost has no effects on the wireless network communication. 								





	• All channels: AP will execute a deep detection every 5 minutes. And the clients connecting to the AP will have few seconds of communication interrupt.
	Default is Same channel .
	Countermeasures level specifies the type of attacks which will be suspected by the AP. Select different levels:
	• High: Untrusted BSSID, Illegal access without authentication, Illegal access, Spoofing SSID.
	• Medium: Untrusted BSSID, Illegal access without authentication, Illegal access.
	• Low: Untrusted BSSID, Illegal access without authentication.
Countermeasure level	Default is Disabled .
	 Notes: Illegal access: Rogue AP does not use open authentication and encryption in local network. For example, if you need a password to connect to the SSID of the rogue AP, then it belongs to "Illegal access". Illegal access without authentication: Rogue AP use open authentication and encryption in local network. For example, if you do not need a password to connect to the SSID of rogue AP, then it belongs to "Illegal access without authentication".
Containment Range	 Same channel: detect AP will countermeasure the APs in the same channel. All channels: detect AP will countermeasure the APs in all channels at the cost of consuming of much AP performance. Default is Same channel.
Sub-string for Spoofing SSID	The AP broadcasting SSID with the specified string will be classified as a Spoofing SSID.





	You can specify MAC address of the trusted AP, which should be
Trusted AP	formatted as XX:XX:XX:XX:XX:XX. If an AP is defined as trusted AP, no
	countermeasures will be executed on it.
	You can specify MAC address of the untrusted AP, which should be
Untrusted AP	formatted as XX:XX:XX:XX:XX:XX. If an AP is defined as untrusted AP,
	countermeasures will be executed on it when countermeasure is enabled.

Adding the Spoofing SSID String

Users can specify an SSID string to be checked for potential rogue access points transmitting the same SSID, this is to prevent SSID spoofing rogue access points from masquerading the legitimate SSID broadcasted by GWN76xx. In the example from below screenshot we have added **Test_SSID** as the spoofing SSID string.

Configuration	Detected	•
	Enable Rogue AP Detection	
	Detect range ② O Same channel O All channels	
	Countermeasure level ② High	~
	Containment Range ② O Same channel O All channels	
	Sub-string for Spoofing SSID ② Test_SSID	•

Figure 2: Spoofing SSID String

Once the GWN76xx detects an AP broadcasting the exact SSID string like in our example "Test_SSID", it will be reported in the "**Detected**" page as "**Spoofing SSID**", and if enabled a countermeasure to contain that AP could be taken from the GWN76xx AP to prevent wireless clients from associating with that SSID.

1	netis	00:72:63:6D:2	8	802.11n/g	WPA/WPA2	00:0B:82:AF:	-84	2020-12-29 1	No	Wireless inter		P .
1	Tenda_8E1D00	C8:3A:35:8E:1	9	802.11n/g	WPA2	00:0B:82:AF:	-88	2020-12-29 1	No	Wireless inter	TENDA	
1	Test_SSID	10:62:EB:19:B	9	802.11n/g	WPA/WPA2	00:0B:82:AF:	-57	2020-12-29 1	No	Spoofing SSID	D-LINK	
1	TP-LINK_AD8	34:E8:94:AD:8	8	802.11n/g	WPA2	00:0B:82:AF:	-75	2020-12-29 1	No	Wireless inter	TP-LINK	P 💀

Figure 3: Detected Spoofing SSID





Adding Trusted AP

Users can add trusted access points by specifying their MAC addresses under "Security" \rightarrow "Rogue AP"

\rightarrow "Configuration"

Configuration	Detected
	Enable Rogue AP Detection
	Detect range ② O Same channel O All channels
	Countermeasure level ⑦ High ~
	Containment Range 🕐 💿 Same channel 💿 All channels
	Sub-string for Spoofing SSID ② Test_SSID 😑
	Add new item 🛨
	Trusted AP ② 28:3B:82:DE:D7:DF
	Add new item +
	Untrusted AP 💿
	Add new item \pm
	Save

Figure 4: Add Trusted AP – Configuration Page

You can also define an AP as trusted from the "Actions" tab located under "Security" \rightarrow "Rogue AP" \rightarrow "Detected" by clicking the icon as shown in below screenshot.

SSID 🌲	BSSID 🌲	Channel 🌲	Protocol 🌲	Securit 🌲	Detect 🌲	RSSI 🌲	Last S 🌲	Counter 🌲	Rogue r 🌲	Manuf 🌲	Actions
MA	28:3B:82:	2	802.11n/g	WPA2	00:0B:82:	-16	2020-12-2	No	Unclassified	D-LINK	
Test_SSID	10:62:EB:1	9	802.11n/g	WPA/WPA2	00:0B:82:	-49	2020-12-2	No	Spoofing	D-LINK	
D-Link	F0:B4:D2:	2	802.11n/g	WPA	00:0B:82:	-77	2020-12-2	No	Wireless i	D-LINK	AD 14

Figure 5: Add Trusted AP - Detected Page

Once an AP is added as trusted, it will be displayed under "Detected" page as "Trusted AP"





SSID ≑	BSSID ≑	Channel ≑	Protocol 🜲	Security Mode \Leftrightarrow	Detected by \Rightarrow	RSSI 🔷	Last Seen 🌲	Countermeasure	Rogue reason ≑
MA	28:3B:82:DE:D7:DF	2	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-16	2020-12-29 10:38:24	No	Trusted AP
Test_SSID	10:62:EB:19:B0:09	9	802.11n/g	WPA/WPA2	00:0B:82:AF:D2:E0	-49	2020-12-29 10:38:24	No	Spoofing SSID
D-Link	F0:B4:D2:7C:C3:29	2	802.11n/g	WPA	00:0B:82:AF:D2:E0	-77	2020-12-29 10:30:28	No	Wireless interference

Figure 6: Detected Trusted AP

Note: If an AP is defined as trusted AP, no countermeasures will be executed on it when countermeasure is enabled.

Adding Untrusted AP

Users can add Untrusted access points by specifying their MAC addresses under "Security" -> "Rogue **AP**" \rightarrow "Configuration".

Enable Rogue AP Detection		
Detect range 🤇	Same channel O All channels	
Countermeasure level 🤇) High \checkmark	
Containment Range	Same channel O All channels	
Sub-string for Spoofing SSID		•
	Add new item	Ð
Trusted AP 🤇		•
	Add new item	(
Untrusted AP 🤇) 10:62:EB:19:B0:09	•
	Add new item	Ð
	Save Reset	

Figure 7: Add Untrusted AP - Configuration Page

You can also define an AP as Untrusted from the "Actions" tab located under "Security" \rightarrow "Rogue AP" \rightarrow "**Detected**" by clicking the icon as shown in below screenshot.





D-Link	F0:B4:D2:7C:C	2	802.11n/g	WPA	00:0B:82:AF:	-77	2020-12-29 1	No	Untrusted AP	D-LINK	
МА	28:3B:82:DE:	2	802.11n/g	WPA2	00:0B:82:AF:	-16	2020-12-29 1	No	Unclassified	D-LINK	
netis	00:72:63:6D:2	8	802.11n/g	WPA/WPA2	00:0B:82:AF:	-82	2020-12-29 1	No	Wireless inter		P .

Figure 8: Add Untrusted AP - Detected Page

Note: If an AP is defined as Untrusted AP, countermeasures will be executed on it when countermeasure is enabled.



DETECTED ROGUE ACCESS POINTS

The "**Detected**" page shows all the SSIDs within the Wi-Fi coverage of the GWN76xx, including the APs that have been set as Trusted or Untrusted.

SSID \$	BSSID 🜲	Channel 🌲	Protocol 💠	Security Mode 🌲	Detected by \Leftrightarrow	RSSI 🔷	Last Seen 💠	Countermeasure 🌲	Rogue reason ≑
Test_SSID	10:62:EB:19:B0:09	4	802.11n/g	WPA/WPA2	00:0B:82:AF:D2:E0	-6	2020-12-30 15:45:47	Yes	Untrusted AP
MA	28:3B:82:DE:D7:DF	1	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-25	2020-12-30 15:45:47	No	Trusted AP

Figure 9: Detected Trusted and Untrusted APs

When the GWN76xx AP detects the signal of another neighboring wireless access point, it compares the characteristics of the AP to a list of configured Trusted or Untrusted APs. If the discovered access point does not match any trusted or untrusted AP, the GWN76xx reports the device as a "**Wireless interference**" under the web GUI "**Detected**" page as shown in below screenshot.

Co	Configuration Detected												
						All		V Dual-Band		SSID ~		Q	•
	SSID ≑	BSSID \$	Channel ≑	Protocol \$	Security Mode 💠	Detected by $\mbox{$\ddagger$}$	RSSI ≑	Last Seen 👙	Countermeasure ≑	Rogue reason ≑	Manufacture ≑	Actions	
1	TP-LINK_4831AB	34:E8:94:48:31:AB	5	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-95	2020-12-28 17:37:31	No	Wireless interference	TP-LINK	P 💀	
1	TP-LINK_425406	C4:71:54:42:54:06	5	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-94	2020-12-28 17:37:31	No	Wireless interference	TP-LINK	P	
1	KARIKA	EC:08:6B:D0:B8:A0	11	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-92	2020-12-28 17:37:31	No	Wireless interference	TP-LINK		
1	Tenda_8E1D00	C8:3A:35:8E:1D:01	9	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-90	2020-12-28 17:37:31	No	Wireless interference	TENDA	Pat 194	
1	netis	00:72:63:6D:28:B8	8	802.11n/g	WPA/WPA2	00:0B:82:AF:D2:E0	-89	2020-12-28 17:37:31	No	Wireless interference			
1	manolo2020	E8:65:D4:3F:5F:71	1	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-88	2020-12-28 17:37:31	No	Wireless interference	TENDA		
1	Ahmedziyad	E8:65:D4:3F:5F:72	1	802.11n/g	WPA/WPA2	00:0B:82:AF:D2:E0	-88	2020-12-28 17:37:31	No	Wireless interference	TENDA	P	
1	ZTE_H108N	B0:AC:D2:2E:7B:4B	11	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-87	2020-12-28 17:37:31	No	Wireless interference	ZTE		
1	D-Link	F0:B4:D2:7C:C3:29	2	802.11n/g	WPA	00:0B:82:AF:D2:E0	-87	2020-12-28 17:37:31	No	Wireless interference	D-LINK	Page 194	
1	TP-LINK_AD81D2	34:E8:94:AD:81:D2	8	802.11n/g	WPA2	00:0B:82:AF:D2:E0	-82	2020-12-28 17:37:31	No	Wireless interference	TP-LINK		
										Total 11 10/page	/ < 1	2 > Go to	1

Figure 10: Detected Rogue Page

Note: An Access point is considered to be an interfering AP if it is seen in the RF environment but is not connected to the wired network. While the interfering AP can potentially cause RF interference, it is not considered a direct security threat since it is not connected to the wired network. However, an interfering AP may be reclassified as a rogue AP.





ROGUE AP CONTAINMENT

When the countermeasure option is enabled and a client tries to associate with an untrusted or spoofing SSID access point, The GWN76xx AP automatically begins sending broadcast de-authentication messages spoofing the rogue's BSSID (MAC) to prevent wireless clients from connecting to that malicious rogue AP.



Figure 11: Rogue AP Containment

When a countermeasure is taken against a rogue Untrusted AP, It will be displayed in "**Detected**" page under **Security**" \rightarrow "**Rogue AP**" as shown in below screenshot.

SSID \$	BSSID 🔶	Channel 🌲	Protocol 🌲	Security Mode 🌲	Detected by \Leftrightarrow	RSSI 🌲	Last Seen 🌲	Countermeasure 🌲	Rogue reason 🌲
Test_SSID	10:62:EB:19:B0:09	4	802.11n/g	WPA/WPA2	00:0B:82:AF:D2:E0	-6	2020-12-30 15:45:47	Yes	Untrusted AP

Figure 12: Contained AP - Detected Page

⚠ _{Note:}

Please make sure that the rogue device is within your network and poses a security risk before you launch the containment. As Containment can have legal implications when launched against legitimate neighbor networks.

