



The reverse emf protection diode must always be installed in reverse polarity across the door strike.

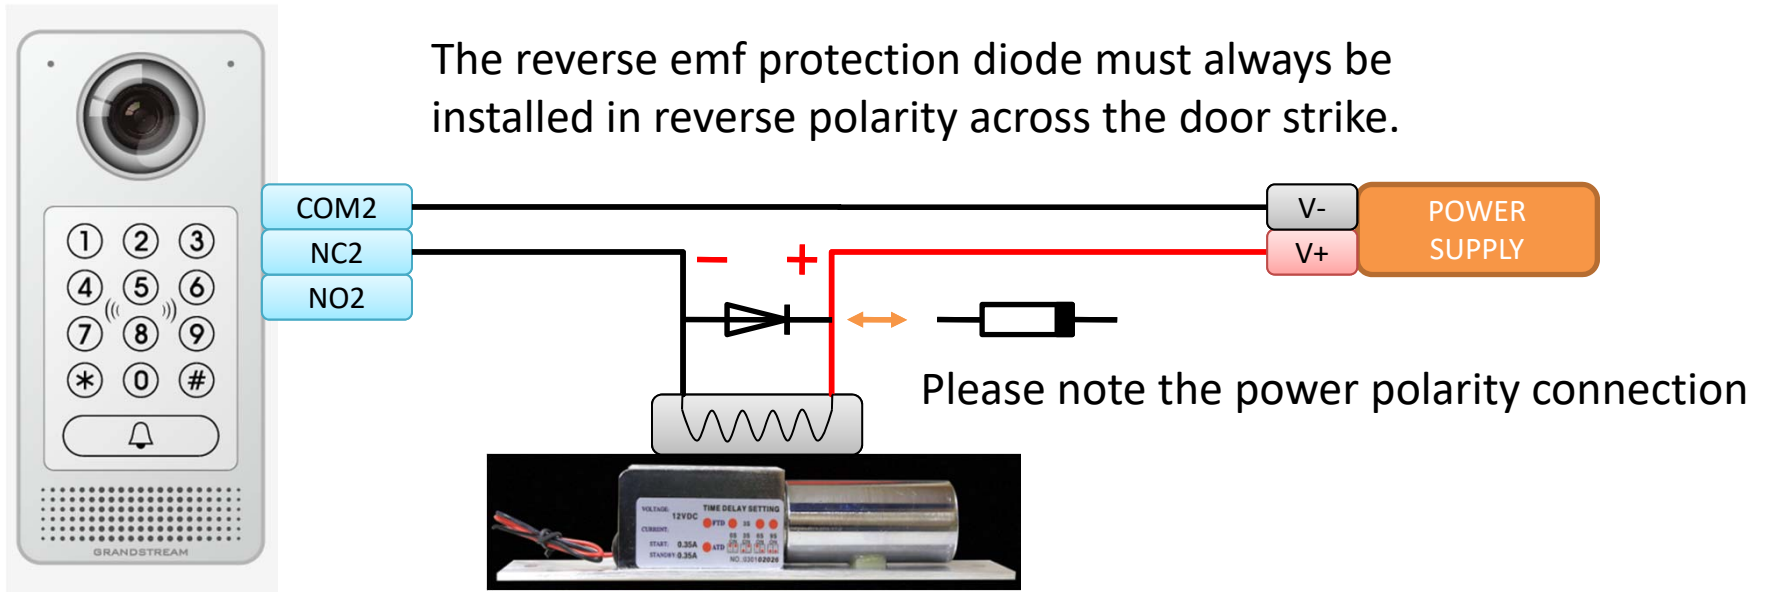

**Electric lock**

The reverse emf protection diode must always be installed in reverse polarity across the door strike.

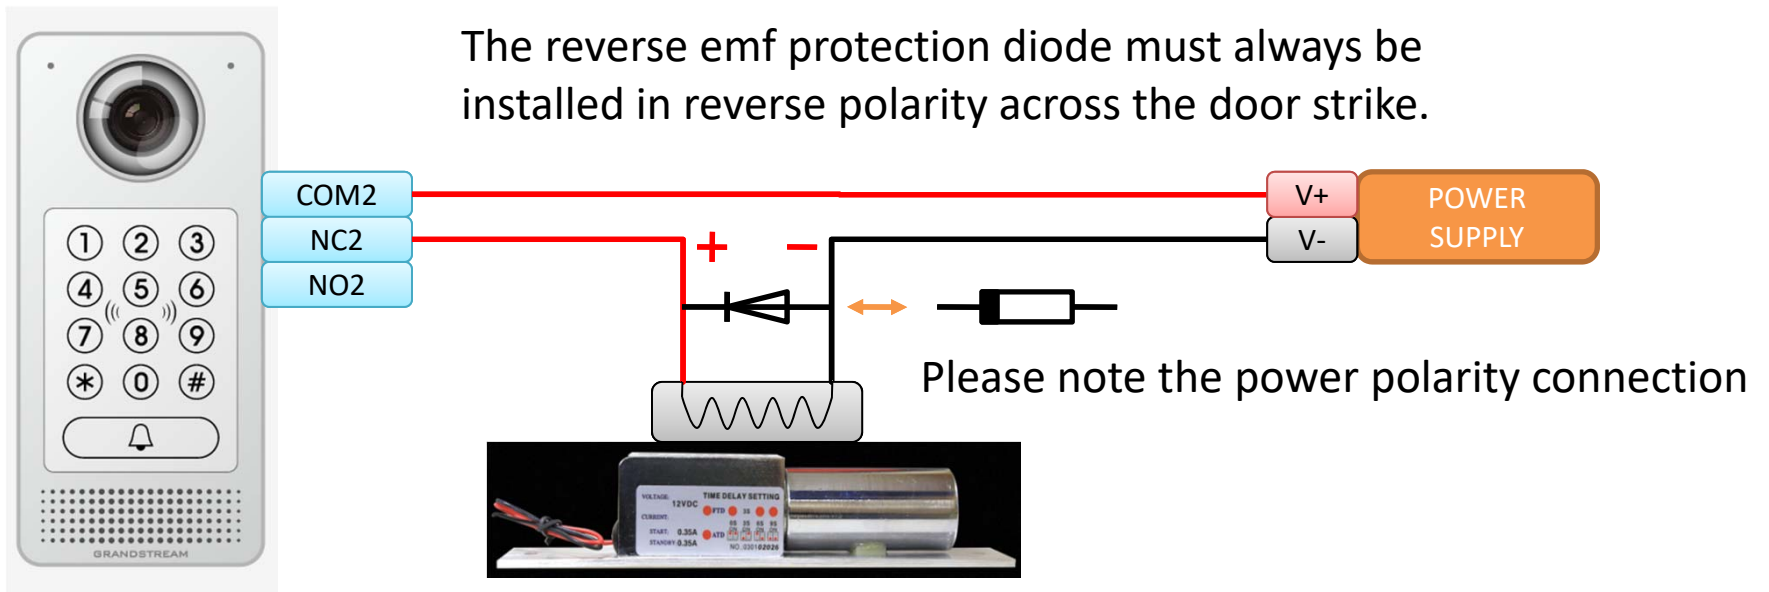

**Electric lock**