


The reverse emf protection diode must always be installed in reverse polarity across the door strike.

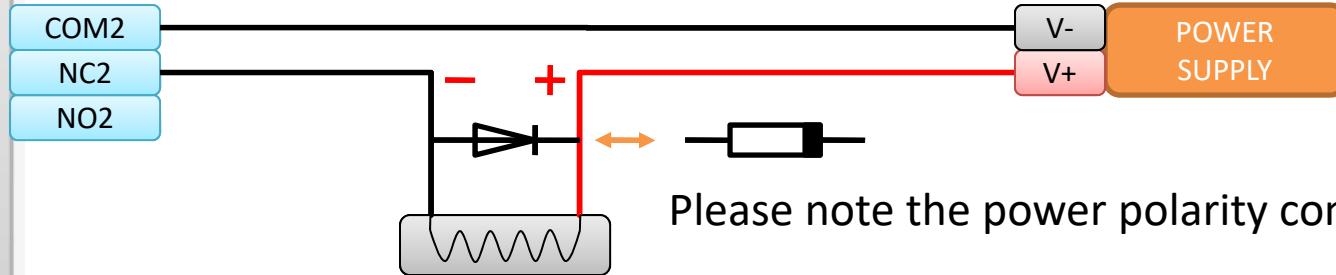


Please note the power polarity connection



Diode: SS24 or $I_f \geq 2A, V_r \geq 40V$

Electric lock

The reverse emf protection diode must always be installed in reverse polarity across the door strike.

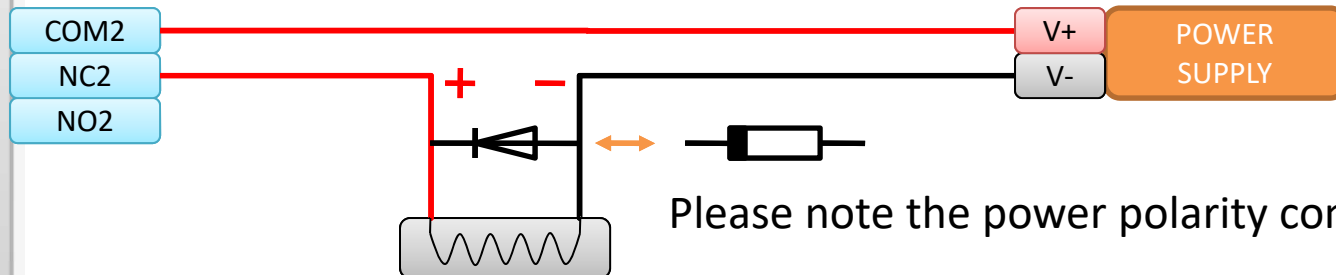

Please note the power polarity connection



Electric lock