



Grandstream Networks, Inc.

Configuring UCM6XXX with GXW410X



Table of Contents

OVERVIEW.....	4
CONNECT UCM6XXX TO GXW410X USING PEER SIP TRUNK	5
Create IVR On UCM6XXX	5
Create Peer SIP TRUNK On UCM6XXX.....	5
Configure Outbound Rule On UCM6XXX	6
Configure Inbound Rule On UCM6XXX	7
Configure FXO Port On GXW410X When Peered with UCM6XXX.....	8
REGISTER GXW410X ON UCM6XXX AS AN EXTENSION.....	11
Create SIP Extension on UCM6XXX.....	11
Configure GXW410X User Setting as an Extension Registered On UCM6XXX	11
GXW410X CALL SETTINGS.....	13
Configure Unconditional Call Forward On GXW410X.....	13
How to Dial	13



Table of Figures

Figure 1: Create IVR 7100 on the UCM6XXX.....	5
Figure 2: Create Peer SIP Trunk on the UCM6XXX	6
Figure 3: Configure Outbound Rule on the UCM6XXX	7
Figure 4: Configure Inbound Rule on UCM6XXX	8
Figure 5: Configure FXO Port on GXW410X: General Settings	9
Figure 6: Configure FXO Port on the GXW410X - SIP Settings	9
Figure 7: Configure FXO Port on the GXW410X - DTMF Method.....	9
Figure 8: Configure FXO Port on the GXW410X - DTMF Payload Type	9
Figure 9: Configure FXO Port on the GXW410X: FXO Termination	10
Figure 10: Configure FXO Port on the GXW410X: Call Progress Tones.....	10
Figure 11: Configure FXO Port on the GXW410X - FXO Termination	10
Figure 12: Create SIP Extension on UCM6XXX	11
Figure 13: GXW410X User Settings	12
Figure 14: GXW410X User Settings: General Settings	12
Figure 15: GXW410X SIP Settings	12
Figure 16: UCM6XXX - SIP Extension Status	13
Figure 17: GXW410X - Call Forwarding	13



OVERVIEW

This document describes basic configuration to interconnect UCM6XXX series and GXW410X. In this document, we are using GXW4104 as an example. The following methodology can be used for the GXW4108 as well. This is typically applied to the scenario where users would like to add a GXW410X not only as a remote extension but also as an external PSTN trunk.

There are two ways to set up the UCM6XXX series IP PBX with the GXW410X.

- **Method 1:** Configure GXW410X as a SIP Peer Trunk.
- **Method 2:** Register GXW410X on the UCM6XXX directly as an extension.

Note: UCM6XXX series include UCM6100 series (UCM6102, UCM6104, UCM6108 and UCM6116), UCM6200 series (UCM6202, UCM6204 and UCM6208) and UCM6510.

 **Warning:**

1. When the UCM6XXX series is interconnected with other GXW410X, it is NOT recommended to turn on "Allow Guest Calls" under the UCM6XXX web GUI->**PBX**->**SIP Settings**->**General**. Turning on this option will allow unauthenticated calls coming through the UCM6XXX series. Please be aware of the security concerns when using this option.
2. When using the IVR in UCM6XXX series, please be aware that if "Dial Trunk" option is turned on in IVR settings, the call into the IVR will be able to dial outbound call using UCM6XXX's trunk. The IVR's permission level will be used when making outbound calls in this case. Please select proper permission level for the IVR to control the outbound calls allowed via "Dial Trunk".




CONNECT UCM6XXX TO GXW410X USING PEER SIP TRUNK

Create IVR On UCM6XXX

On the UCM6XXX web GUI, create an IVR extension under **PBX->Call Features->IVR**.

In IVR settings, if "Dial Other Extensions" is enabled, the calls dialing into the UCM6XXX IVR will be able to reach the internal extensions registered to the UCM6XXX. Also, you can assign the "Key Pressing Event" to different destinations.

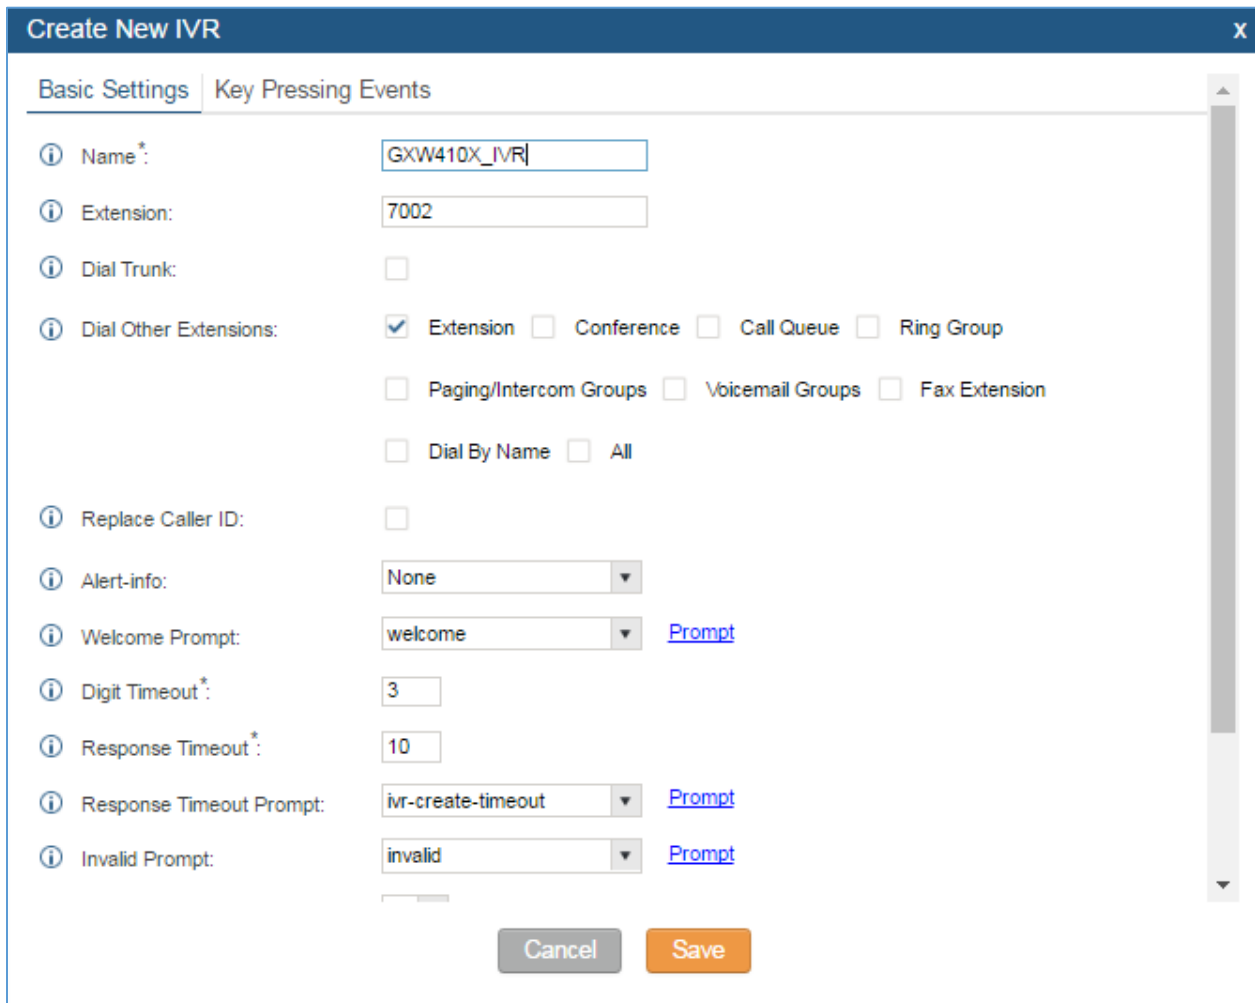

The screenshot shows the 'Create New IVR' configuration window. The 'Basic Settings' tab is active. The configuration includes:

- Name:** GXW410X_IVR
- Extension:** 7002
- Dial Trunk:**
- Dial Other Extensions:** Extension, Conference, Call Queue, Ring Group, Paging/Intercom Groups, Voicemail Groups, Fax Extension, Dial By Name, All
- Replace Caller ID:**
- Alert-info:** None
- Welcome Prompt:** welcome (with a [Prompt](#) link)
- Digit Timeout:** 3
- Response Timeout:** 10
- Response Timeout Prompt:** ivr-create-timeout (with a [Prompt](#) link)
- Invalid Prompt:** invalid (with a [Prompt](#) link)

Buttons for 'Cancel' and 'Save' are located at the bottom of the form.

Figure 1: Create IVR 7100 on the UCM6XXX

Create Peer SIP TRUNK On UCM6XXX

On the UCM6XXX web GUI, create a peer SIP trunk under **PBX->Basic/Call Routes->VOIP Trunks**. In this example, the GXW410X IP address is 192.168.5.159.

Edit SIP Trunk: GWX410X
X

Basic Settings
Advanced Settings

ⓘ Provider Name*:	<input type="text" value="GWX410X"/>
ⓘ Host Name*:	<input type="text" value="192.168.5.159"/>
ⓘ Transport:	<input type="text" value="UDP"/>
ⓘ Keep Original CID:	<input type="checkbox"/>
ⓘ Keep Trunk CID:	<input type="checkbox"/>
ⓘ NAT:	<input type="checkbox"/>
ⓘ Disable This Trunk:	<input type="checkbox"/>
ⓘ TEL URI:	<input type="text" value="Disabled"/>
ⓘ Caller ID:	<input type="text"/>
ⓘ CallerID Name:	<input type="text"/>
ⓘ From Domain:	<input type="text"/>
ⓘ Auto Record:	<input type="checkbox"/>

Figure 2: Create Peer SIP Trunk on the UCM6XXX

Configure Outbound Rule On UCM6XXX

On the UCM6XXX web GUI, go to **PBX->Basic/Call Routes->Outbound Routes** to create a new outbound rule. This would allow the extension on the UCM6XXX to reach numbers in PSTN network via the peer SIP trunk we just configured.



Create New Outbound Rule
X

ⓘ Calling Rule Name*:

ⓘ Pattern*:

ⓘ Disable This Route:

ⓘ Call Duration Limit:

ⓘ PIN Groups:

ⓘ Password:

ⓘ Privilege Level: Warning: Setting privilege level at "Disabled" will lead to this rule can only be used by matched Source Caller ID.

ⓘ Enable Filter on Source Caller ID:

Send This Call Through Trunk

ⓘ Use Trunk*:

ⓘ Strip:

ⓘ Prepend:

Use Failover Trunk:

Trunks	Strip	Prepend	Options
Click to add failover trunk			

Time Condition

Time Condition	Time	Options
Click to add Time Condition		

Figure 3: Configure Outbound Rule on the UCM6XXX

In this example pattern "91XXXXXXXXXXXX", 9 is the first dialing digit and it will be stripped off when the call goes out.

Configure Inbound Rule On UCM6XXX

On the UCM6XXX web GUI, go to **PBX->Basic/Call Routes->Inbound Rules** to create a new inbound rule.

In this example, we create the DID as **20000**, which will be used in the GXW410X call forward setting.



Create New Inbound Rule
X

Trunks *: SIPTrunks -- GXW410X

DID Pattern *: _20000 /

Disable This Route:

Prepend Trunk Name:

Prepend User Defined Name:

Alert-info: None

Inbound Multiple Mode:

Default Mode | Mode 1

Default Destination *: IVR GXW410X_IVR

Time Condition

Time Condition	Time	Destination	Options
Click to add Time Condition			

Cancel
Save

Figure 4: Configure Inbound Rule on UCM6XXX

The default destination is configured to IVR. Ensure to select the proper extension for the IVR.

Configure FXO Port On GXW410X When Peered with UCM6XXX

1. Connect the PSTN line to the GXW410X FXO port.
2. On the GXW410X web GUI, go to the **Accounts->Account X-> General Settings** page and enter the IP address of the UCM6XXX that you are peering with.



Accounts	General Settings
Account 1	
General Settings	Account Active: <input checked="" type="radio"/> Yes <input type="radio"/> No
Networks Settings	Account Name: <input type="text" value="UCM6xxx"/> (Optional, name of your profile)
SIP Settings	SIP Server: <input type="text" value="192.168.5.250"/> (Server domain name or IP address)
Audio Settings	Outbound Proxy: <input type="text"/> (Domain name or IP address if in use)
Call Settings	
Account 2	
Account 3	
User Account	

Figure 5: Configure FXO Port on GXW410X: General Settings

- Please make sure the **SIP Registration** option under **Accounts-> Account X-> SIP Settings** is set to **No**. In the following example, UCM6XXX has IP address 192.168.5.250.

Accounts	SIP Settings
Account 1	
General Settings	SIP Registration: <input type="radio"/> Yes <input checked="" type="radio"/> No
Networks Settings	Unregister On Reboot: <input type="radio"/> Yes <input checked="" type="radio"/> No
SIP Settings	Register Expiration: <input type="text" value="60"/> (in minutes, default 1 hour, max 45 days)
Audio Settings	SIP Reg Failure Retry Wait: <input type="text" value="20"/> (in seconds, Between 1-3600, default is 20)
Call Settings	SIP Transport: <input checked="" type="radio"/> UDP <input type="radio"/> TCP

Figure 6: Configure FXO Port on the GXW410X - SIP Settings

Since we are going to use IVR when the call is forwarded to the UCM6XXX, UCM6XXX will need to be able to detect the DTMF digits. Configure the GXW410X FXO port DTMF settings as below for the initial setup. This can be found under **Settings-> Channel Settings**.

Settings	Channels Settings
General Settings	SIP Channel Setting
Call Settings	DTMF Methods(1-7): <input type="text" value="ch1-4:1"/> (default 1)
Channels Settings	(1:in-audio, 2:RFC2833, 3:1+2, 4:SIP Info, 5:1+4, 6:2+4, 7:1+2+4)

Figure 7: Configure FXO Port on the GXW410X - DTMF Method

Set the DTMF Payload Type to 101. This value can be found under **Settings->Call Settings**.

Call Settings
G723 Rate: <input checked="" type="radio"/> 6.3kbps encoded
Voice Frames per TX: <input type="text" value="2"/> (up to 10)
DTMF Payload Type: <input type="text" value="101"/>

Figure 8: Configure FXO Port on the GXW410X - DTMF Payload Type

There are few changes to be made in FXO termination section. This feature can be found under **FXO Lines** settings page.

FXO Termination		
Enable Current Disconnect(Y/N):	<input type="text" value="ch1-4:Y;"/>	(default Y=yes)
	use <input type="text" value="ch1-4:100;"/>	if yes (5 ~ 65530, default 100ms)
Enable Tone Disconnect:	<input type="text" value="ch1-4:N;"/>	(default No; Yes - busy tone)

Figure 9: Configure FXO Port on the GXW410X: FXO Termination

- First we should confirm which method the PSTN line is using.

If the PSTN line is using current disconnect (typical case in North America), then we should turn on "Enable Current Disconnect" and disable "Enable PSTN Disconnect Tone Detection". The default "Current Disconnect Threshold" value is 100ms, but if you start experiencing call drop then you should raise this value by 100ms intervals.

If the PSTN disconnects using the tones method, then turn on "Enable PSTN Disconnect Tone Detection" and turn off the "Enable Current Disconnect" option.

Call Progress Tones	
[Syntax: ch x-y: f1=val@vol,f2=val@vol,c=on1/off1-on2/off2-on3/off3; ...]	
Note: f1,f2-frequency(Hz); vol-volume(dB); c-cadence(10ms, 0-continuous)	
Dial Tone:	<input type="text" value="ch1-4:f1=350@-11,f2=440@-11,c=0/0;"/>
Ringback Tone:	<input type="text" value="ch1-4:f1=440@-11,f2=480@-11,c=200/400;"/>
Busy Tone:	<input type="text" value="ch1-4:f1=480@-11,f2=620@-11,c=50/50;"/>
Reorder Tone:	<input type="text" value="ch1-4:f1=480@-11,f2=620@-11,c=25/25;"/>

Figure 10: Configure FXO Port on the GXW410X: Call Progress Tones

For PSTN tone detection, the tone disconnect method is widely used everywhere else in the world. The North American busy tone value is "f1=480@-32,f2=620@-32,c=500/500" but these tones vary from country to country. You may look up for the settings for your country at www.3amsystems.com or download the information from <http://www.itu.int/ITU-T/inr/forms/files/tones-0203.pdf>

Port Caller ID Setting	
Number of Rings Before Pickup:	<input type="text" value="ch1-4:2"/> (1-50, default 4)
Dialing to PSTN	
Wait for Dial-Tone(Y/N):	<input type="text" value="ch1-4:N;"/> (default No)
Stage Method(1/2):	<input type="text" value="ch1-4:1;"/> (default 2 stage dialing)

Figure 11: Configure FXO Port on the GXW410X - FXO Termination


- Set "Number of Rings" option to 1. If you happen to experience caller ID issue, you may set it to 2. In the sample setup, it's set to 2.

- Set the "Wait for Dial-Tone" to "No".
- Set the "Stage Method (1/2)" to 1.

REGISTER GXW410X ON UCM6XXX AS AN EXTENSION

Create SIP Extension on UCM6XXX

To manually create new SIP user, go to UCM6XXX web GUI->**PBX->Basic/Call Routes->Extensions**. Click on "Create New User"->"Create New SIP Extension" and a new dialog window will show for users to fill in the extension information.

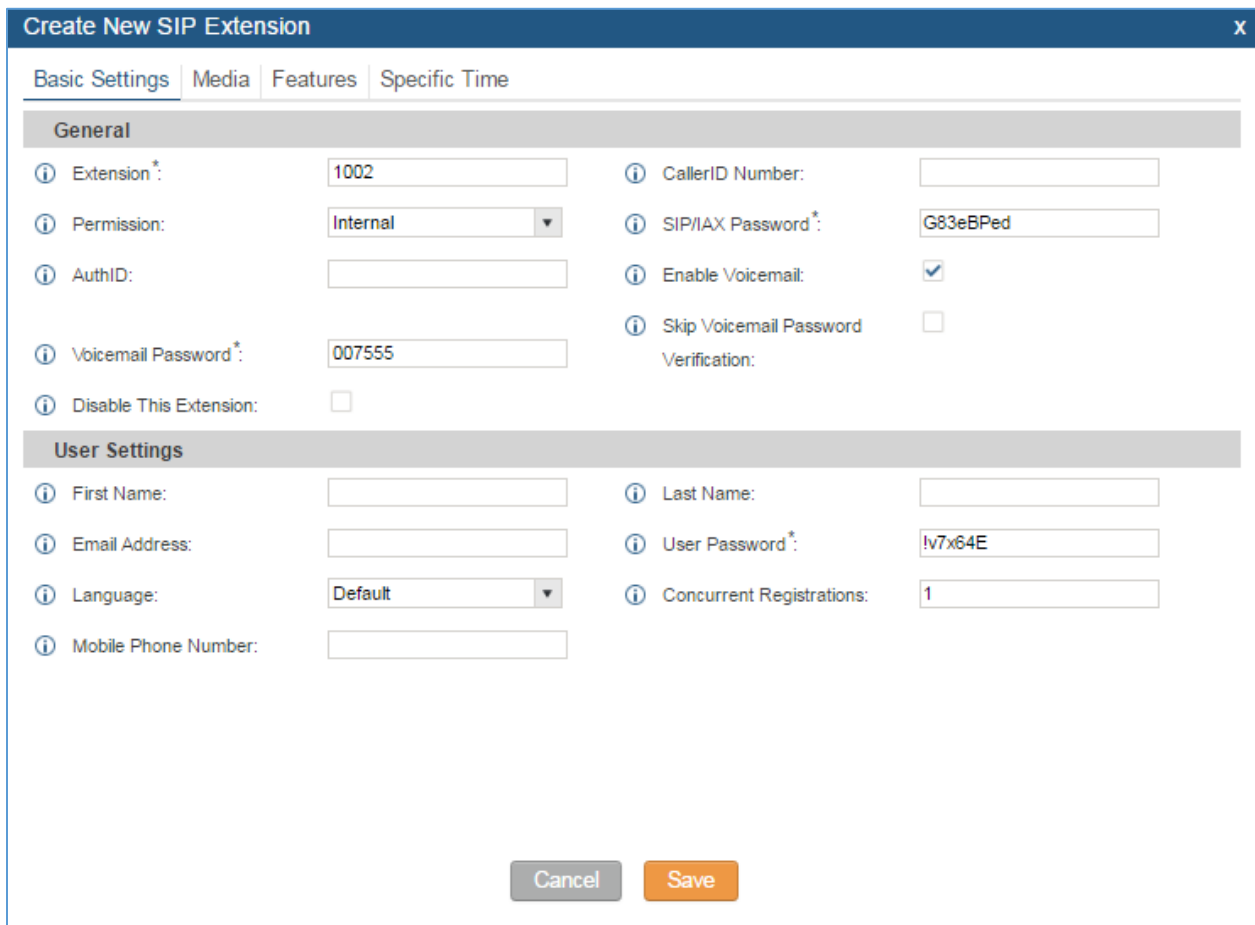

Create New SIP Extension				
Basic Settings		Media	Features	Specific Time
General				
Extension *	1002	CallerID Number:		
Permission:	Internal	SIP/IAX Password *	G83eBPed	
AuthID:		Enable Voicemail:	<input checked="" type="checkbox"/>	
Voicemail Password *	007555	Skip Voicemail Password Verification:	<input type="checkbox"/>	
Disable This Extension:	<input type="checkbox"/>			
User Settings				
First Name:		Last Name:		
Email Address:		User Password *	lv7x64E	
Language:	Default	Concurrent Registrations:	1	
Mobile Phone Number:				
Cancel		Save		

Figure 12: Create SIP Extension on UCM6XXX

Configure GXW410X User Setting as an Extension Registered On UCM6XXX

Under GXW410X web GUI->**Accounts->User Account**, please enter the SIP Extension information created earlier in the UCM6XXX. In this example, extension 1002 is used in order to register GXW410X as an extension user on UCM6XXX.

Accounts		SIP User Accounts				
Account 1						
Account 2						
Account 3						
User Account	Channel(s)	SIP User ID	Authenticate ID	Authen Password	SIP Account	
	<input type="text"/>	<input type="text" value="1002"/>	<input type="text" value="1002"/>	<input type="password" value="•••••"/>	<input type="text" value="Account 1"/>	

Figure 13: GXW410X User Settings

Under GXW410X web GUI, **Accounts->Account X->General Settings**, please fill in UCM6XXX information as explained in method 1.

Accounts		General Settings	
Account 1			
General Settings		Account Active:	<input checked="" type="radio"/> Yes <input type="radio"/> No
Networks Settings		Account Name:	<input type="text" value="UCM6xxx"/> (Optional, name of your profile)
SIP Settings		SIP Server:	<input type="text" value="192.168.5.250"/> (Server domain name or IP address)
Audio Settings		Outbound Proxy:	<input type="text"/> (Domain name or IP address if in use)
Call Settings			
Account 2			
Account 3			
User Account			

Figure 14: GXW410X User Settings: General Settings

Please make sure under **SIP Settings** tab, **SIP Registration** option is set to **Yes**, as it is required for GXW410X to successfully register on UCM6XXX.

Accounts		SIP Settings	
Account 1			
General Settings		SIP Registration:	<input checked="" type="radio"/> Yes <input type="radio"/> No
Networks Settings		Unregister On Reboot:	<input type="radio"/> Yes <input checked="" type="radio"/> No
SIP Settings		Register Expiration:	<input type="text" value="60"/> (in minutes, default 1 hour, max 45 days)
Audio Settings		SIP Reg Failure Retry Wait:	<input type="text" value="20"/> (in seconds, Between 1-3600, default is 20)
Call Settings		SIP Transport:	<input checked="" type="radio"/> UDP <input type="radio"/> TCP

Figure 15: GXW410X SIP Settings

We can check UCM6XXX SIP Extension Status to see if GXW410X has been successfully registered as an extension device. The green icon indicates that GXW410X is registered on UCM6XXX.



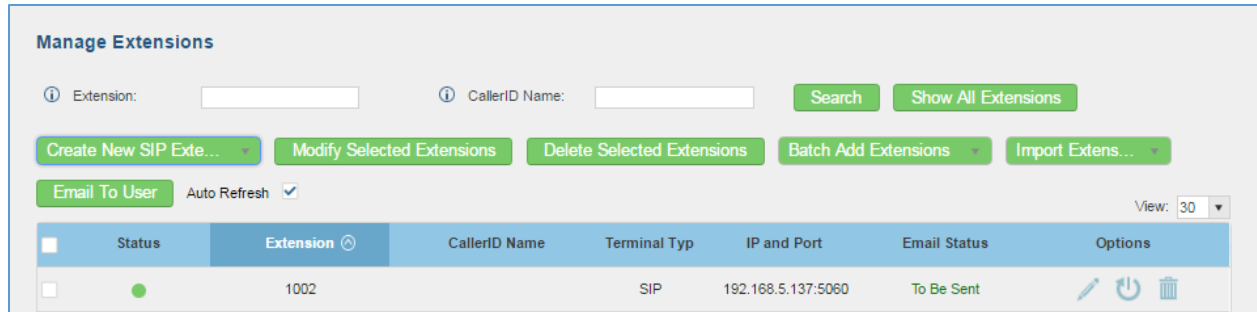


Figure 16: UCM6XXX - SIP Extension Status

Now GXW410X is registered at UCM6XXX as an extension device. Please refer to method 1 in the previous section to adjust FXO Port and DTMF settings on GXW410X.

GXW410X CALL SETTINGS

Configure Unconditional Call Forward On GXW410X

On the GXW410X web GUI, go to the **Settings->Channel Settings** page, configure "Unconditional Call Forward to VOIP" to the DID number 20000. This is the same number configured in UCM6XXX inbound route dial pattern. In this example, we will use the SIP server for profile 1 (p1).

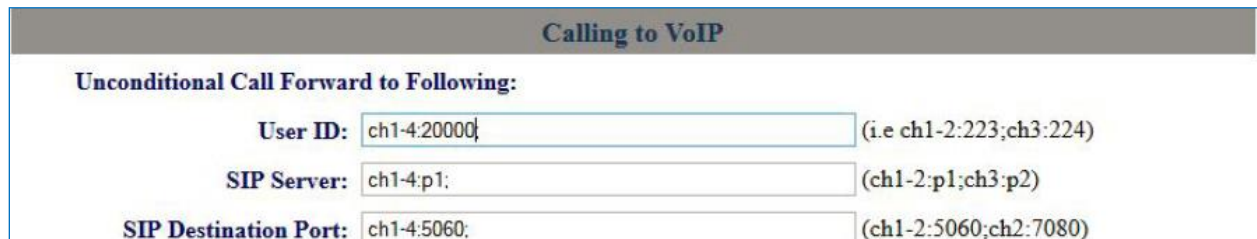


Figure 17: GXW410X - Call Forwarding

How to Dial

Once the GXW410X and the UCM6XXX are configured correctly, the inbound call and the outbound call will be working as described below.

- **Outbound call:**
The extension registered to the UCM6XXX can dial prefix + PSTN number to reach outside numbers in PSTN network, as defined in UCM6XXX outbound route.
- **Inbound call:**
The user from outside network can dial into the PSTN line's number (connected to GXW410X). And then he/she will reach the IVR of the UCM6XXX. The IVR on UCM6XXX would allow the user to further enter extension number or key pressing digit to reach the desired destination. The inbound call will go through the inbound route set up on the UCM6XXX.

