



Grandstream Networks Inc.

UCM6300 Series/UCM6300 Audio Series IP PBX

High Availability User Guide



Table of Contents

SUPPORTED DEVICES	5
INTRODUCTION	6
TYPICAL NETWORK TOPOLOGY	7
HA PREREQUISITES	8
Prerequisites.....	8
Connecting UCM for HA Setup.....	8
Network Configuration	8
HA CONFIGURATIONS	10
For UCM without UCMRC Plan.....	10
For UCM with UCMRC Plan.....	13
<i>Scenario 1: Two new UCMs on factory default settings and both UCM use UCMRC service.</i>	<i>13</i>
<i>Scenario 2: 1 UCM is configured and running, and the 2nd UCM needs to be added for HA setup. Both UCM use UCMRC service.</i>	<i>14</i>
HA CONFIGURATION PARAMETERS	15
UCMRC CONFIGURATIONS.....	19
UCMRC Plan	19
Custom Domain Configuration	19
VERIFY HA SETTINGS	21
ACTIVE/STANDBY ROLE IN HA	22
Automatic Failure Detection	22
Active UCM: Self-Failure Detection.....	22
Standby UCM: Periodic Heartbeat.....	23
Force Switch.....	23
FIRMWARE UPGRADE.....	24
REPLACING UCM IN HA	25
HA Setup with UCMRC.....	25
<i>Scenario 1: UCM A's station type is "Primary" and it's the active UCM. UCM B's station type is "Secondary" and it's in standby status.</i>	<i>25</i>
<i>Scenario 2: UCM A's station type is "Secondary" and it's the active UCM. UCM B's station type is</i>	



<i>“Primary” and it’s in standby status</i>	25
HA Setup without UCMRC	26
DISABLING HA SETUP	27
CLOUD IM IN HA SETUP	28
USING UCMRC WITH HA	29
Switching UCMRC Role in HA	29
SERVICE STATUS	30
Active/Standby Status	30
Web UI Access for UCM	30
Log in Wave	30
FAILOVER DURING CALL	31
DATA SYNC	32
BACKUP AND RESTORE	33
MAINTENANCE	34



Table of Figures

Figure 1: Typical Network Topology	7
Figure 2: Network Settings.....	9
Figure 3: HA Settings on Primary UCM	10
Figure 4: HA Settings on Secondary UCM.....	11
Figure 5: HA Configured on Secondary UCM.....	12
Figure 6: HA Status on Secondary UCM	12
Figure 7: Add UCM to GDMS.....	19
Figure 8: Assign UCMRC Plan to UCM	19
Figure 9: Edit Device.....	20
Figure 10: Configure Custom Domain	20
Figure 11: HA Status for Active UCM	21
Figure 12: HA Status for Standby UCM	21
Figure 13: Active and Standby UCM Failover	22
Figure 14: Force Switch	23
Figure 15: GDMS Display for UCM HA Status.....	29
Figure 16: System Alert Events.....	34
Figure 17: HA Logs	34

Table of Tables

Table 1: UCM Models Supporting High Availability Feature	5
Table 2: HA Related Parameters.....	15



SUPPORTED DEVICES

Following table shows the UCM models supporting high availability feature described in this guide:

Table 1: UCM Models Supporting High Availability Feature

UCM Models Supporting High Availability Feature	
UCM6300 Series	
UCM6301	Firmware 1.0.9.x or higher
UCM6302	Firmware 1.0.9.x or higher
UCM6304	Firmware 1.0.9.x or higher
UCM6308	Firmware 1.0.9.x or higher
UCM6300 Audio Series	
UCM6300A	Firmware 1.0.9.x or higher
UCM6302A	Firmware 1.0.9.x or higher
UCM6304A	Firmware 1.0.9.x or higher
UCM6308A	Firmware 1.0.9.x or higher



INTRODUCTION

High Availability feature on Grandstream UCM6300 series/UCM6300 Audio series provides enterprises a reliable solution for PBX redundancy and failover support. In HA setup, there are two UCM with one UCM in “active” role and the other in “standby” role. The two UCM must be the same model and use the same firmware version. The data on the active UCM will be synchronized to the standby UCM in real-time manner and the standby UCM monitors active UCM’s running status regularly. When the active UCM runs into hardware or critical software issues, the standby UCM will take over immediately and become the active server. HA feature supports automatic call recovery for UDP point-to-point calls and conference calls, allowing enterprises to communicate and collaborate without the hassle of service interruption.



TYPICAL NETWORK TOPOLOGY

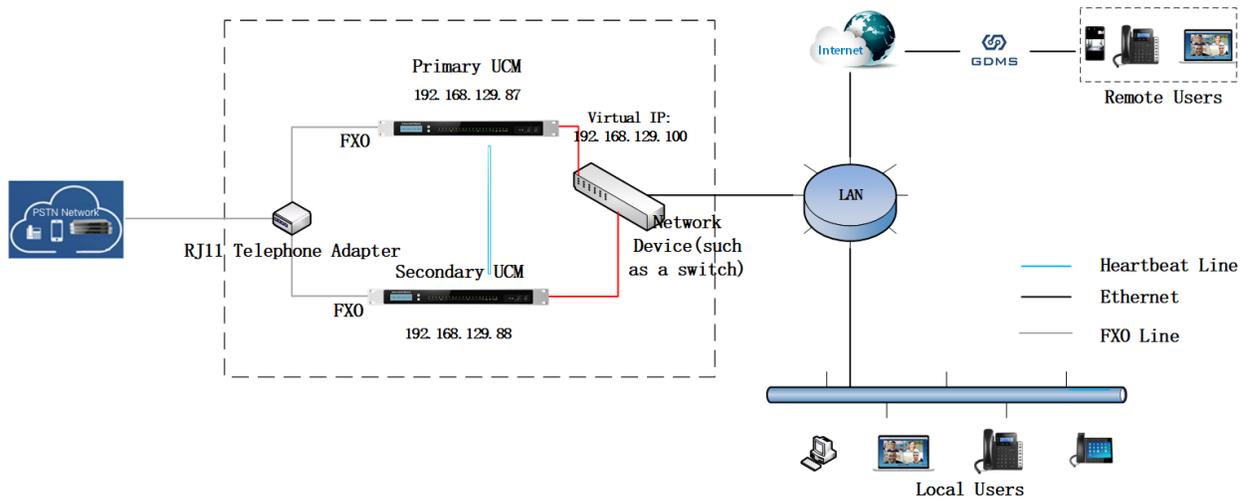


Figure 1: Typical Network Topology

The two UCM in High Availability setup must be deployed in the same location and connected directly to each other via heartbeat port on each UCM. The primary UCM and secondary UCM can be connected to each other via a straight-through Ethernet cable on the heartbeat port. For each UCM, connect its WAN or LAN port to the uplink network device. For FXO port, an RJ11 telephone adapter is required to split the PSTN line connection into two ports for each UCM's FXO port to connect to.

HA PREREQUISITES

Prerequisites

The two UCM used for High Availability deployment must be the same model and use the same firmware version to ensure proper sync-up on the configuration and data.

Connecting UCM for HA Setup

The two UCM in High Availability setup must be deployed in the same location and connected directly to each other via heartbeat port on each UCM.

- Connect a straight-through Ethernet cable between the heartbeat port on the primary UCM and secondary UCM.
- For each UCM, connect its WAN or LAN port to the uplink network device (such as a switch or router).
- For FXO port, an RJ11 telephone adapter is required to split the PSTN line connection into two ports for each UCM's FXO port to connect to. The same FXO port must be used on each UCM when connecting to the adapter.

Network Configuration

Before enabling High Availability feature on the two UCM, the system admin must configure each UCM with proper network settings.

Notes:

- The network "Method" on the UCM must be set to "Switch" or "Router".
- The IPv4 address configured on the UCM must be static IP. It can be configured under UCM web UI→Network Settings→Basic Settings.



Network Settings

Basic Settings 802.1X Settings Static Routes Port Forwarding ARP Settings

Method:

MTU:

IPv4 Address IPv6 Address

Preferred DNS Server:

LAN

IP Method:

* IP Address:

* Subnet Mask:

* Gateway IP:

* DNS Server 1:

DNS Server 2:

Layer 2 QoS 802.1Q/VLAN Tag:

Layer 2 QoS 802.1p Priority Value:

Figure 2: Network Settings




HA CONFIGURATIONS

For UCM without UCMRC Plan

For two new UCM on factory default setting, system admin can choose to configure any of them for HA first. However, if one of the UCM is already configured, up and running for PBX service, system admin should configure this UCM as HA Primary server and complete all HA settings on it first so it can act as active role. Assuming no UCMRC (Remote Connect) service is used on any UCM, please refer to the steps below to configure HA on UCM:

1. Ensure both UCM have the same model and same firmware version. They have been connected properly at the same location and configured with static IP.
2. Select one UCM to be the active device (UCM A). If both UCM are new on factory default settings, select any of them as the active UCM. If one of the UCM is already configured and running, then select this UCM as the active device.
3. If Cloud IM service is needed, please enable Cloud IM on UCM A (active UCM) and ensure Cloud IM is disabled on the other UCM (UCM B).
4. Log in the active UCM (UCM A) web UI and go to System Settings→HA page. Enable HA and configure UCM A as Primary station type. Please refer to HA related parameters in table 2 below and complete other HA related settings. Save the HA settings on UCM A and reboot UCM A. Ensure UCM A boots up normally.

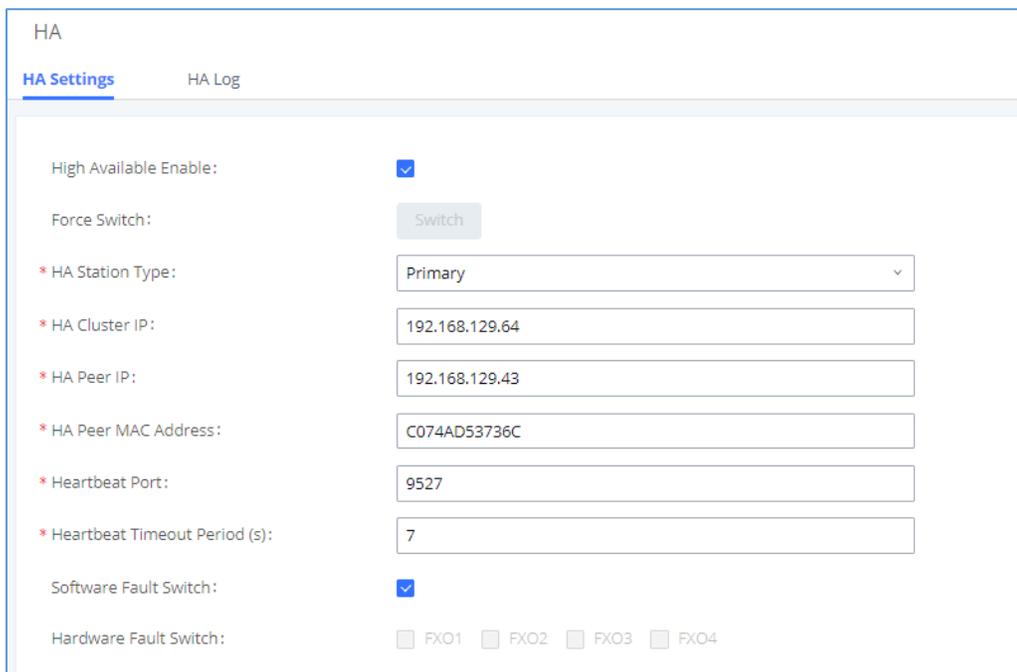


Parameter	Value
High Available Enable:	<input checked="" type="checkbox"/>
Force Switch:	Switch
* HA Station Type:	Primary
* HA Cluster IP:	192.168.129.64
* HA Peer IP:	192.168.129.43
* HA Peer MAC Address:	C074AD53736C
* Heartbeat Port:	9527
* Heartbeat Timeout Period (s):	7
Software Fault Switch:	<input checked="" type="checkbox"/>
Hardware Fault Switch:	<input type="checkbox"/> FX01 <input type="checkbox"/> FX02 <input type="checkbox"/> FX03 <input type="checkbox"/> FX04

Figure 3: HA Settings on Primary UCM



- Verify HA status on UCM A. Log in UCM A using its static IP and admin login information. On web UI→System Settings→HA page, ensure HA function is enabled. HA status should display “Active”.
- After ensuring UCM A's HA status as active, configure UCM B as secondary UCM and complete UCM B's HA settings. Log in UCM B's web UI and go to System Settings→HA page, enable HA and set the station type as “Secondary”. Please refer to HA related parameters in table 2 below to complete other HA related settings. Save the settings and reboot UCM B.

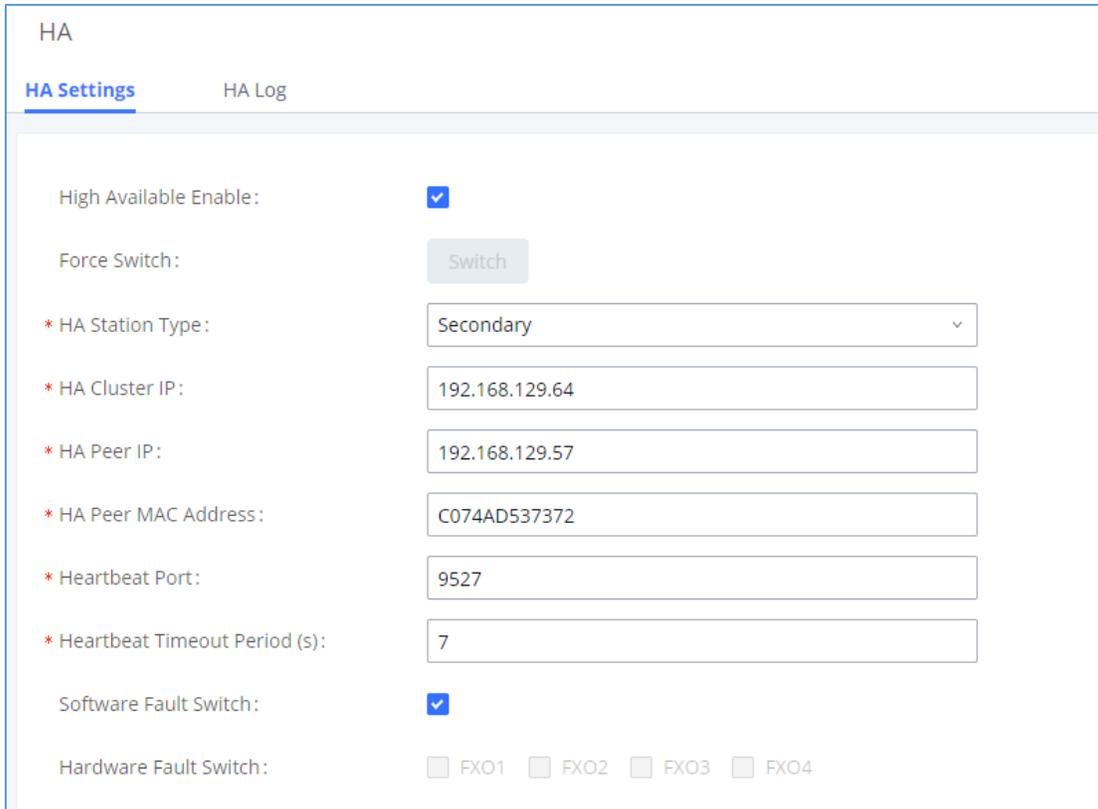

The screenshot shows the 'HA Settings' page for a Secondary UCM. The 'High Available Enable' checkbox is checked. The 'Force Switch' button is greyed out. The 'HA Station Type' dropdown is set to 'Secondary'. The 'HA Cluster IP' is 192.168.129.64, 'HA Peer IP' is 192.168.129.57, 'HA Peer MAC Address' is C074AD537372, 'Heartbeat Port' is 9527, and 'Heartbeat Timeout Period (s)' is 7. The 'Software Fault Switch' checkbox is checked, and the 'Hardware Fault Switch' options (FX01, FX02, FX03, FX04) are all unchecked.

Figure 4: HA Settings on Secondary UCM

- After UCM B boots up normally, log in UCM B's web UI via its static IP address and admin login information. Go to System Settings→HA page, ensure the HA function is enabled, “Switch” button is grey and only HA peer IP / peer MAC address options are available for configuration. The HA status should display as “Standby”.



HA

HA Settings HA Status HA Log

High Available Enable:

Force Switch:

* HA Station Type:

* HA Cluster IP:

* HA Peer IP:

* HA Peer MAC Address:

* Heartbeat Port:

* Heartbeat Timeout Period (s):

Software Fault Switch:

Hardware Fault Switch: FX01 FX02 FX03 FX04

Figure 5: HA Configured on Secondary UCM

HA

HA Settings HA Status HA Log

HA Status: Dual

HA Full Backup Status: Idle

MAC Address of Current UCM: C0:74:AD:53:73:6C

Role of Current UCM: Standby

Figure 6: HA Status on Secondary UCM



For UCM with UCMRC Plan

Scenario 1: Two new UCMs on factory default settings and both UCM use UCMRC service.

1. Ensure both UCM have the same model and same firmware version. They have been connected properly at the same location and configured with static IP.
2. Since both UCM are on factory settings, select any of the UCM to be the active UCM (UCM A).
3. If Cloud IM service is needed, please enable Cloud IM on UCM A (active UCM) and ensure Cloud IM is disabled on the other UCM (UCM B).
4. Log in the active UCM (UCM A) web UI and go to System Settings→HA page. Enable HA and configure UCM A as Primary station type. Please refer to HA related parameters in table 2 below and complete other HA related settings. Save the HA settings on UCM A and reboot UCM A. Ensure UCM A boots up normally.
5. Verify HA status on UCM A. Log in UCM A using its static IP and admin login information. On web UI→System Settings→HA page, ensure HA function is enabled. HA status should display as “Active”.
6. After ensuring UCM A's HA status is active, now configure UCM B as secondary UCM and complete the HA settings. Log in UCM B's web UI and go to System Settings→HA page, enable HA and set the station type as “Secondary”. Please refer to HA related parameters in table 2 below to complete other HA related settings. Save the settings and reboot UCM B.
7. Verify UCM B's HA status. UCM B boots up normally, log in UCM B's web UI via the static IP address and admin login information. Go to System Settings→HA page, ensure the HA function is enabled, “Switch” button is grey and only HA Peer IP / Peer MAC address options are available for configuration.
8. Purchase UCMRC plan for both UCM. Log in UCM web UI and go to Value-added Features→UCM RemoteConnect→Plan page, click on “Learn More”. Then follow the page to add the 2 UCM to GDMS and assign UCMRC plan for them. It doesn't matter which UCM is assigned with UCMRC plan first.
9. For UCM A which has station type “Primary”, configure custom domain name. Please refer to “Custom Domain Configuration” section below.

Note: For UCMRC related settings, please refer to section “UCMRC Configurations”.



Scenario 2: 1 UCM is configured and running, and the 2nd UCM needs to be added for HA setup. Both UCM use UCMRC service.

1. Ensure both UCM have the same model and same firmware version. They have been connected properly at the same location and configured with static IP.
2. Since UCM A is already configured and running, choose this UCM as the active UCM.
3. If Cloud IM service is needed, please enable Cloud IM on UCM A (active UCM) and ensure Cloud IM is disabled on the other UCM (UCM B).
4. Log in the active UCM (UCM A) web UI and go to System Settings→HA page. Enable HA and configure UCM A as Primary station type. Please refer to HA related parameters in table 2 below and complete other HA related settings. Save the HA settings on UCM A and reboot UCMA. Ensure UCM A boots up normally.
5. Verify HA status on UCM A. Log in UCM A using its static IP and admin login information. On web UI→System Settings→HA page, ensure HA function is enabled. HA status should display “Active”.
6. After ensuring UCM A’s HA status as active, now configure UCM B as secondary UCM and complete the HA settings. Log in UCM B’s web UI and go to System Settings→HA page, enable HA and set the station type as “Secondary”. Please refer to HA related parameters in table 2 below to complete other HA related settings. Save the settings and reboot UCM B.
7. Verify UCM B’s HA status. UCM B boots up normally, log in UCM B’s web UI via the static IP address and admin login information. Go to System Settings→HA page, ensure the HA function is enabled, “Switch” button is grey and only HA peer IP/HA MAC address buttons are available for configuration.
8. Purchase UCMRC plan for both UCM. If UCM A already has UCMRC plan, then purchase UCMRC for UCM B only. Log in UCM web UI and go to Value-added Features→UCM RemoteConnect→Plan page, click on “Learn More”. Then follow the page to add the UCM to GDMS and assign UCMRC plan. It doesn’t matter which UCM is assigned with UCMRC plan first.
9. For UCM A which has station type “Primary”, configure custom domain name. Please refer to custom domain name configuration section below. If UCM A already has custom domain name, this step can be skipped.

Note: For UCMRC related settings, please refer to section “UCMRC Configurations”.



HA CONFIGURATION PARAMETERS

Table 2: HA Related Parameters

Settings	Description	Value Range	Default Value	Notes
High Available Enable	Enable or disable HA.	Yes/No	No	
Force Switch	Force to switch the roles of active UCM and standby UCM.	NA	NA	Caution: Please do not use this function unless necessary (e.g., it can be used during firmware upgrading).
HA Station Type	Configure the HA station type for the UCM.	Primary Secondary	NA	In HA setup, one UCM must be primary and the other one must be secondary.
HA Cluster IP	This is the IP address for the active UCM in service.	NA	NA	This IP address is shared by the primary and secondary UCM. The UCM in active status providing PBX service will always be using this IP address regardless it's the primary or \secondary UCM. This IP address can only be used for the active UCM.
HA Peer IP	This is the IP address of the peer UCM in HA setup.	NA	NA	This is the static IP address of the peer UCM in HA setup connected via heartbeat port.
HA Peer MAC Address	This is the MAC address of the peer UCM in HA setup.	NA	NA	This is the MAC address of the peer UCM in HA setup connected via heartbeat port.
Heartbeat Port	This is the port used for communication between the two UCM via heartbeat port.	0 - 65535	9527	It is recommended to use default port.



Heartbeat Timeout Period (s)	This is the heartbeat timeout period that active and standby UCM will check with each other for the status (in seconds).	3 - 10	7	If the standby UCM detects the active UCM disconnected, when it reaches the timeout, failover will be triggered and the standby UCM will start taking over as active UCM.
Software Fault Switch	Enable failover upon software failure	On/Off	Off	If enabled, when there is critical software failure such as deadlock or system crash detected, it will trigger failover from active UCM to standby UCM. Otherwise, failover will not happen.
Hardware Fault Switch	Enable failover upon hardware failure	On/Off	Off	If enabled, when there is hardware failure such as FXO port no longer working, it will trigger failover from active UCM to standby UCM. Otherwise, failover will not happen.

After enabling High Available feature, please configured the following parameters:

- **Station Type (mandatory):**

In HA setup, one UCM must be set as primary and the other one must be set as secondary. The two UCM cannot be configured as the same type. Otherwise, HA function will not work properly. This configuration is to ensure that there is always a UCM on active status and the other one on standby status during negotiation which will automatically determine the active/standby server. When failure condition happens, it is crucial that the failover mechanism does not end up with two active servers negotiated.

The active UCM is the PBX providing service and it's not always the primary server configured in HA. The primary secondary station type is configured but any UCM in HA setup can be the active or standby role when needed. For example, if UCM A is configured as primary station type and UCM B is configured as secondary station type, at the beginning UCM A is in active role and UCM B is in standby role. After failover happens, UCM A's station type configuration is still primary but it's now in standby role and UCM B is in active role.



- **HA Cluster IP (mandatory):**

This is the IP address for the UCM that provides PBX service in HA setup. This IP is always associated with the UCM in active status. For example, when configuring IP phone to register to UCM, this is the SIP server IP address to be configured on the IP phone. When configuring SIP peer trunk, this is the SIP server IP address to be configured as peer trunk server IP. In HA setup, the static IP configured for each UCM will not be used for PBX service directly. Normally the cluster IP address is in the same subnet as the static IP address configured on the UCM.
- **HA Peer IP (mandatory):**

This is the static IP configured on the peer UCM in HA setup. This is used for notifying GDMS when active and standby roles change.
- **Peer MAC Address (optional):**

This is the MAC address of the peer UCM in HA setup. It is used for UCM with Remote Connect service to configure the MAC address of the peer UCM.
- **Heartbeat Port (mandatory):**

This is the port used for communication between active and standby UCM for heartbeat negotiation. It is recommended to use the default port number 9527.
- **Heartbeat Timeout Period (mandatory):**

This is the timeout period for heartbeat (in seconds). The standby UCM will check regularly whether the active UCM is working normally. If the standby UCM detects that the active UCM has been disconnected for this period, the standby UCM will consider the active UCM in faulty state and will then automatically take over as active UCM.
- **Software Fault Switch:**

If enabled, when the active UCM experiences software failure such as system crash with core dump generated, it will trigger failover automatically and the standby UCM will take over. If disabled, HA alert events will be reported without failover.
- **Hardware Fault Switch:**

If enabled, when the active UCM has hardware failure such as FXO port no longer working, it will trigger failover automatically and the standby UCM will take over. If disabled, HA alert events will be reported without failover. Please note plugging or unplugging telephone cable on FXO port is not considered as hardware failure.
- **Force Switch:**

This will force active and standby UCM to switch roles. It will trigger the standby UCM to take over and switch the active UCM to standby role. This should be used only when necessary, such as



firmware upgrading or if active UCM cannot automatically trigger switchover.

After the above configurations, click on Save and follow the reboot prompt to reboot the device.

Note: HA configuration requires the UCM to reboot. Please reboot the UCM during non-service hour to avoid service interruption.



UCMRC CONFIGURATIONS

UCMRC Plan

To ensure that UCMRC plan can be used normally on HA setup, UCMRC plan must be purchased and assigned to both UCM on GDMS. If only one UCM has UCMRC plan, GDMS operation may fail due to HA backup.

Steps:

1. Log in GDMS web UI and go to UCMRC→UCM Devices. Click to add new device and enter the UCM information.

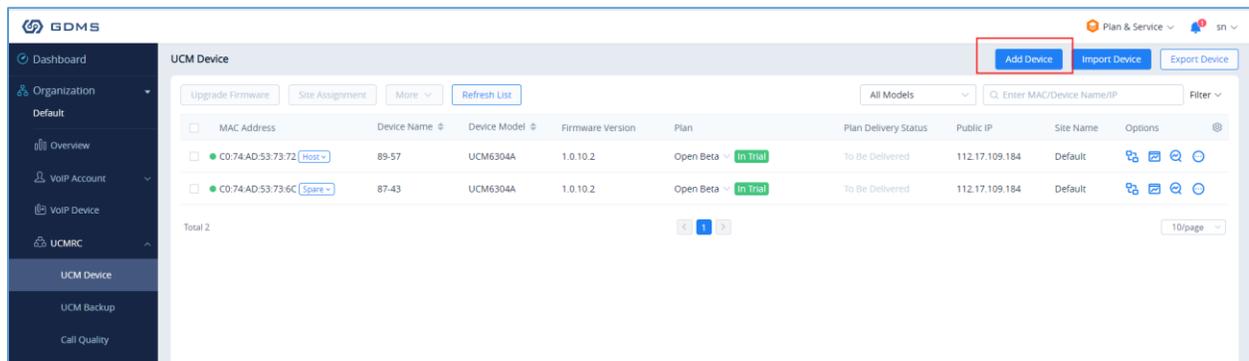


Figure 7: Add UCM to GDMS

2. On GDMS→Plan & Services→My Plan, click on Assign Plan icon  to assign the plan for UCM.

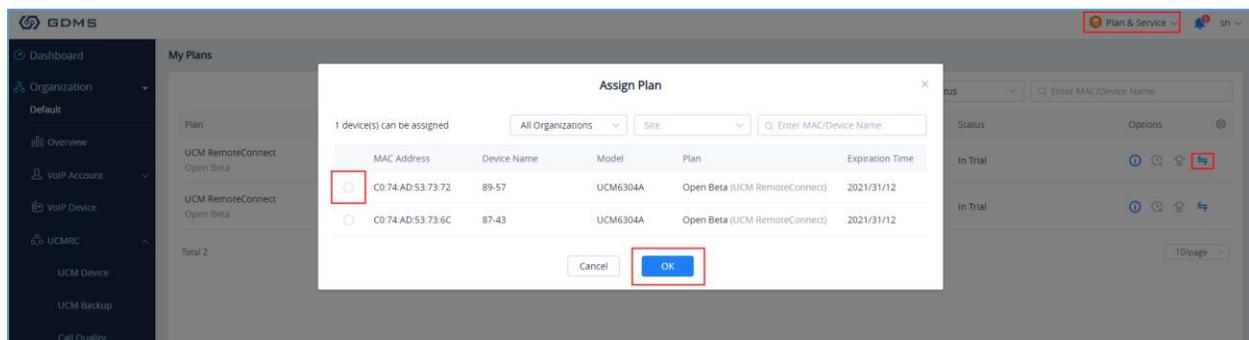


Figure 8: Assign UCMRC Plan to UCM

Custom Domain Configuration

For UCM with UCMRC service already, configure custom domain name for the primary UCM (station type “Primary”) and ensure this UCM uses custom domain name.



Custom Domain Name must be set via GDMS. Log in GDMS and go to UCMRC→UCM Devices, select the UCM and click on “Edit Device” to configure it.

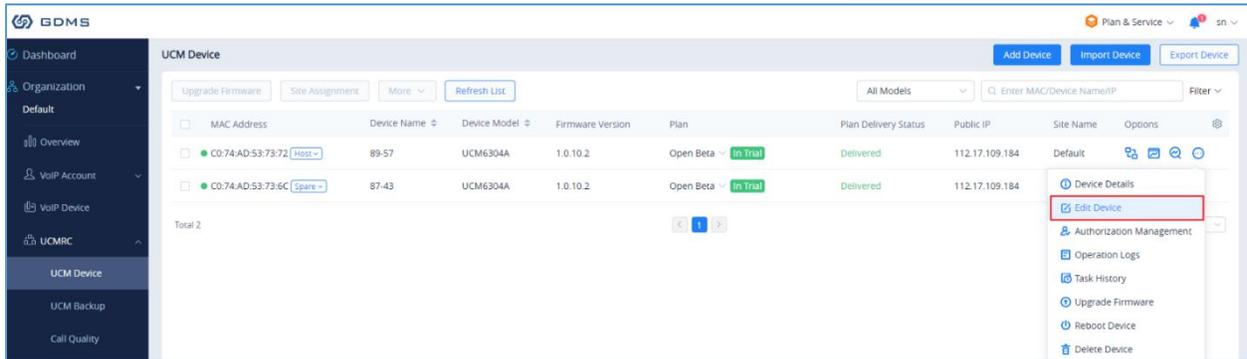


Figure 9: Edit Device

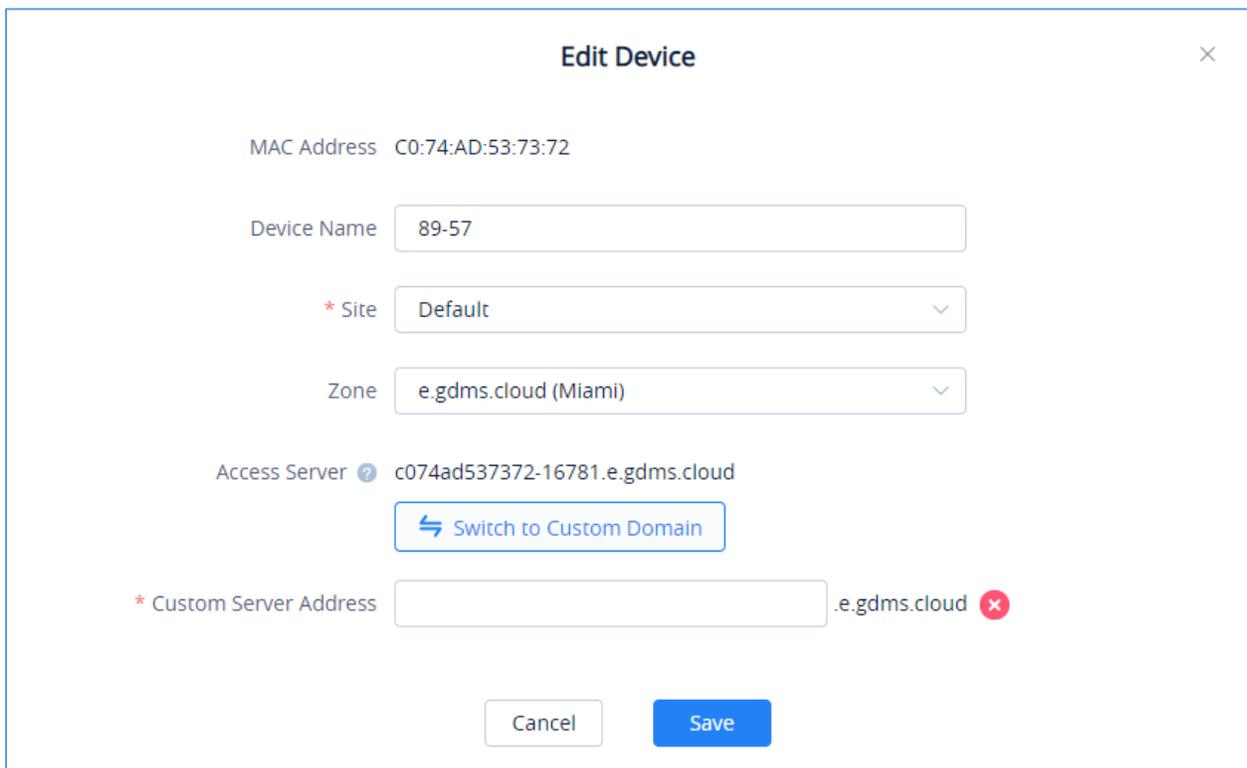


Figure 10: Configure Custom Domain

Click on “Switch to Custom Domain” to edit device custom server access, private secret key and etc. Save the configuration. After changing custom domain name, please notify UCM users the new public address for UCM. For more information about configuring custom domain name on GDMS, please refer to GDMS user manual.



VERIFY HA SETTINGS

1. After configuring HA settings on both UCM, log in the UCM web UI from each UCM's static IP using the active UCM's login information and check HA status. Under HA status page, both UCM should show HA Status as "Dual". One of the UCM should show its role as "Active" and the other one should show "Standby". For "HA Full Backup Status", it will show backup in progress during backup and show as idle during the rest of the time.

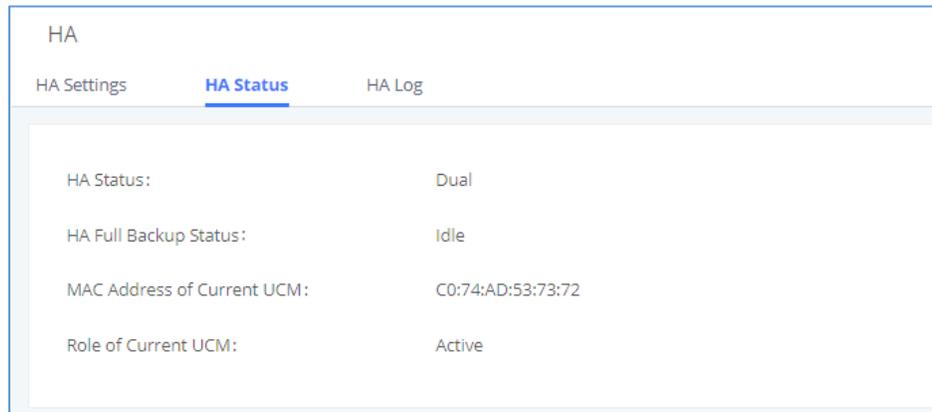


Figure 11: HA Status for Active UCM

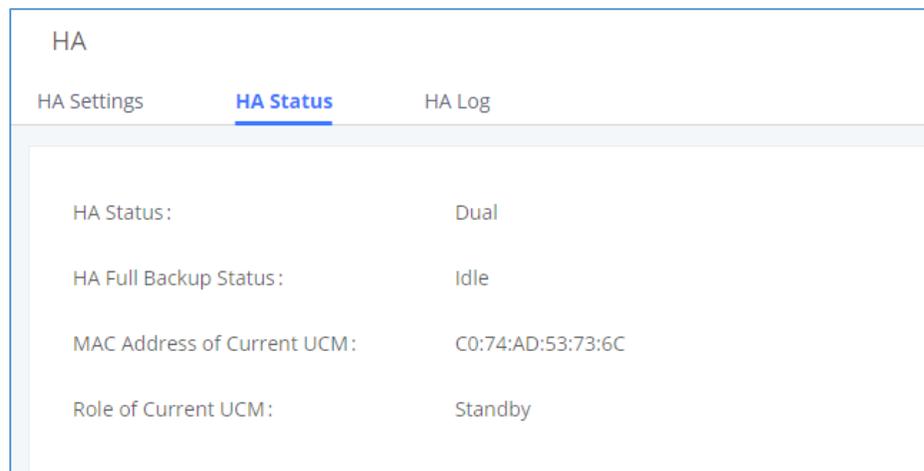


Figure 12: HA Status for Standby UCM

2. Log in the active UCM's web UI and create new SIP extensions. Then log in the standby UCM's web UI to check whether the same extensions created on active UCM are synchronized here. If there are already endpoints registered to UCM, both UCM should show the same extensions and registration status. This indicates that the active UCM's data has been synchronized to the standby UCM.



ACTIVE/STANDBY ROLE IN HA

Automatic Failure Detection

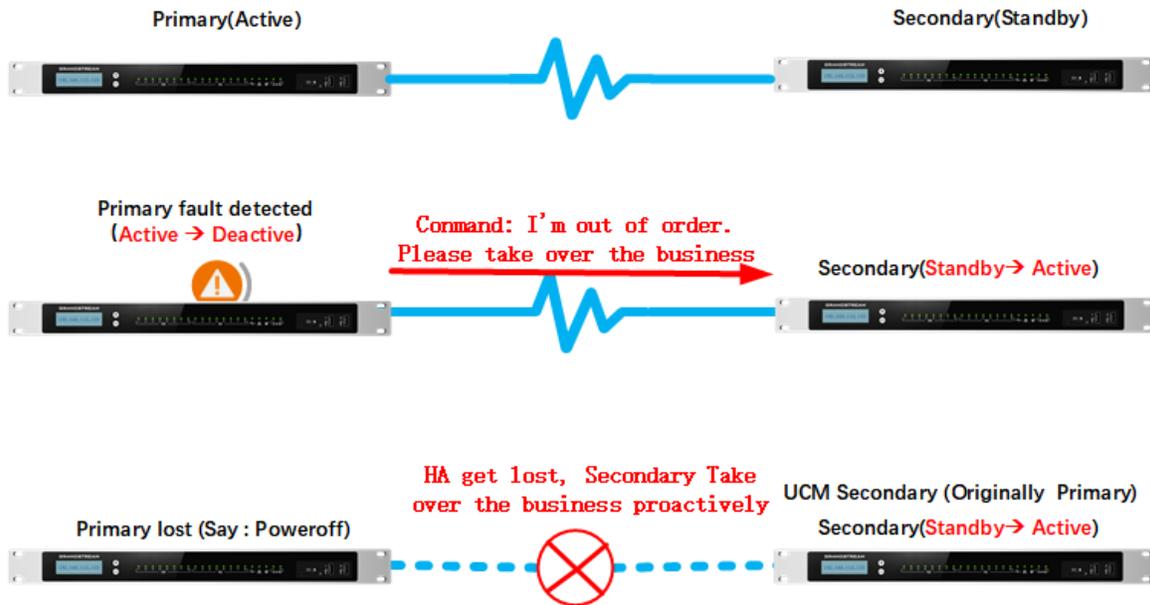


Figure 13: Active and Standby UCM Failover

Active UCM: Self-Failure Detection

The active UCM monitors and regularly checks whether there is any failure on itself. When there is failure detected on itself, it will notify the standby UCM to take over as active server. Then the original active UCM will reboot automatically and become the standby server. This scenario applies to active UCM which has part of the function or specific service in faulty status, and it can still work partially without shutting down the service completely.

For example, if the active server has a core dump generated for a core service, FXO port failure or WAN/LAN port disconnection, with this detection and notification mechanism, the standby UCM can take over immediately without noticeable delay or service interruption.


Standby UCM: Periodic Heartbeat

On HA mode, the standby UCM will check the active UCM's status periodically by sending heartbeat message to the active UCM. The heartbeat message is sent via the heartbeat port. If the active UCM is under normal working condition, it will respond to the standby UCM after it receives heartbeat request from the standby UCM. If the active UCM runs into faulty situation such as network chip becomes abnormal or power adapter no longer works, it will stop responding heartbeat request. After the heartbeat period times out, the standby UCM will consider the active UCM as faulty and start taking over as the active server.

The heartbeat timeout period determines how soon the standby UCM can detect active server's failure and switch over. By default, the heartbeat timeout period is 7 seconds. Users could modify the heartbeat timeout period as preferred, and this will affect the detection/switchover sensitivity.

Force Switch

For the current active UCM, system admin can click on Force Switch "Switch" button on its web UI HA settings page to force triggering the active/standby role change manually. This operation should be only used during firmware upgrade or the active UCM encounters issue that requires force switchover to be triggered manually.

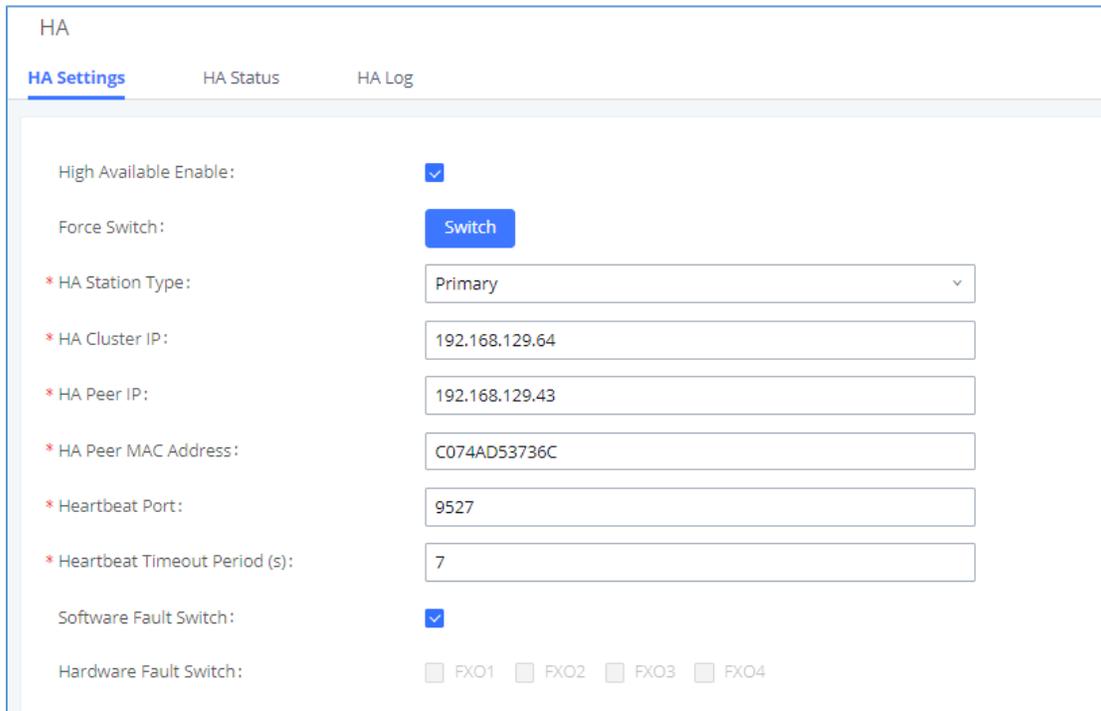

The screenshot shows the 'HA Settings' page in a web UI. At the top, there are three tabs: 'HA Settings' (selected), 'HA Status', and 'HA Log'. Below the tabs, the following settings are visible:

- High Available Enable:
- Force Switch:
- * HA Station Type: Primary (dropdown menu)
- * HA Cluster IP: 192.168.129.64
- * HA Peer IP: 192.168.129.43
- * HA Peer MAC Address: C074AD53736C
- * Heartbeat Port: 9527
- * Heartbeat Timeout Period (s): 7
- Software Fault Switch:
- Hardware Fault Switch: FX01 FX02 FX03 FX04

Figure 14: Force Switch



FIRMWARE UPGRADE

To ensure that there is no service interruption in HA setup, upgrading UCM requires user to follow below steps strictly:

Step 1: Log in the web UI of the standby UCM (A), upload firmware via web UI and the standby UCM will reboot. Wait for it to boot up.

Step 2: After the standby UCM (A) boots up, log in the web UI of the active UCM (B) and check the HA web page. “Force Switch” button on the UCM B’s HA web page will be available. Press it to manually trigger switchover. After switchover, UCM A will become active and UCM B becomes standby.

Step 3: After switchover, log in UCM B and upload firmware to its web UI. UCM B will reboot and request data from UCM A for full backup.

In short, when upgrading UCM in HA setup, the standby UCM needs to be upgraded first and becomes active UCM. Then we can upgrade the standby UCM. This will ensure the active UCM is always working and providing PBX functions, so there is no service interruption during upgrading or switchover.



REPLACING UCM IN HA

HA Setup with UCMRC

Assuming 2 UCM (A and B) with UCMRC plan on GDMS have been set up for HA and UCM B becomes defective which requires replacement, please follow the steps below to replace the defective UCM B with UCM C.

Scenario 1: UCM A's station type is "Primary" and it's the active UCM. UCM B's station type is "Secondary" and it's in standby status.

1. Add UCM C to GDMS first. Then assign UCMRC plan to UCM C. The UCMRC plan can be a new plan for UCM C or transferred from UCM B.
2. Turn off the power for UCM B.
3. Modify UCM A's HA settings by changing HA Peer MAC address from UCM B to UCM C's MAC address. Save and reboot UCM A.
4. After UCM A boots up, log in UCM A web UI and confirm the HA status to be Active. Connect UCM C to the HA setup using appropriate cables for WAN port, heartbeat port, FXO port and etc.
5. After UCM C boots up, log in UCM C web UI and configure network settings to be the same as UCM B. After configuration, UCM C has the same static IP as UCM B.
6. Check whether UCM C has Cloud IM enabled and ensure it's disabled. Cloud IM must be disabled on UCM C before replacing UCM B.
7. Log in UCM C's web UI, enable HA, configure HA station type and other HA settings to be the same as UCM B. Save and reboot UCM C.
8. After UCM C boots up, check and verify the HA status. UCM A should be active and UCM C should be standby.

Scenario 2: UCM A's station type is "Secondary" and it's the active UCM. UCM B's station type is "Primary" and it's in standby status.

1. On GDMS, delete the custom domain name for UCM B.
2. Add UCM C to GDMS and assign UCMRC plan to UCM C. The UCMRC plan can be a new plan for UCM C or transferred from UCM B. On GDMS, configure the custom domain name for UCM C to be the same as the one for UCM B. Please note UCM C must have custom domain name configured on GDMS.
3. Turn off the power for UCM B.



4. Modify UCM A's HA settings by changing HA Peer MAC address from UCM B to UCM C's MAC address. Save and reboot UCM A.
5. After UCM A boots up, log in UCM A web UI and confirm the HA status to be Active. Connect UCM C to the HA setup using appropriate cables for WAN port, heartbeat port, FXO port and etc.
6. After UCM C boots up, log in UCM C web UI and configure network settings to be the same as UCM B. After configuration, UCM C has the same static IP as UCM B.
7. Check whether UCM C has Cloud IM enabled and ensure it's disabled. Cloud IM must be disabled on UCM C before replacing UCM B.
8. Log in UCM C's web UI, enable HA, configure HA station type and other HA settings to be the same as UCM B. Save and reboot UCM C.
9. After UCM C boots up, check and verify the HA status. UCM A should be active and UCM C should be standby.

HA Setup without UCMRC

Assuming 2 UCM (A and B) in HA setup have no UCMRC plan on GDMS, UCM A is in active status and UCM B is in standby status. UCM B becomes defective and requires replacement. Please follow the steps below to replace the defective UCM B with UCM C:

1. Turn off the power for UCM B.
2. Modify UCM A's HA settings by changing HA Peer MAC address from UCM B to UCM C's MAC address. Save and reboot UCM A.
3. After UCM A boots up, log in UCM A web UI and confirm the HA status to be Active. Connect UCM C to the HA setup using appropriate cables for WAN port, heartbeat port, FXO port and etc.
4. After UCM C boots up, log in UCM C web UI and configure network settings to be the same as UCM B. After configuration, UCM C has the same static IP as UCM B.
5. Check whether UCM C has Cloud IM enabled and ensure it's disabled. Cloud IM must be disabled on UCM C before replacing UCM B.
6. Log in UCM C's web UI, enable HA, configure HA station type and other HA settings to be the same as UCM B. Save and reboot UCM C.
7. After UCM C boots up, check and verify the HA status. UCM A should be active and UCM C should be standby.

Note: HA configuration requires the UCM to reboot. Please reboot the UCM during non-service hour to avoid service interruption.



DISABLING HA SETUP

If HA setup is no longer required for the UCM, log in the web UI using the active UCM's IP or the cluster's IP and go to system settings→HA page to disable HA. Save and reboot the UCM. After both UCM boot up, check the HA status and it should show HA as off.



CLOUD IM IN HA SETUP

Please ensure only one UCM in the HA setup has Cloud IM enabled.


After the active UCM A in HA setup enables Cloud IM, the standby UCM B will synchronize up from UCM A and obtain Cloud IM service as well. Cloud IM service is always available on the active UCM, and the associated MAC address will change if active/standby UCM changes. Therefore, failover in HA setup does not affect Cloud IM service.

If a replacement UCM C has no Cloud IM enabled and it's used to swap UCM A or UCM B in the HA setup, after replacement, Cloud IM will still work for the UCM in the HA setup without additional configurations. However, if the replacement UCM C has Cloud IM enabled before swapping, Cloud IM must be turned off on UCM C first. The replacement must be done when there is no previous Cloud IM service on UCM C.



USING UCMRC WITH HA

If the user has purchased UCMRC plan with HA, the GDMS web page can show the UCM with HA status “Host” or “Spare”.

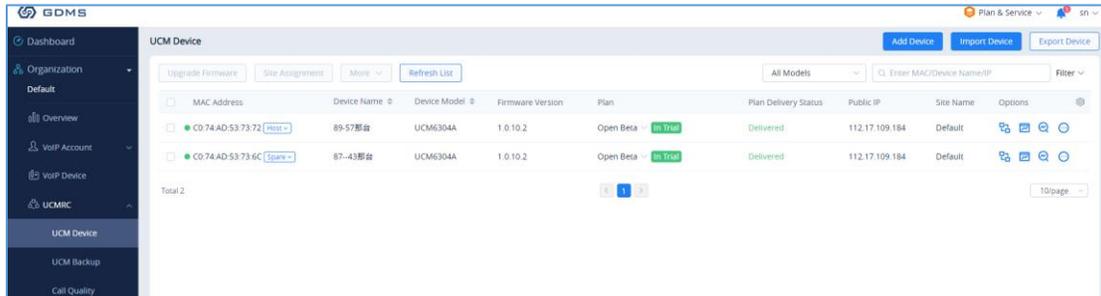

MAC Address	Device Name	Device Model	Firmware Version	Plan	Plan Delivery Status	Public IP	Site Name	Options
C0:74:AD:53:73:72	89-57那台	UCM6304A	1.0.10.2	Open Beta	Delivered	112.17.109.184	Default	[Icons]
C0:74:AD:53:73:6C	87-43那台	UCM6304A	1.0.10.2	Open Beta	Delivered	112.17.109.184	Default	[Icons]

Figure 15: GDMS Display for UCM HA Status

Switching UCMRC Role in HA

Prerequisites:

- Both UCM must have UCMRC plan with HA feature purchased on GDMS.
- UCMRC service has been successfully delivered to both UCM.

Implementations:

- The call service is provided by GDMS and the active UCM.
- When the active UCM A is in faulty condition and has triggered switchover, the standby UCM B will take over and becomes active. UCM B will send switchover command to GDMS and notify GDMS that call service will be provided by UCM B and GDMS afterwards.

Notes:

1. With UCMRC, after the UCM are configured with HA, UCM will notify its HA role to GDMS. System admin does not need to designate HA role for UCM on GDMS.
2. On GDMS, system admin can still remotely access and operate each UCM in HA. However, the configuration on the standby UCM limited because it synchronizes data from the active UCM regularly in HA backup process.
3. The PBX providing service is the active UCM. However, GDMS will always assign the domain name for Remote Connect service based on the primary UCM as configured initially.



SERVICE STATUS

Active/Standby Status

After HA setup is completed, the PBX will provide service using the HA cluster IP. During initial stage, standby UCM will request and synchronize up all data from the active UCM.

The standby UCM monitors and prepares to become active at any time when needed. Manual configuration on standby UCM is restricted because it always synchronizes up data from active UCM. When the active UCM has any hardware or critical software failure, the standby UCM will immediately take over and becomes the active UCM. The previous active UCM will reboot and become the standby UCM. Calls during the role switchover will be recovered after failover process completes.

Web UI Access for UCM

After HA setup is completed, the system admin can use the cluster IP address to log in the current active UCM for configurations. The cluster IP address is always bind to the active UCM. For example, assuming HTTP/HTTPS port is 8089, system admin can access UCM using URL https://cluster_IP:8089.

If the system admin logs in the standby UCM's web UI by using the standby UCM IP and attempts to modify configurations, it will not be allowed. The system will prompt that configuration is restricted on the standby UCM.

Note: HA setup will synchronize up admin login information from the active UCM to the standby UCM. Therefore, when system admin logs in the UCM web UI using the active UCM IP, standby UCM IP or the cluster IP, the active UCM's login information always needs to be used.

Log in Wave

After HA configuration, the login URL for Wave may be changed. Users can log in Wave using the following addresses:

1. Log in via IP.

Since the UCM providing RemoteConnect service can be the primary or secondary UCM, user should always use the cluster IP to log in Wave. For example, https://cluster_IP:8089/gswave#.

2. Log in via domain name.

No matter whether failover happens, users could always use the domain name assigned from GDMS Remote Connect service, which is determined by the initially configured primary UCM.



FAILOVER DURING CALL

When the active server encounters failure, if there is ongoing call on the active server, the switchover process will only cause a few seconds of audio cutoff and then it will be recovered automatically.

Notes:

- Currently, if the call is using UDP as transport method, the call can be recovered after switchover. However, if the call is using TCP as transport method, the call cannot be recovered after switchover.
- Point-to-point calls such as audio call or audio meeting can be recovered after switchover. However, for calls using ring group, call queue and other call features and services, the call will not be automatically recovered.



DATA SYNC

HA setup provides data sync mechanism:

1. After UCM boots up, the standby UCM will send requests for all the data on active UCM and perform data sync. Every time when the active UCM has configuration change, it will also synchronize up the data to the standby UCM automatically and immediately.
2. Data sync is triggered in real-time manner. It not only synchronizes up configuration data, but also extensions, voicemail, CDR, etc.
3. Every day at midnight, a full backup will be performed to ensure active and standby UCM always have the same data on daily basis.




BACKUP AND RESTORE

For backup restore, the admin needs to log in the active UCM and restore the backup file on the active UCM first. UCM devices will reboot automatically. Once the UCM finishes booting up, the standby UCM will start synchronizing up data from the active UCM to restore the backup as well.



MAINTENANCE


In HA setup, system admin can check HA related alerts under UCM web UI's system events page to learn if there is any abnormal event related to HA. According to the alerts, admin can further diagnose by checking the event time and logs with more details.

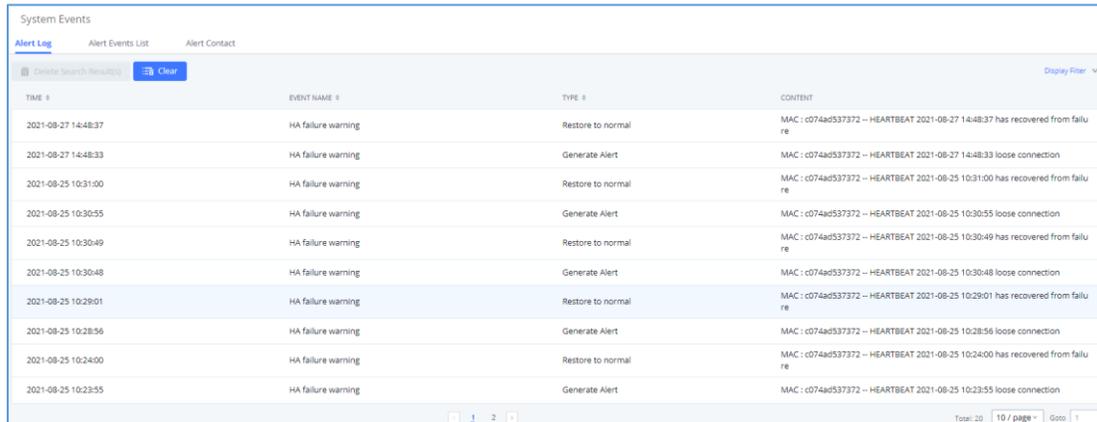

TIME	EVENT NAME	TYPE	CONTENT
2021-08-27 14:48:37	HA failure warning	Restore to normal	MAC : c074ad537372 -- HEARTBEAT 2021-08-27 14:48:37 has recovered from failure
2021-08-27 14:48:33	HA failure warning	Generate Alert	MAC : c074ad537372 -- HEARTBEAT 2021-08-27 14:48:33 loose connection
2021-08-25 10:31:00	HA failure warning	Restore to normal	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:31:00 has recovered from failure
2021-08-25 10:30:55	HA failure warning	Generate Alert	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:30:55 loose connection
2021-08-25 10:30:49	HA failure warning	Restore to normal	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:30:49 has recovered from failure
2021-08-25 10:30:48	HA failure warning	Generate Alert	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:30:48 loose connection
2021-08-25 10:29:01	HA failure warning	Restore to normal	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:29:01 has recovered from failure
2021-08-25 10:28:56	HA failure warning	Generate Alert	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:28:56 loose connection
2021-08-25 10:24:00	HA failure warning	Restore to normal	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:24:00 has recovered from failure
2021-08-25 10:23:55	HA failure warning	Generate Alert	MAC : c074ad537372 -- HEARTBEAT 2021-08-25 10:23:55 loose connection

Figure 16: System Alert Events

HA log also shows all HA backup and failover logs.

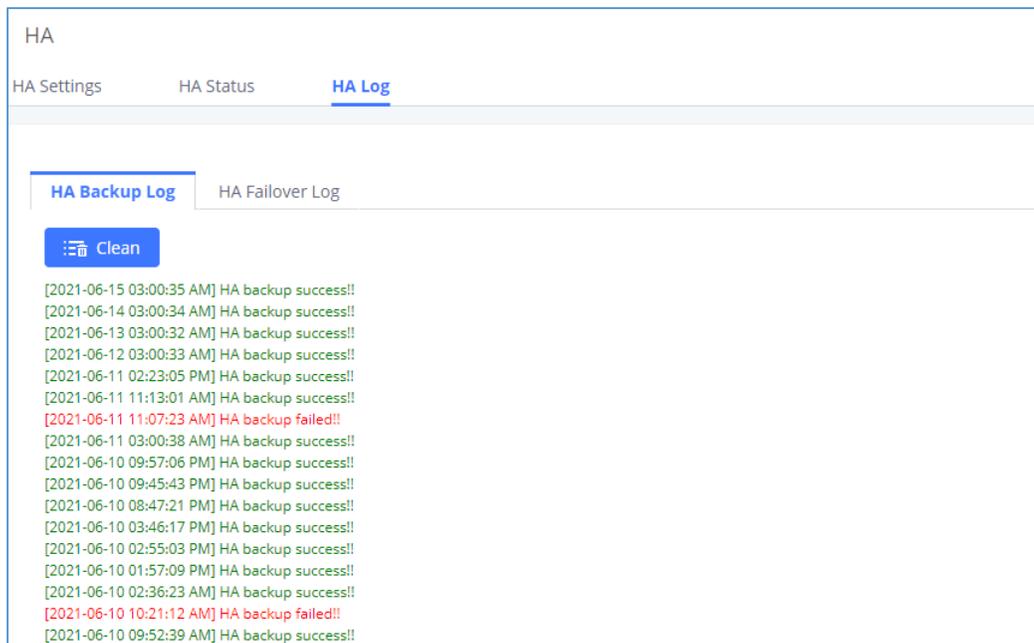

HA Backup Log	HA Failover Log
<p>Clean</p> <p>[2021-06-15 03:00:35 AM] HA backup success!! [2021-06-14 03:00:34 AM] HA backup success!! [2021-06-13 03:00:32 AM] HA backup success!! [2021-06-12 03:00:33 AM] HA backup success!! [2021-06-11 02:23:05 PM] HA backup success!! [2021-06-11 11:13:01 AM] HA backup success!! [2021-06-11 11:07:23 AM] HA backup failed!! [2021-06-11 03:00:38 AM] HA backup success!! [2021-06-10 09:57:06 PM] HA backup success!! [2021-06-10 09:45:43 PM] HA backup success!! [2021-06-10 08:47:21 PM] HA backup success!! [2021-06-10 03:46:17 PM] HA backup success!! [2021-06-10 02:55:03 PM] HA backup success!! [2021-06-10 01:57:09 PM] HA backup success!! [2021-06-10 02:36:23 AM] HA backup success!! [2021-06-10 10:21:12 AM] HA backup failed!! [2021-06-10 09:52:39 AM] HA backup success!!</p>	

Figure 17: HA Logs

