

Grandstream Networks, Inc.

GDS3710

Hemispheric HD IP Video Door System

User Manual



COPYRIGHT

©2022 Grandstream Networks, Inc. <https://www.grandstream.com>

All rights reserved. Information in this document is subject to change without notice. Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.

The latest electronic version of this user manual is available for download here:

<https://www.grandstream.com/support>

Grandstream is a registered trademark and Grandstream logo is trademark of Grandstream Networks, Inc. in the United States, Europe and other countries.

CAUTION

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.

WARNING

Please do not use a different power adaptor with your devices as it may cause damage to the products and void the manufacturer warranty.



FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) The device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



CE Declaration of Conformity

This transmitter complies with the essential requirements and provisions of directives 2014/53/EU, 2014/30/EU, 2015/35/EU and subsequent amendments, according to standards

ETSI EN 300 330 V2.1.1 (2017-02);

ETSI EN 301 489-1 V2.1.1 (2017-02); ETSI EN 301 489-3 V2.1.1 (2017-03);

EN 60950-1: 2006+A11:2009+A1:2010+A12:2011+A2:2013: EN 62311: 2008



Manufacturer:

Grandstream Networks, Inc.

126 Brookline Ave, 3rd Floor Boston, MA 02215, USA

Channel Frequency: 125 KHz

Channel Number: 1

Antenna Type / Gain: Internal

Type of Modulation: ASK

Operation temperature: -30 °C ~ +60 °C

Storage temperature: -35 °C ~ +60 °C

Humidity: 10 ~ 90% non-condensing



GNU GPL INFORMATION

GDS3710 firmware contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Grandstream GNU GPL related source code can be downloaded from Grandstream web site from:

<https://www.grandstream.com/support/faq/gnu-general-public-license/gnu-gpl-information-download>



Table of Contents

DOCUMENT PURPOSE	16
CHANGE LOG	17
Firmware Version 1.0.11.13	17
Firmware Version 1.0.9.9	17
Firmware Version 1.0.9.6	17
Firmware Version 1.0.7.26	17
Firmware Version 1.0.7.24	17
Firmware Version 1.0.7.23	17
Firmware Version 1.0.7.19	18
Firmware Version 1.0.7.14	18
Firmware Version 1.0.7.11	18
Firmware Version 1.0.7.10	18
Firmware Version 1.0.7.8	18
Firmware Version 1.0.7.7	18
Firmware Version 1.0.7.4	19
Firmware Version 1.0.5.6	19
Firmware Version 1.0.5.2	19
Firmware Version 1.0.4.9	20
Firmware Version 1.0.3.35	20
Firmware Version 1.0.3.34	20
Firmware Version 1.0.3.32	20
Firmware Version 1.0.3.31	21
Firmware Version 1.0.3.23	21
Firmware Version 1.0.3.13	21
Firmware Version 1.0.2.25	21
Firmware Version 1.0.2.22	22
Firmware Version 1.0.2.21	22



Firmware Version 1.0.2.13.....	22
Firmware Version 1.0.2.9.....	22
Firmware Version 1.0.2.5.....	23
Firmware Version 1.0.1.19.....	23
WELCOME	24
PRODUCT OVERVIEW	25
Feature Highlights.....	25
Technical Specifications.....	25
GETTING STARTED.....	28
Equipment Packaging.....	28
Description of the GDS3710.....	29
Connecting and Setting up the GDS3710.....	29
GDS3710 Wiring Connection.....	30
GDS3710 Back Cover Connections.....	31
Connection Example.....	31
<i>Power the unit using PoE</i>	32
<i>Power the unit using PSU</i>	32
GETTING TO KNOW GDS3710	34
Connecting GDS3710 to Network with DHCP Server.....	34
<i>Windows Platform</i>	34
UPnP.....	34
GS Search.....	35
GDS Manager Utility Tool.....	36
<i>Apple Platform</i>	37
Connect to the GDS3710 using Static IP.....	39
GDS3710 APPLICATION SCENARIOS	41
Peering Mode without SIP Server.....	41
Peering using SIP Server (UCM6XXX).....	41



Using a Network Video Recorder (NVR)	42
GDS3710 PERIPHERAL CONNECTIONS	44
Alarm IN/OUT	45
Protection Diode	45
Connection Examples	46
<i>Wiring Sample using 3rd Party Power Supply</i>	<i>47</i>
<i>Wiring Sample using Power Supply for both GDS3710 and Electric Strike</i>	<i>47</i>
<i>Wiring Sample using PoE to power GDS3710 and 3rd Party Power Supply for Electric Strike</i>	<i>48</i>
<i>Good Wiring Sample for Electric Strike and High-Power Device</i>	<i>49</i>
Wiegand Module Wiring Examples	49
<i>Input example with 3rd party power supply for Wiegand device</i>	<i>49</i>
<i>Input example with power supply for both GDS3710 and Wiegand device</i>	<i>50</i>
<i>Output example with 3rd party power supply for Wiegand device</i>	<i>50</i>
<i>Wiegand RFID Card Reader Example</i>	<i>51</i>
Siren alarming when door opened abnormally	51
<i>GDS3710 Connection: IN2 set as Normal Close and “Fail Safe” Electric Strike using 3rd Party Power Supply.....</i>	<i>52</i>
<i>GDS3710 Connection: IN2 set as Normal Open and “Fail Secure” Electric Strike using 3rd Party Power Supply.....</i>	<i>52</i>
<i>GDS3710 Connection: IN2 set as Normal Open and “Fail Secure” Electric Strike using 3rd Party Power Supply with Door sensor</i>	<i>53</i>
GSC3570 Secure Open Door via GDS37XX/GSC3570 Peering	54
One-Way Interlocking Mode	56
Open Door via GDS37xx with or without a SIP Call	60
GDS3710 HOME WEB PAGE.....	62
GDS3710 Configuration & Language Page.....	63
GDS3710 SETTINGS.....	65
Live View Page	65
<i>Live Snapshot</i>	<i>65</i>
<i>MJPEG Stream</i>	<i>68</i>



Door System Settings	71
<i>Basic Settings</i>	72
<i>Using Alarm Out (COM 1) to Control a Second Door</i>	79
<i>Keep Door Open</i>	83
<i>Emergency PIN</i>	86
<i>Card Management</i>	87
<i>Add Users Manually</i>	87
<i>Add Users Automatically</i>	89
<i>Users Operation</i>	89
<i>Show private PIN</i>	89
<i>Group</i>	90
<i>Schedule</i>	91
<i>Holiday</i>	92
System Settings	93
<i>Date & Time Settings</i>	93
<i>Network Settings</i>	94
<i>OpenVPN® Settings</i>	95
<i>Access Settings</i>	96
<i>User Management</i>	100
Account	101
<i>Account 1 - 4</i>	101
Phone Settings	105
<i>Phone Settings</i>	105
<i>Account [1-4] White List</i>	107
<i>Click-To-Dial</i>	108
Video & Audio Settings	109
<i>Video Settings</i>	110
<i>OSD Settings</i>	112
<i>CMOS Settings</i>	113
<i>Audio Settings</i>	113
<i>Privacy Masks</i>	114



Alarm Settings.....	115
<i>Alarm Events Config</i>	115
<i>Motion Detection</i>	116
<i>Digital Input</i>	118
<i>Enable Silent Alarm Mode</i>	119
<i>Hostage Code</i>	119
<i>Tamper Alarm</i>	120
<i>Keypad Input Error Alarm</i>	120
<i>Non-Scheduled Access Alarm</i>	120
<i>Alarm Action When Illegal Card Swiped</i>	121
<i>Alarm Action Settings</i>	121
<i>Alarm Phone List</i>	123
Email & FTP Settings.....	124
<i>Email Settings</i>	124
<i>FTP & Center Storage</i>	125
Maintenance Settings.....	127
<i>Upgrade</i>	127
<i>Reboot & Reset</i>	130
<i>Debug Log</i>	130
<i>Data Maintenance</i>	131
<i>System Health Alert</i>	132
<i>Event Notification</i>	133
<i>Event Log</i>	135
<i>Certificates</i>	136
Status.....	137
<i>Account Status</i>	138
<i>System Info</i>	138
<i>Network Info</i>	140
CONNECTING GDS3710 WITH GXV32XX.....	142
CONNECTING GS WAVE WITH GDS3710 DOOR SYSTEM.....	143
GDS3710 HTTP API.....	144



FACTORY RESET	145
Restore to Factory Default via Web GUI	145
Hard Factory Reset.....	145
Restore to Factory Default Via SIP NOTIFY.....	147
Restore factory password via special key combination	148
EXPERIENCING THE GDS3710	150

Table of Tables

Table 1: GDS3710 Features in a Glance	25
Table 2: GDS3710 Technical Specifications	25
Table 3: Equipment Packaging	28
Table 4: GDS3710 Wiring Connection	30
Table 5: Home Page Description	62
Table 6: Door System Settings.....	73
Table 7: Immediate Open-Door Table	84
Table 8: Schedule Keep Door Open	85
Table 9: Card Info	88
Table 10: Add Group	91
Table 11: Date & Time	93
Table 12: Basic Settings.....	94
Table 13: Access Settings	97
Table 14: User Management.....	100
Table 15: SIP Account Basic & Advanced Settings.....	102
Table 16: Phone Settings	106
Table 17: White List.....	108
Table 18: Video Settings	110
Table 19: OSD Settings.....	112
Table 20: CMOS Settings.....	113
Table 21: Audio Settings.....	114
Table 22: Motion Detection.....	117
Table 23: Digital Input.....	118
Table 24: Silently Alarm Mode.....	119
Table 25: Hostage Code Alarm	119
Table 26: Tamper Alarm	120
Table 27: Keypad Input Error Alarm	120
Table 28 : Non-Scheduled Access Alarm	120
Table 29: Alarm action when illegal card swiped.....	121
Table 30: Alarm Actions.....	122



Table 31: Alarm Phone List	123
Table 32: Email Settings - SMTP	124
Table 33: Picture Storage Settings.....	125
Table 34: FTP Filenames	126
Table 35: Upgrade.....	128
Table 36: Reset & Reboot	130
Table 37 : Log Manager Settings	134
Table 38: System Info.....	139
Table 39: Network Info	140

Table of Figures

Figure 1: GDS3710 Package	28
Figure 2: GDS3710 Front View	29
Figure 3: GDS3710 Back View	29
Figure 4: GDS3710 Back Cover Connections	31
Figure 5: GDS3710 Back Cover	32
Figure 6: Connection Example.....	32
Figure 7: Powering the GDS3710	33
Figure 8: Detecting GDS3710 via UPnP	34
Figure 9: GDS3710 Login Page	35
Figure 10: GS Search Discovery	36
Figure 11: GDS3710 Detection	37
Figure 12: Apple Safari Settings Page	38
Figure 13: Bonjour Setting Page	38
Figure 14: Static IP on Windows	40
Figure 15: Peering GDS3710 with UCM6XXX.....	42
Figure 16: Peering GDS3710 with GVR3550	43
Figure 17: Peripheral Connections for GDS3710	44
Figure 18: Alarm_In/Out Circuit for GDS3710.....	45
Figure 19: Protection Diode - Example 1	46
Figure 20: Protection Diode - Example 2.....	46
Figure 21: 3 rd party Power Supply Wiring Sample	47
Figure 22: Power Supply used for both GDS3710 and Electric Strike	47
Figure 23: Wiring Sample using PoE to power GDS3710 and 3 rd party Power Supply for Electric Strike .	48
Figure 24: Example to Avoid when Powering the Electric Strike	48
Figure 25: Electric Strike and High-Power Device Example	49
Figure 26: Wiegand Input Example with 3 rd party Power Supply.....	49
Figure 27: Wiegand Input Example with Power Supply for GDS3710 and Wiegand Device	50
Figure 28: Wiegand Output Wiring Example.....	50
Figure 29: Wiegand RFID Card Reader Example	51
Figure 30: Digital Input set as Normal close	52



Figure 31: “Fail safe” Electric Strike using 3rd Party Power Supply	52
Figure 32: Digital Input set as Normal open.....	52
Figure 33: “Fail Secure” Electric Strike using 3rd Party Power Supply	53
Figure 34: “Fail Secure” Electric Strike using 3rd Party Power Supply with Door Sensor	53
Figure 35: GSC3570 secure open door via GDS3710	54
Figure 36: GSC3570 secure open door via GDS3710-GDS3710 configuration.....	55
Figure 37: GSC3570 secure open door via GDS3710-GSC3570 Door System System configuration.....	55
Figure 38: GSC3570 secure open door via GDS3710-GSC3570 Digital Input configuration	55
Figure 39: One-Way Interlocking Mode Diagram Example.....	57
Figure 40: One-Way Interlocking Mode_GDS3710_Configuration_1	57
Figure 41: One-Way Interlocking Mode_GDS3710_Configuration_2.....	58
Figure 42: GDS37XX Configuration Example.....	60
Figure 43: GSC3570 Configuration Example.....	60
Figure 44: Open Door with SIP Call.....	61
Figure 45: Open Door without SIP Call.....	61
Figure 46: Open Door without SIP Call.....	61
Figure 47: Home Page: Internet Explorer 11	62
Figure 48: Switch Language Page	64
Figure 49: Live View Page: Google Chrome.....	65
Figure 50: MJPEG Authentication Mode.....	66
Figure 51 : Snapshot admin credential	66
Figure 52 : Snapshot view using secured MJPEG authentication Mode	67
Figure 53: Snapshot view using Basic Authentication Mode	68
Figure 54: MJPEG Authentication Mode.....	68
Figure 55 : MJPEG view admin credential.....	69
Figure 56 : MJPEG live view using secured MJPEG Authentication Mode	70
Figure 57: MJPEG view using Basic MJPEG Authentication Mode.....	71
Figure 58: Door System Settings Page.....	72
Figure 59: Alarm_Out1 Feature	80
Figure 60: Universal Local PIN	81
Figure 61: Remote PIN to Open Door.....	82
Figure 62: Right of Card and Private PIN	83
Figure 63: Immediate Open Door	84
Figure 64: Schedule Open Door	85
Figure 65: Edit Schedule.....	86
Figure 66: Keep Door Open – Emergency PIN.....	86
Figure 67: Card Management	87
Figure 68: Card Info	88
Figure 69: Hidden Private PIN	90
Figure 70: Visible Private PIN	90
Figure 71: PIN/Password display and HTTPS enabled.....	90
Figure 72: Add Group.....	91



Figure 73: Groups List.....	91
Figure 74: Edit Schedule Time	92
Figure 75: Edit Holiday Time	92
Figure 76: Date & Time Page.....	93
Figure 77: Basic Settings Page.....	94
Figure 78: OpenVPN Settings page.....	95
Figure 79: Access Settings Page	97
Figure 80: User Management Page	100
Figure 81: Password Recovery Email.....	101
Figure 82: SIP Account Settings Page	101
Figure 83: Phone Settings Page	105
Figure 84: White List Page.....	108
Figure 85 : Click-To-Dial.....	109
Figure 86: Video Settings Page	110
Figure 87: OSD Settings Page.....	112
Figure 88: CMOS Settings Page.....	113
Figure 89: Audio Settings Page	114
Figure 90: Privacy Masks Configuration Page.....	115
Figure 91: Events Page.....	116
Figure 92: Region Config	117
Figure 93: Digital Input.....	118
Figure 94: Alarm Schedule.....	120
Figure 95: Edit Schedule.....	121
Figure 96: Alarm Action	122
Figure 97: Edit Alarm Action.....	122
Figure 98: Alarm Phone List.....	123
Figure 99: Email Settings - SMTP Page	124
Figure 100: Picture Storage Settings	126
Figure 101 : FTP filenames.....	127
Figure 102: Upgrade Page.....	128
Figure 103: Reset & Reboot Page	130
Figure 104: Debug Log Page	131
Figure 105: Data Maintenance Page	132
Figure 106: System Health Alert Page.....	132
Figure 107: Log Manager Page	134
Figure 108: Event Logs	136
Figure 109 : Log NON-Scheduled Access Alarm in Event Log.....	136
Figure 110: Upload Certificate files	137
Figure 111: System Info Page	138
Figure 112: System Info Page.....	139
Figure 113: Network Info Page.....	140
Figure 114: Reset via Web GUI	145



Figure 115: Wiegand Interface Cable	146
Figure 116: Wiegand Cable Connection	146
Table 117: Encoding rule	148



DOCUMENT PURPOSE

This document describes the basic concept and tasks necessary to use and configure your GDS3710. And it covers the topic of connecting and configuring the GDS3710, making basic operations and the call features. Please visit <http://www.grandstream.com/support> to download the latest “GDS3710 User Manual”.

This guide covers following topics:

- [Product Overview](#)
- [Getting Started](#)
- [Getting to Know GDS3710](#)
- [GDS3710 Application Scenarios](#)
- [GDS3710 Peripheral Connections](#)
- [GDS3710 Home Web Page](#)
- [GDS3710 Settings](#)
- [Connecting GDS3710 with GXV32XX](#)
- [Connecting GS Wave with GDS3710 Door System](#)
- [GDS3710 HTTP API](#)
- [Factory Reset](#)
- [Experiencing the GDS3710](#)



CHANGE LOG

This section documents significant changes from previous versions of user manual for GDS3710. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Firmware Version 1.0.11.13

- Updated non-scheduled access alarm event log. [Event Log]

Firmware Version 1.0.9.9

- Added Web UI option “SIP URI scheme When using TLS” and “Support SIP Instance ID” [SIP]
- Increased OSD text length to 32 [OSD]

Firmware Version 1.0.9.6

- Allow using “PIN#” format for Unified PIN when "Disable Keypad SIP Number Dialing" [Unified PIN]
- Added support for Secondary SIP Server. [Table 15: SIP Account Basic & Advanced Settings]

Firmware Version 1.0.7.26

- Added support for Basic Authentication of HTTP API Remote Open Door. [Basic Settings]

Firmware Version 1.0.7.24

- Added MAC in User-Agent configuration. [Account 1 - 4]
- Added ‘unauthorized card swiped on Wiegand reader’ alert message in event Log [Event Log]
- Added prompt to prevent empty alarm action profile name. [Alarm Action Settings]
- Added more template variables in Event Notification. [Event Notification]
- Improved private PIN management under the Card Management Web UI. [Show private PIN]
- Added option to choose HTTP method to either POST or GET in Event Notification. [Event Notification]

Firmware Version 1.0.7.23

- Added support for Key Sensitivity Options. [Key Sensitivity Level]
- Added support for Scheduled Auto Reboot. [Auto Reboot]
- Increased whitelist up to 200 per Account. [Account [1-4] White List]
- Added support for One-Way Interlocking Mode. [One-Way Interlocking Mode]
- Added support for door opening with and without call when paired with GSC3570. [Open Door via GDS37xx with or without a SIP Call]



Firmware Version 1.0.7.19

- Added Alarm Action triggering when illegal card swiped. [Alarm Action When Illegal Card Swiped]
- Added Card Number limitation with maximum number to be 2147483647. [Card Number]
- Added Secure Open Door with GDS37xx/GSC3570 setup. [GSC3570 Secure Open Door via GDS37XX/GSC3570 Peering]
- Added Web Relay ON/OFF URL configuration field for some 3rd party Web Relay Door Controlling. [Door Relay Options]
- Set “RTSP password” and “GDSManager Configuration Password” initial value to be GDS37xx default random password. [RTSP Password][GDSManager Configuration Password]
- Added Newfoundland/Canada time zone. [Time Zone]

Firmware Version 1.0.7.14

- Added OpenVPN® support [OpenVPN® Settings]
- Added displaying “Unauthorized door opening attempt” in the Event Log when illegal card used [Event Log]
- Added WebRelay Open Door Feature [Door Relay Options]
- Added reboot/resync via SIP Notify [Disable SIP NOTIFY Authentication]
- Added option to enable PIN/Password display [Enable PIN/Password Display (HTTPS)]
- Added support for “UserName” in HTTP Event Notification [Event Notification]

Firmware Version 1.0.7.11

- Revised SIP Account Name to Display Name [SIP Basic Settings]
- Added support for Cisco QuoVadis/HydrantID CA [Certificates]

Firmware Version 1.0.7.10

- Increased maximum unlock holding time to 1800 seconds (30 minutes). [Basic Settings]
- Added support for anonymous MJPEG stream viewing for each of the three streams. [Enable Anonymous LiveView]

Firmware Version 1.0.7.8

- Enhanced the failover mechanism based on DNS SRV. [DNS Mode]
- Include Holidays on Keep Door Open Schedule for Door 2. [Holiday Mode]

Firmware Version 1.0.7.7

- Added siren alarming function when door opened abnormally. [Connection Examples]
- Added option to only accept incoming SIP call from Proxy/Server. [Accept Incoming SIP from Proxy Only]



- Added support for including Holidays at Keep Door Open schedule. [Keep Door Open]
Added reset/restore factory default password via special keypad combination operations.
[FACTORY RESET]

Firmware Version 1.0.7.4

- Added ability to separate webUI credentials from the GDSManager credentials. [GDSManager Configuration Password]
- Added G.729 audio codec support. [Technical Specifications] [Preferred Vocoder]
- Added ability to enable multiple audio codecs simultaneously and specify priority of codecs. [Preferred Vocoder]
- Added “Schedule” for firmware upgrade and provisioning. [Upgrade]
- Added support for randomize firmware upgrade and provisioning. [Upgrade]
- Added support for Voice Frame per TX in the audio settings. [Voice Frame Per TX]
- Added option to keep keypad blue light ON/OFF based on schedule. [Door System Settings]
- Added support for DHCP Option 120. [Enable DHCP Option 120 Override SIP Server]
- Added support for reregister before expiration option. [Re-register before Expiration (s)]
- Added support for anonymous RTSP Live View. [Enable Anonymous LiveView]
- Added support for DHCP Option 42. [Allow DHCP Option 42 to override NTP server]

Firmware Version 1.0.5.6

- Added support for 4 SIP accounts. [Account]
- Added option to configure DTMF Payload value. [DTMF Payload Type]
- Added option to disable outbound proxy route header. [Outbound Proxy Mode]
- Added support for Packetization Mode 0. [SIP Packetization Compatibility Mode]
- Added support for “Normal Open” or “Normal Close” setting when Alarm Out1 is set to Open Door. [ALMOUT1 Status]
- Added support for System Health Alerts via Email. [System Health Alert]
- Added option to upload custom doorbell ringtone. [Enable Custom Doorbell Ringtone]
- Added option to set Schedule for “Local PIN to Open Door”. [Local PIN to Open Door Schedule]
- Added support for CSV format when Importing/Exporting Card user data. [Card Management]
- Added support for Anonymous Snapshot. [Enable Anonymous LiveView]
- Enhanced security by only allowing numbers existing under “White List” to open the door remotely when call is initiated from GDS3710. [Remote PIN to Open the Door]
- Added Boot version information into System status. [Boot Version]

Firmware Version 1.0.5.2

- Added Alarm_Out port (COM1 interface) be used as Open Door 2. [Using Alarm Out (COM 1) to Control a Second Door]
- Added option to Enable/Disable WebUI access. [Disable Web Access]



- Added option to define number of snapshots to be uploaded when opening door. [Number of Snapshots when Door Opened]
- Added option to specify digital input to be normal Open or normal Close. [Input Digit 1 Status]
- Added ability to set schedule for Alarm In door opening. [Select Alarm Schedule]
- Added support for using Digit Only as Private PIN. [Local PIN Type]
- Added option to configure “No Key Entry Timeout”. [No Key Input Timeout]
- Added ability to email snapshot when door opened. [Snapshot when Door Opened]
- Added option to allow anonymous viewing. [Enable Anonymous LiveView]
- Added option to configure payload type for H.264. [H.264 Payload Type]
- Extended VLAN tag range from 0 to 4094. [Layer 2 QoS 802.1Q/VLAN Tag]
- Added option to use Emergency PIN to overwrite “Keep Door Open” schedule and lockdown. [Emergency PIN]
- Added ability to configure device with custom certificate signed by custom CA certificate. [Certificates]
- Added support for special character “@” in the SIP User ID. [SIP User ID]
- Added SIP NOTIFY to factory reset the GDS3710. [Allow Reset Via SIP NOTIFY] [Restore to Factory Default Via SIP NOTIFY]
- Added event log showing the users (Username) opening door via private PIN. [Event Log]

Firmware Version 1.0.4.9

- Added support for Parallel Hunting when doorbell pressed [Door Bell Call Mode]
- Enhanced HTTP Event Notification details: Added “CARDID” and “SIPNUM” [URL Template]
- Add support for TLSv1.2

Firmware Version 1.0.3.35

- Added option to assign a schedule to the doorbell. [Press Doorbell Schedule]
- Added option to set the maximum number of digits dialed. [Maximum Number of Dialed Digits]

Firmware Version 1.0.3.34

- Added support for video live view on Chrome/Firefox with no Plugin required. [Live View Page]
- Added option to send Snapshot via Email when doorbell pressed. [Snapshot when Doorbell Pressed]
- Added RTCP/RTCP-XR for SIP Call to meet Cloud Solution Service Provider. [Enable RTCP]
- Added alarm notification of non-scheduled access users. [Non-Scheduled Access Alarm]
- Added Keep Door Open section. [Keep Door Open]
- Added MJPEG Authentication Mode. [JPEG Authentication Mode] [Live View Page]

Firmware Version 1.0.3.32

- Added LED lighting indication pattern for firmware upgrade process. [Upgrade]



- Increased the maximum allowed whitelist numbers to 30 records with 20-digit length for each number [Account [1-4] White List]
- Added Support for HTTP command to Open Door. [Enable HTTP API Remote Open Door]
- Added display device logs at GDS web UI. [Event Log]
- Added valid start/end dates for Card Management. [Card Management]
- Added “Test” button for Alarm Action. [Alarm Action]
- Added “Alarm IN/OUT Status” display at GDS “Status” page UI.
- [Added Self-defined Even Notification Message. [Event Notification]

Firmware Version 1.0.3.31

- Added ability to upload Trusted CA certificate files. [Certificates]
- Added support for multi-channel call mode. [Enable Multi-channel Call Mode]
- Added option to enable/disable certificate validation. [Certificates]

Firmware Version 1.0.3.23

- Added Standard Mode and Broadsoft Mode in SIP Settings, Broadsoft Supported. [Special Feature]
- Added card ID number and phone number reported in event log message. [Event Notification]
- Added “Click-to-Dial” feature support. [Click-To-Dial]

Firmware Version 1.0.3.13

- Added option to disable alarm sound at phone side when event trigger SIP call to the phone. [Enable two-way SIP Calling]
- Increased maximum characters to 256 in “Number called when doorbell pressed” to allow serial hunting of SIP extensions or IP address with port or mixing of both, with each ring several seconds before going next. [Number Called When Door Bell Pressed]
- Added feature to capture snapshot when doorbell pressed. [Snapshot when Doorbell Pressed]
- Added feature to disable keypad input (lock keypad) and ONLY doorbell button can be pressed. [Disable Keypad (except the Doorbell Button)]
- Added option to disconnect call automatically after door open event. [Enable On Hook After Remote Door Opened]
- Issuing Mode automatically. [Card issuing State Expire Time(m)]
- Added ability for whitelist entries to open door using remote PIN. [Account [1-4] White List]

Firmware Version 1.0.2.25

- Added if schedule disabled, GDS3710 will bypass the option to open door. [Group overrides Schedule]
- Implemented the HTTP Upload (RFID card) Log Event support for 3rd party Software Integration. [Event Notification]



Firmware Version 1.0.2.22

- No major changes.

Firmware Version 1.0.2.21

- Allow config and call IP address format on SIP field when dialing the Virtual Number. [SIP Number]
- Added “Silent Alarm” Mode. [Enable Silent Alarm Mode]
- Added option Backup/Restore including all passwords like SIP/FTP/Remote Access, etc. [Data Maintenance]
- Added schedule support for Card and PIN. [Schedule]
- Added LLDP support. [Enable LLDP]
- Added database automatic backup and synchronization.
- Modified WebGUI style.
- Added card information batch delete option in the WebGUI. [Users Operation]
- Added option to enable “Motion Detection”, “Tamper Alarm” and backlight partially light. [Tamper Alarm] [Motion Detection] [Enable Background Light]
- Added card user limitation up to 2000 and group limit to 50. [Card Management]
- Added Card and PIN schedule configuration Central Mode. [Central Mode]
- Added LDC Ratio Control and Adjustment. [LDC Ratio]
- Expanded the range of Ring timeout. [Ring Timeout]
- Added option to disable Auto Answer. [Auto Answer]
- Updated the “DingDong” tone when doorbell pressed.
- Added function to check the default value.
- Added Factory Reset via special procedures. [Hard Factory Reset]
- Added file upload and download (card information, configuration etc.) can be executed after authentication. [Card Management]

Firmware Version 1.0.2.13

- Added support of ONVIF Profile S.
- Added “Privacy Mask” support in Motion Detection Setting. [Privacy Masks]
- Updated OCX plugin engine to Version 3.1.0.74
- Added DTMF Open Door control option in WebGUI [Enable DTMF Open Door]
- Added HTTP API support [GDS3710 HTTP API].
- Optimized HTTP API for Card Management.
- Added “Enable Blue Doorbell Light” option in the webGUI. [Door System Settings]
- Added switch on the doorbell blue light by configured time period of the day. [Door System Settings]
- Implemented “Silent Alarm” mode. [Enable Silent Alarm Mode]

Firmware Version 1.0.2.9

- Added back DTMF Open Door as optional choice, with user acknowledging the security risk.



[Enable DTMF Open Door]

- Revised “Alarm Output Duration(s)” choice option as 5/10/15/20/25/30 seconds.

Firmware Version 1.0.2.5

- Added folder creation and file arrangement if multiple GDS3710s are uploading snapshots to FTP server.
- Added DTMF audio playing when key be pressed. [Key Tone Type]
- Separated volume control under Web GUI -> Audio Settings. [System Volume][Doorbell Volume]
- Added “Audio, Snapshot, Recording and File Path Saved” operation with icons at Live View webpage. [Live View Page]
- Added “show password” feature when the eye icon be clicked in the webGUI.
- Added prompt popup message when capture button clicked.
- Use different email title to separate the Motion Detection and Temperature Out of the Range alarm.
- Set initial value of “0” for Virtual Number and SIP number if user leaving the field empty. [Virtual Number][SIP Number]
- Added support open door remotely via GDS Manager utility (after GDS Manager version 1.0.0.78)
- Supported GXP color phone JPEG_Over_HTTP with encryption and authentication. This feature is pending on GXP/UCM6xxx firmware availability. Currently this feature does not support 3rd party PBX if SIP extension is used in Open Door configuration.
- Added SSH support with default TCP port 22. [Enable SSH][SSH Port]
- Added GS_Wave (Android/iOS) Application support for Open Door. [CONNECTING GS WAVE WITH GDS3710 DOOR SYSTEM].
- Enhanced webGUI login process and added random default password.
- Enhance security by disable the DTMF to open door
- Added support of sending DTMF tone in SIP calling (RFC2833, SIP INFO). [Enable DTMF]

Firmware Version 1.0.1.19

- This is the initial version for GDS3710.



WELCOME

Thank you for purchasing Grandstream GDS3710 Hemispheric HD IP Video Door System, an innovative IP based powerful video door system.

GDS3710 HD IP Video Door System is a hemispheric IP video door phone with an integrated high-definition IP surveillance camera. GDS3710 is ideal for monitoring from wall to wall without blind spots. Powered by an advanced Image Sensor Processor (ISP) and state of the art image algorithms, it delivers exceptional performance in all lighting conditions. The GDS3710 IP video door system features industry-leading SIP/VoIP for 2-way audio and video streaming to smart phones and SIP phones. It contains integrated PoE, LEDs, HD loudspeaker, RFID card reader, motion detector, lighting control switch and more.

GDS3710 HD IP Video Door System can be managed by Grandstream's free windows-based management software: GDS Manager. GDS Manager is a client/server based software which provided RFID card management and basic reports for the door entrance.

Along with Grandstream videophone, mobile Apps, and Network Video Recorder (NVR), the GDS3710 provides a powerful recording and monitoring solution. It can be managed with GSURF Pro or any ONVIF-compliant video management system. It also offers a flexible HTTP API for easy integration with 3rd party applications and other surveillance systems.

GDS3710 is ideal for entry places requiring a wide-angle monitoring, such as banks, hotels, schools, office buildings, retail stores and small warehouses, and for most small to medium sized enclosed environments.



PRODUCT OVERVIEW

Feature Highlights

The following table contains the major features of the GDS3710.

Table 1: GDS3710 Features in a Glance

	<ul style="list-style-type: none"> • High-performance streaming server allowing multiple simultaneous streaming session accesses. • 2 Megapixel Progressive Scan CMOS, 1920H x 1080V. • Broad interoperability with most 3rd party SIP/VoIP devices and leading SIP/NGN/IMS platforms. • 2 Channels Input/Output alarm. • Wiegand (26 bits) Input and Output. • RFID card reader. • Weatherproof, vandal resistant.
---	---

Technical Specifications

The following table resumes all the technical specifications including the protocols / standards supported, voice codecs, telephony features and upgrade/provisioning settings for GDS3710.

Table 2: GDS3710 Technical Specifications

Video Compression	H.264 High Profile / Main Profile / Base Profile, Motion JPEG.
Image Sensor Resolution	1/2.7", 2 Megapixel, 1920H x 1080V.
Lens Type	1/2", F2.5, FOV: 180°(W) x 150°(H).
Day & Night Mode	White LEDs with smart brightness control.
Max Video Resolution	1920x1080.
Max Frame Rate	30 frames per second.
Minimum Illumination	0.5Lux.
Wide Dynamic Range	Yes, up to 120dB.
Embedded Analytics	Motion detection.



Snapshots	Triggered upon events, sent via email and/or FTP.
Multi-stream Resolution	High-performance streaming server allowing multiple simultaneous accesses: <ul style="list-style-type: none"> • Primary video stream: 1920 x 1080 resolution for continuous full HD recording. • Secondary video stream: 640 x 480 resolution for SIP/VoIP video calls. • Third video stream: 320 x 240 resolution for smartphone Apps.
Network Protocols	TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS local upload and mass provisioning using TR-069 (pending), ARP/RARP, ICMP, DNS, DHCP, SSH, SMTP, TFTP, NTP, STUN, TLS, SRTP.
SIP/VoIP Support	Broad interoperability with most 3rd party SIP/VoIP devices and leading SIP/NGN/IMS platforms.
Voice Codexs	G.711 μ /a-law, G.722, G.729A/B, DTMF (RFC2833, SIP INFO), AEC.
QoS	Layer 2 QoS (802.1Q, 802.1P) and Layer 3 QoS (ToS, DiffServ, MPLS).
Security	User and administrator level access control (pending), MD5 and MD5-sess based authentication, 256-bit AES encrypted configuration file, TLS, SRTP, HTTPS, 802.1Q.
Upgrade / Provisioning	Firmware upgrade via TFTP/HTTP/HTTPS, mass provisioning using TR-069 (Pending) or AES encrypted XML configuration file.
Audio Input	Built-in Digital Microphone, up to 1.5m with AEC.
Audio Output	Built-in HD Loudspeaker (2 Watt), sound quality suitable for up to 3 m.
Keypad / Buttons	12-key touchpad plus a capacitive doorbell button, each with individual LED illumination.
RFID	125KHz: EM4100 (1 RFID card and 1 RFID key fob included).
Alarm Input	Yes, 2 channels, Vin < 15V, for door sensor or other devices.
Alarm Output	Yes, 2 channels, 125VAC/0.5A, 30VDC/2A, Normal Open or Normal Close, for electric lock, light switch or other devices.
Network Interface	10M/100M auto-sensing.
Expansion Interface	Wiegand (26 bits) input and output.
Dimensions and Weight	173mm(H) x 80mm(W) x 36mm(D). 0.6 Kg.
Power Supply	PoE (Power over Ethernet) IEEE 802.3af Class 3, or 12VDC/1A connection (AC power adapter not included).
Interoperability	ONVIF (Profile S).
Ingress Protection	Weatherproof, vandal resistant, with support for extra back reinforcing metal plate
Temperature and Humidity	Operation: -30°C to 60°C (-22°F to 140°F) Storage: -35°C to 60°C (-31°F to 140°F)



	Humidity: 10% to 90% Non-condensing
Protection Class	IP66 (EN60529), IK09 (IEC62262).
Compliance	FCC: Part 15 subpart B Class B; Part 15 C; MPE CE: EN 55032 Class B; EN 61000-3-2; EN 61000-3-3; EN 50130; EN 60950-1; EN 300330; EN 301489; EN 62311 RCM: AS/NZS CISPR 22; AS/NZS 4268; AS/NZS 60950.1 IC: ICES-003; RSS310



GETTING STARTED

This chapter provides basic installation instructions including the list of the packaging contents and information for obtaining the best performance using the GDS3710 Video Door System.

Equipment Packaging

Table 3: Equipment Packaging

<ul style="list-style-type: none"> • 1 x GDS3710 • 1 x Installation Bracket • 1 x Drilling Template • 1 x Protecting Cap • 4 x Rubber Gaskets (for sealing the back cable) • 6 x Back Panel Screws • 6 x Bracket Screws and Anchors • 4 x Anti-tamper screws • 1 x Anti-Tamper Hex Key 	<ul style="list-style-type: none"> • 1 x Wiegand Cable • 1 x Lens Cleaning Cloth • 1 x RFID Card (more can be purchased from Partner/reseller) • 1 x Key Fob (more can be purchased from Partner/reseller) • 1 x Frame Back Cover • 1 x Quick Installation Guide • 1 x GPL License
---	---



Figure 1: GDS3710 Package

Note: Check the package before installation. If you find anything missing, contact your system administrator

Description of the GDS3710

Below figures show the component of the back and front view of GDS3710 IP Video Door System:

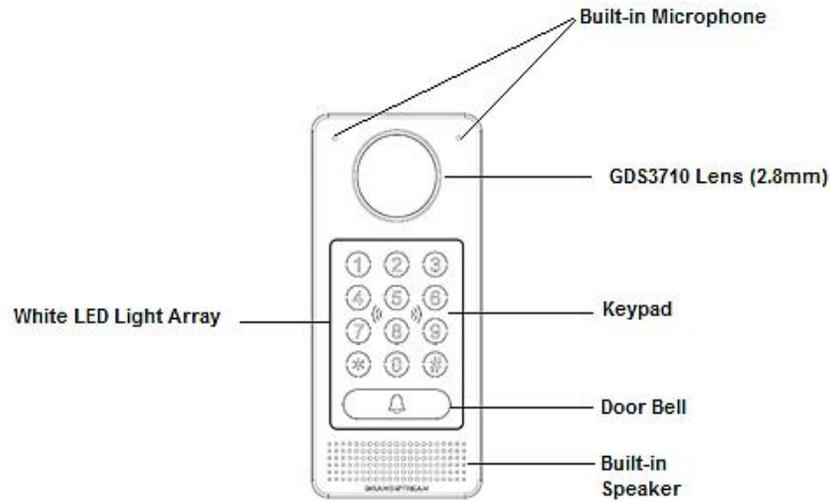


Figure 2: GDS3710 Front View

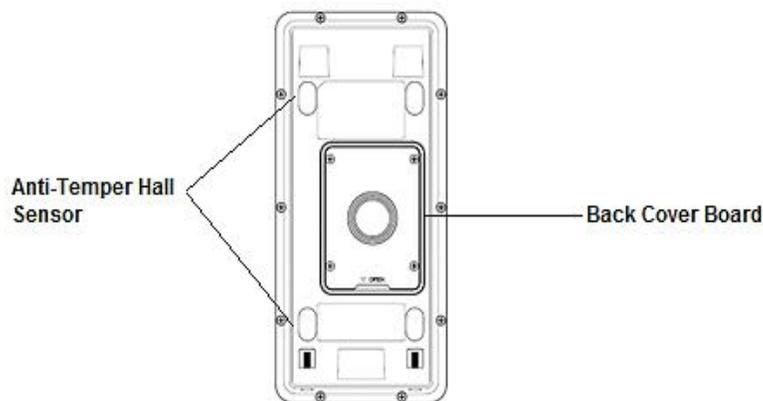


Figure 3: GDS3710 Back View

Connecting and Setting up the GDS3710

The GDS3710 can be powered using PoE or PSU:

Using PoE as power supply (Suggested)

- Connect the other end of the RJ45 cable to the PoE switch.
- PoE injector can be used if PoE switch is not available.

Using the power adapter as power supply (PSU not provided)

- Connect the other end of the RJ45 cable to network switch or router.
- Connect DC 12V power source via related cable to the corrected PIN of the GDS3710.

GDS3710 Wiring Connection

Table 4: GDS3710 Wiring Connection

Jack	Signal	Function	Note	
J2 (Basic) 3.81mm	TX+	Ethernet PoE 802.3af Class 3, 12.95W	Orange / White	Data
	TX-		Orange	
	RX+		Green / White	
	RX-		Green	
	PoE_SP2		Blue + Blue/White	Please twist these two wires together and connect to SP1, SP2 respectively even the PoE NOT used.
	PoE_SP1		Brown + Brown/White	
	GND 12V	Power Supply	DC 12V, 1A Minimum	
J3 (Advanced) 3.81mm	GND	Alarm GND		
	ALARM1_IN+	Alarm In	Vin<15V	
	ALARM1_IN-			
	ALARM2_IN+			
	ALARM2_IN-			
	NO1 COM1	Alarm Out	Relay: 30VDC/2A; 125VAC/0.5A	
	NO2 COM2	Electric Lock	For " Fail Secure " (Locked when Power Lost) Strike, connect COM2 & NO2 .	
	NC2		For " Fail Safe " (Open when No Power) Magnetic Lock, connect COM2 & NC2 . Relay: 30VDC/2A; 125VAC/0.5A	
	J4 (Special) 2.0mm	GND	Wiegand Power GND	Black
WG_D1_OUT		Wiegand Output Signal	Orange	GDS3710 function as Output of Card Reader, Connect Pin 1, 2, 3
WG_D0_OUT			Brown	
LED		Wiegand Output LED Signal	Blue	For External Card Reader; Or GDS3710 as Receiver Only
WG_D1_IN		Wiegand Input Signal	White	For External Card Reader Connect Pin 1,4,5,6,7,8
WG_D0_IN			Green	
BEEP		Wiegand Output BEEP Signal	Yellow	For External Reader Only
5V		Wiegand Power Output	Red	For External Card Reader Only. 12VDC powered External Card Reader must use own power source, can NOT use this Pin.



GDS3710 Back Cover Connections

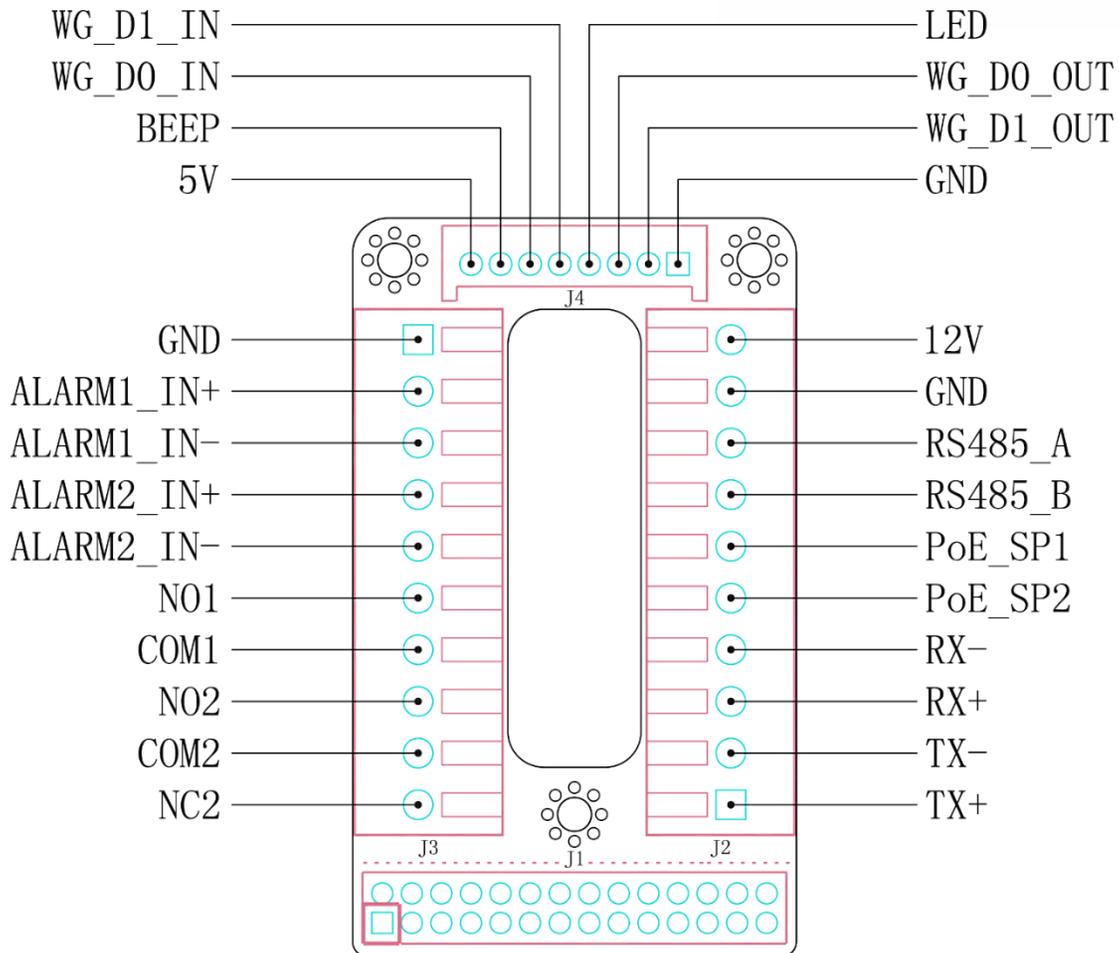


Figure 4: GDS3710 Back Cover Connections

Connection Example

To connect the GDS either by using PoE or PSU follow steps below:

- Open the Back-Cover Board of the GDS3710 which should look like following figure.

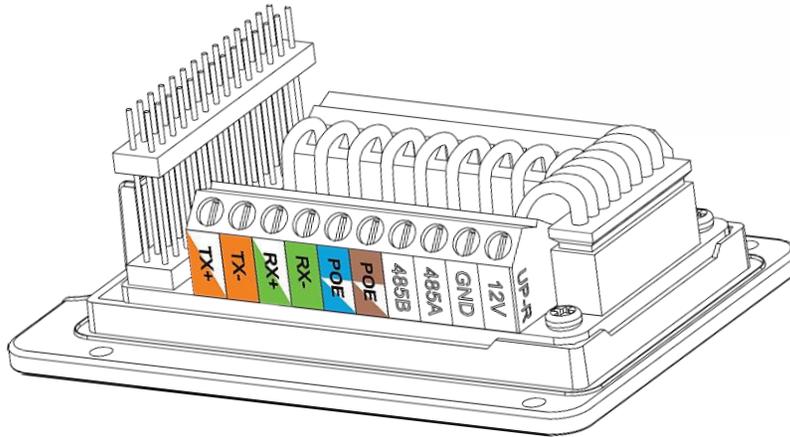


Figure 5: GDS3710 Back Cover

Power the unit using PoE

- Cut into the plastic sheath of your Ethernet cable, then Unwind and pair as shown below. Use the TIA/EIA 568-B standard, which define pin-outs for using Unshielded Twisted Pair cable and RJ-45 connectors for Ethernet connectivity.

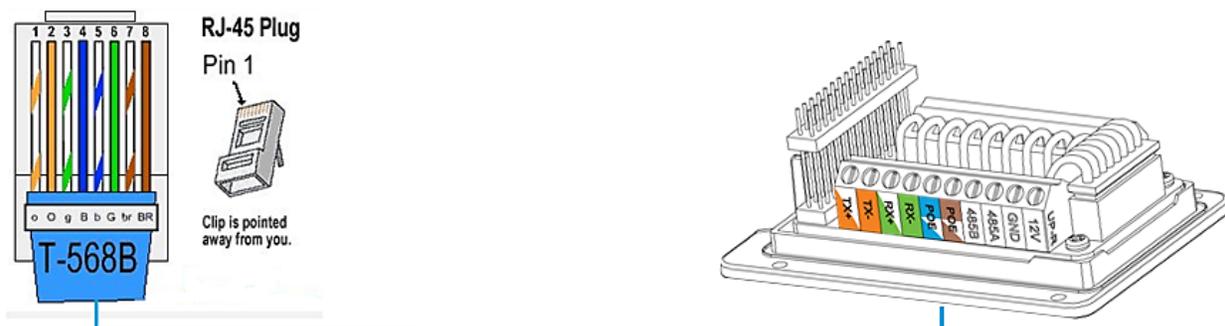


Figure 6: Connection Example

- Connect each wire of the cable to its associate on the Back Cover of the GDS3710 to power the unit using PoE.

Power the unit using PSU

- To power the unit using PSU, use a multimeter to detect the polarity of your Power Supply, then connect GND to negative pole and 12V to positive pole of the PSU.

Note: If the user doesn't have PoE switch, there is no need to connect the Blue and Brown wires to the GDS3710 since these wires are used to power the unit via Ethernet.

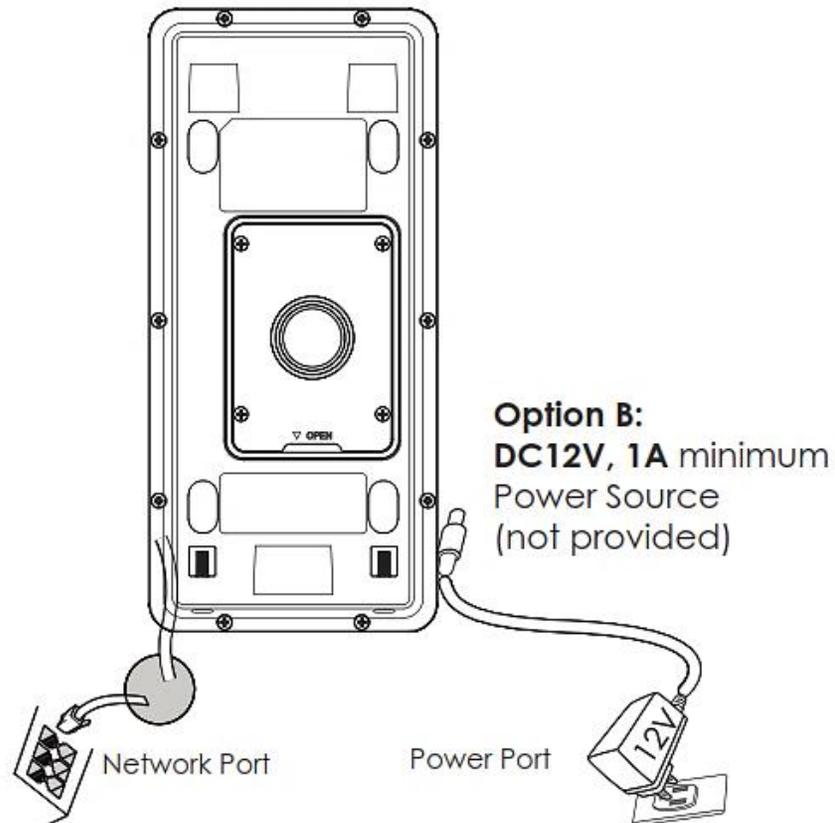


Figure 7: Powering the GDS3710

GETTING TO KNOW GDS3710

The GDS3710 has an embedded Web server to respond to HTTP/HTTPS GET/POST requests. Embedded HTML pages allow users to configure the GDS3710 through Microsoft Internet Explorer or Mozilla Firefox.

Download WebControl Plug-in from the GDS3710 WebGUI. For Apple platform OS-X, only MJPEG video codec supported currently.

Notes:

- Please disable temporarily the Antivirus or Internet Security Software when download and install the Grandstream WebControl Plug-in for Firefox/Chrome or “GSViewerX.cab” for Microsoft Internet Explorer. Please close Browser to install the downloaded Plug-in or Active-X.
- Please trust and install the file downloaded if prompted by the Antivirus or Security software.

Connecting GDS3710 to Network with DHCP Server


The GDS3710 by default has a DHCP client enabled, it will automatically get IP address from DHCP server.

Windows Platform

Two ways exist for Windows user to get access to the GDS3710:

UPnP

By default, the GDS3710 has the UPnP feature turned ON. For customers using Windows network with UPnP turned on (most SOHO routers support UPnP), it is very easy to access the GDS3710:

1. Find the “Network” icon  on the windows Desktop.
2. Click the icon to get into the “Network”, the GDS3710s will list as “Other Devices” shown like below. Refresh the pages if nothing displayed. Otherwise, the UPnP may not be active in the network.

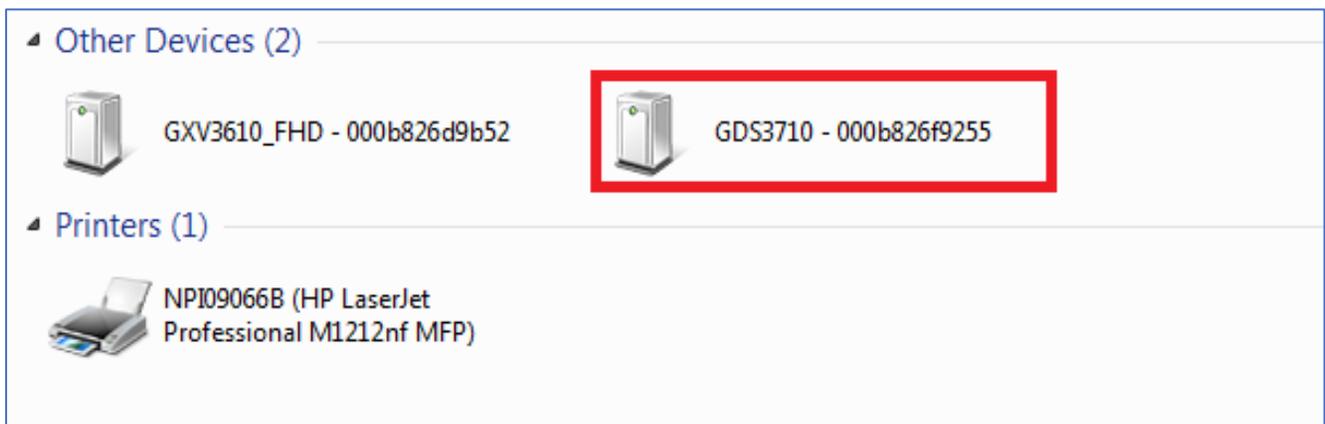


Figure 8: Detecting GDS3710 via UPnP

3. Click on the displayed icon of related GDS3710, the default browser (e.g.: Internet Explorer, Firefox or Chrome) will open and connect directly to the login webpage.

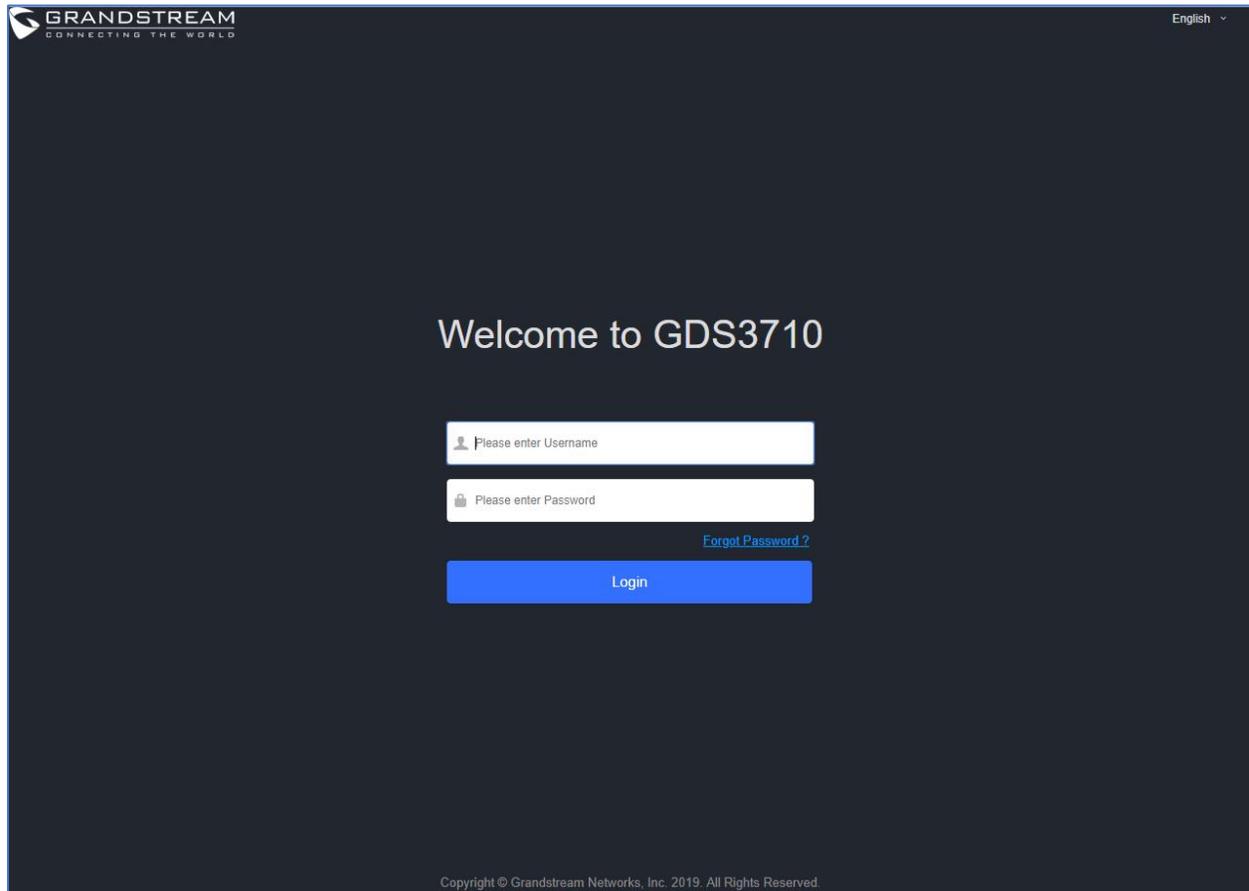


Figure 9: GDS3710 Login Page

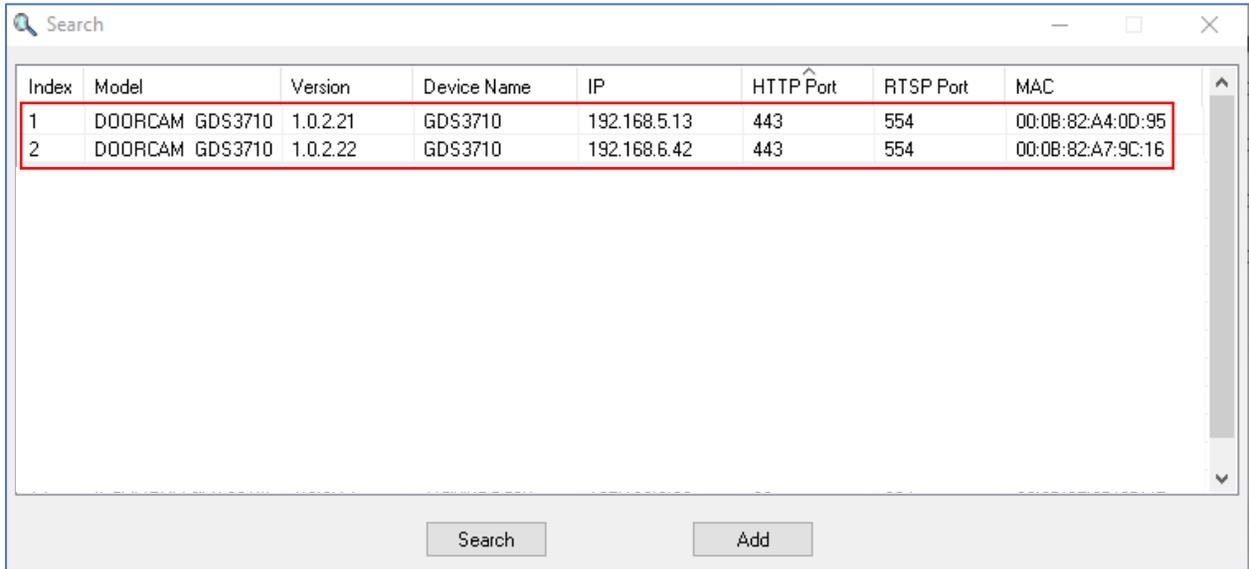
4. Once logged in, the prompt message will display asking for plug-in installation.
5. Disable security or antivirus software, download and install the plug-in, close and open the browser again, the embedded video will be displayed if clicking the “LiveView” and pressing the stream number.

GS Search

GS search is a program that is used to detect and capture the IP address of Grandstream devices, below are instructions for using the “GS Search” utility tool:

1. Download the GS Search utility tool from Grandstream website using the following link:
http://www.grandstream.com/sites/default/files/Resources/GS_Search.zip
2. Double click on the downloaded file and the search window will appear.
3. Click on  button to start the discovery for Grandstream devices.
4. The detected devices will appear in the output field like below.





Index	Model	Version	Device Name	IP	HTTP Port	RTSP Port	MAC
1	DOORCAM GDS3710	1.0.2.21	GDS3710	192.168.5.13	443	554	00:0B:82:A4:0D:95
2	DOORCAM GDS3710	1.0.2.22	GDS3710	192.168.6.42	443	554	00:0B:82:A7:9C:16

Figure 10: GS Search Discovery

5. Double click on a device to access its webGUI.

GDS Manager Utility Tool

User can know the IP address assigned to the GDS3710 from DHCP server log or using the Grandstream GDS Manager after installing this free utility tool provided by Grandstream. User can find instructions below, for using “GDS Manager” utility tool:

1. Download the GDS Manager utility tool from Grandstream website using the following link:
<http://www.grandstream.com/sites/default/files/Resources/gdsmanager.zip>
2. Install and run the Grandstream GDS Manager, a client/server architecture application, the server should be running first, then GDSManager (client) later:



3. On the GDS Manager access to Device → Search and Click on the  Search button to start device detection
4. The detected devices will appear in the output field like below:

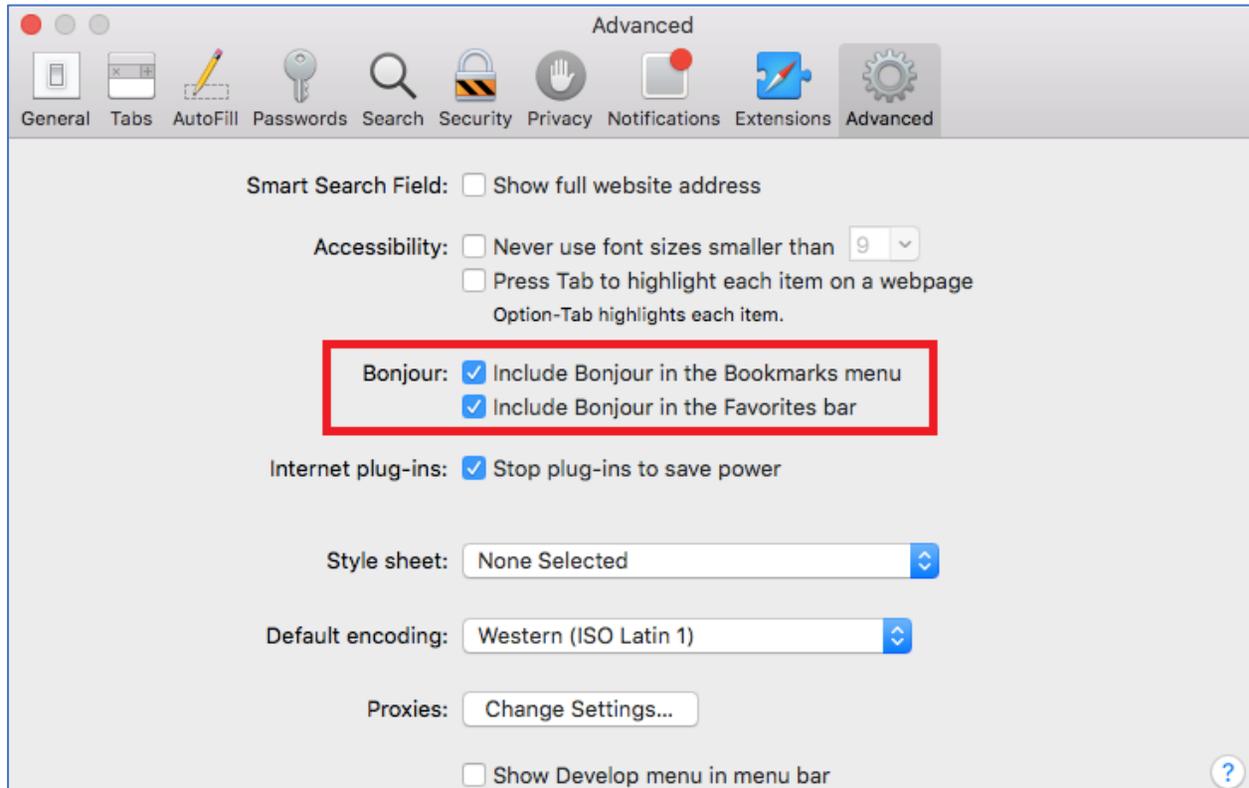


Figure 12: Apple Safari Settings Page

3. Bonjour will now display embedded at Safari. Select “Bonjour” pull-down menu and select “Webpages”, the related device like GDS3710 will be there.




Figure 13: Bonjour Setting Page

4. Click on the displayed GDS3710 to access to the configuration page of the GDS3710.
5. To see the MJPEG video stream, users should type in the browser the following URL while specifying the correct protocol (either HTTP or HTTPs and the correct port number) :
`http(s)://IP_address_GDS:Port/jpeg/mjpeg.html`

Notes:

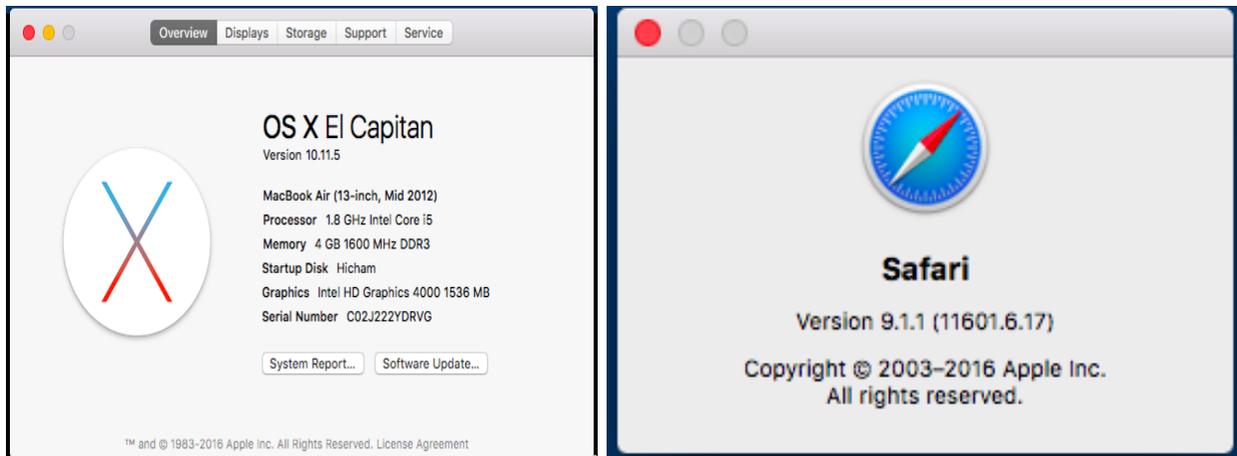- The instructions provided above are based on Safari/OS-X, other Apple platform like iOS (iPhone/iPad) can use similar method.





- iPhone/iPad (iOS) users are recommended to use Applications in Apple Store.
- Free or Paid applications from Apple Store like “IP Cam Viewer” is suggested and verified working with Grandstream GDS3710.
- Apple Store applications like “IP Cam Viewer” will support H.264 video codec.

Connect to the GDS3710 using Static IP

If there is no DHCP server in the network, or the GDS3710 does not get IP from DHCP server, user can connect the GDS3710 to a computer directly, using static IP to configure the GDS3710.

1. The default IP, if no DHCP server, or DHCP request times out (after 3 minutes), is **192.168.1.168**
2. Connect the Ethernet cable from GDS3710 to the computer network port directly.
3. Configure the computer using Static IP: 192.168.1.XXX (1<XXX<255, except for 168) and configure the “Subnet mask” to “255.255.255.0”. Leave the “Default Gateway” to “Blank” like below:



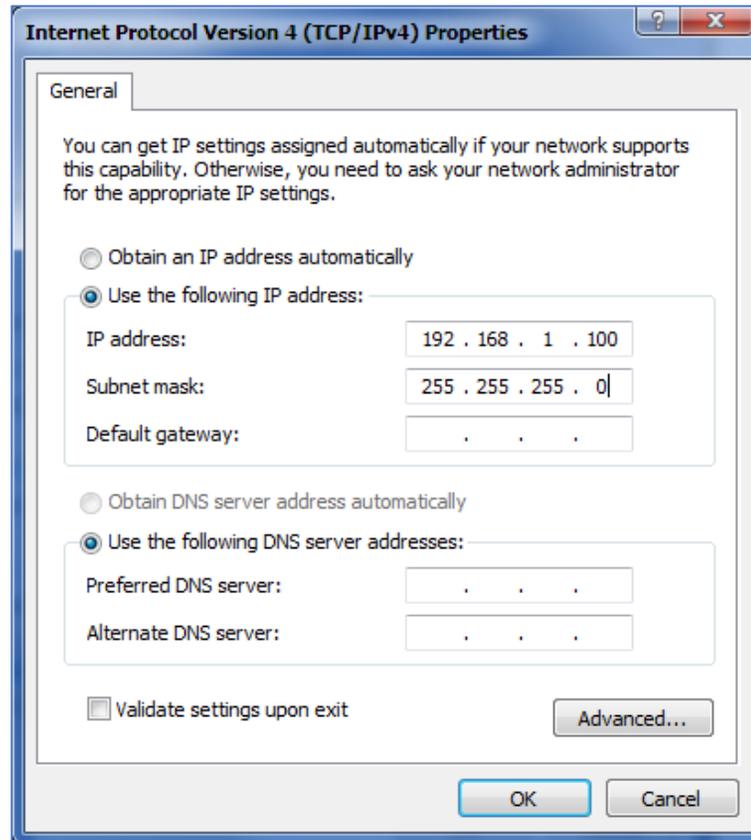


Figure 14: Static IP on Windows

4. Power on the GDS3710, using PoE injector or external DC power.
5. Enter 192.168.1.168 in the address bar of the browser, log in to the device with admin credentials. the default admin username is “**admin**” and the default random password can be found at the sticker on the GDS3710.
6. The browser will ask for plug-in or ActiveX if not installed, otherwise it will get to Home page and show web interface of GDS3710.
7. Access the Web Configuration Interface. Internet Explorer will indicate that “This website wants to install the following add-on: GSViewerX.cab from Grandstream Networks Inc.”, allow the installation.

Note: Please disable temporarily Antivirus or Internet Security Software and close all browsers when download and install the Grandstream Plug-in Software.

GDS3710 APPLICATION SCENARIOS

The GDS3710 Door System can be used in different scenarios.

Peering Mode without SIP Server

For environment like remote warehouse/storage, grocery store, small (take-out) restaurants, just using static IP with PoE switch to form a LAN, using Grandstream's video phone GXV3240 or GXV3275, the GDS3710 will meet your very basic intercom, open door and surveillance requirement.

This is the solution to upgrade the traditional analogue Intercom and CCTV security system. All you need is a Power source, Switch or PoE Switch and Grandstream GXV3240 or GXV3275 video phones.

The equipment list can be found below:

- GDS3710
- GXV3240 or GXV3275
- PoE Switch with related Cat5e/Cat6 wiring

Peering using SIP Server (UCM6XXX)

For large deployment, multiple GDS3710 might be required, peered connection will not work in such case due to multiple connections. Such scenarios require an IPPBX or a SIP Proxy to accomplish the tasks.

If remote access is required, a router with internet access should be added to below needed equipment list:

- Several GDS3710
- UCM6XXX or another SIP Server
- GXV3240 or GXV3275 Video Phones
- PoE Switch with related Cat5e/Cat6 wiring
- Electronic Lock

If remote access to the GDS3710 is required for viewing live video stream, Internet access is required and more equipment such as:

- Router.
- Internet Access (Optical fiber, 3G, 4G, Cable or DSL).
- iPhone or Android phone with 3rd party applications (IP Cam Viewer for instance).



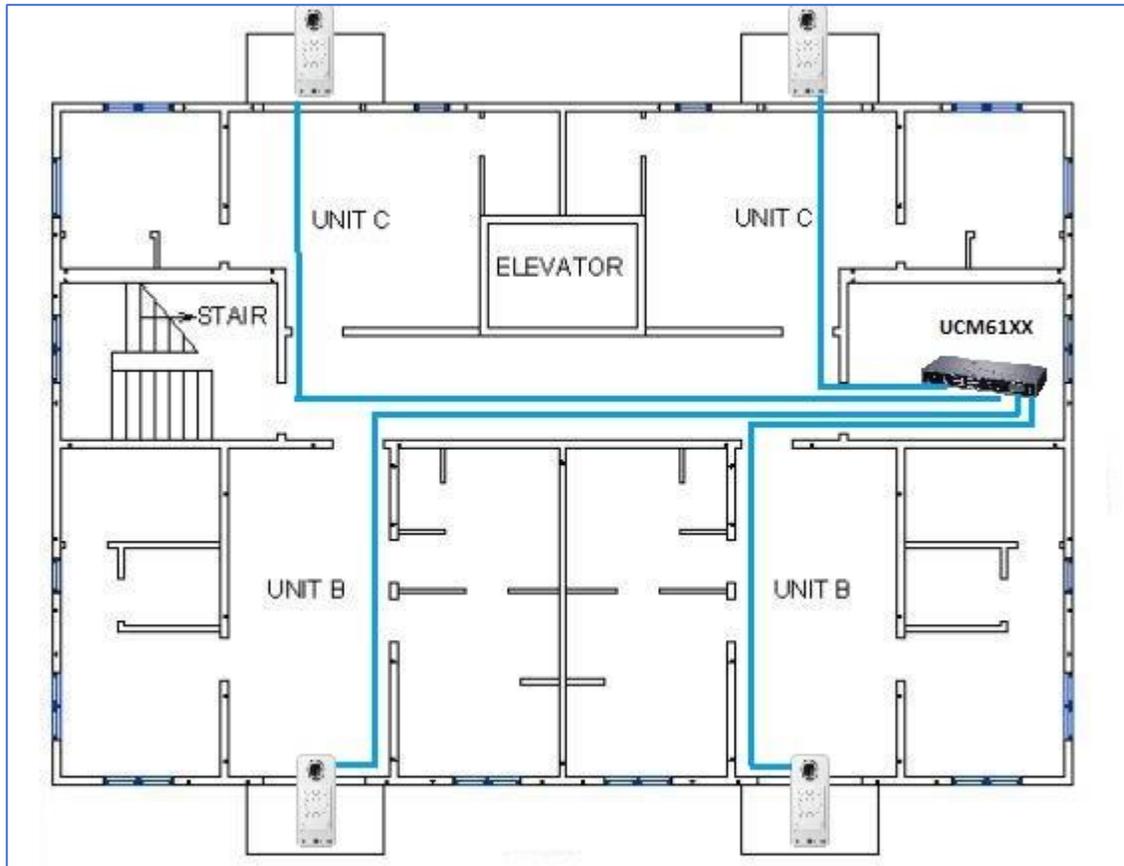


Figure 15: Peering GDS3710 with UCM6XXX

Using a Network Video Recorder (NVR)

For implementation with more than two GDS3710s, if local video recording is required to store the record, then a NVR will be added to save all the video stream when people enter the door.

Equipment List:

- Several GDS3710
- NVR supporting Onvif Profile S.
- PoE switches with Cat5e/Cat6 wiring
- Router
- Internet Access (Optical fiber, 3G, 4G, Cable or DSL).
- iPhone or Android phone with 3rd party APP

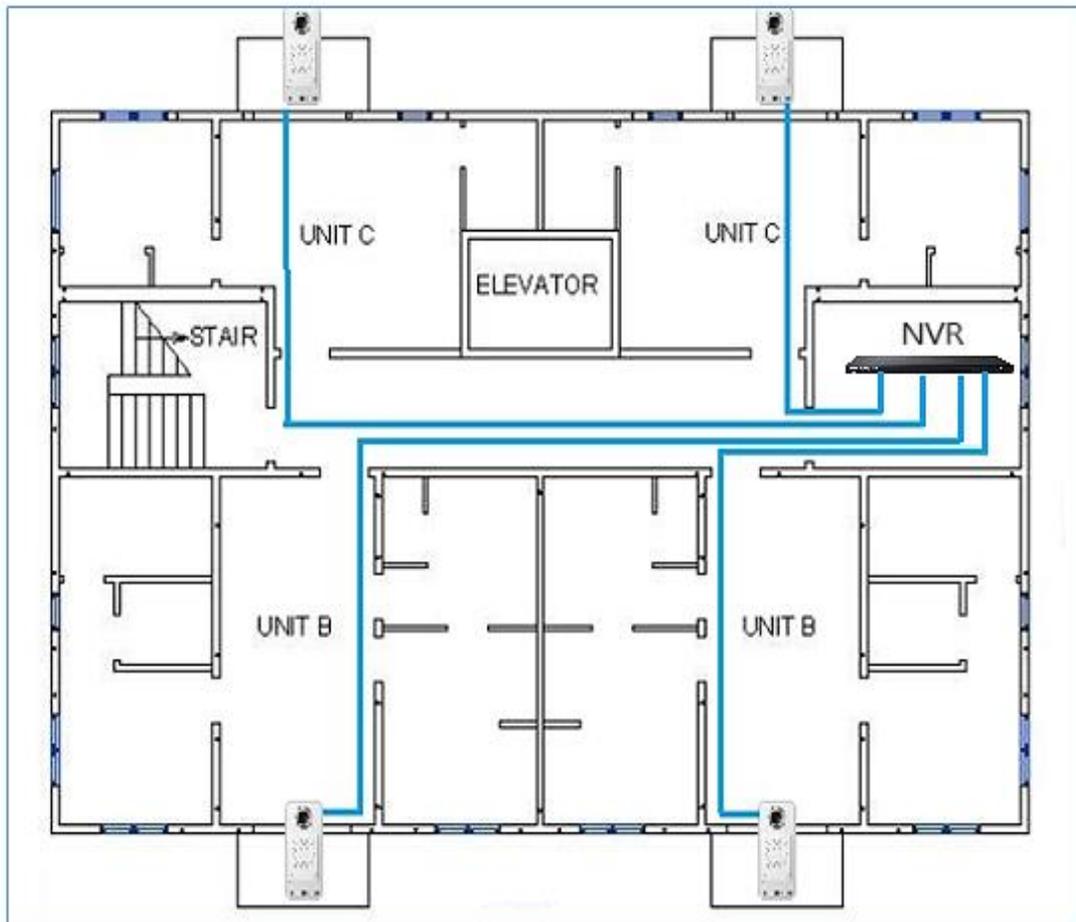


Figure 16: Peering GDS3710 with GVR3550

GDS3710 PERIPHERAL CONNECTIONS

Below is the illustration of GDS3710 peripheral connections for related applications.

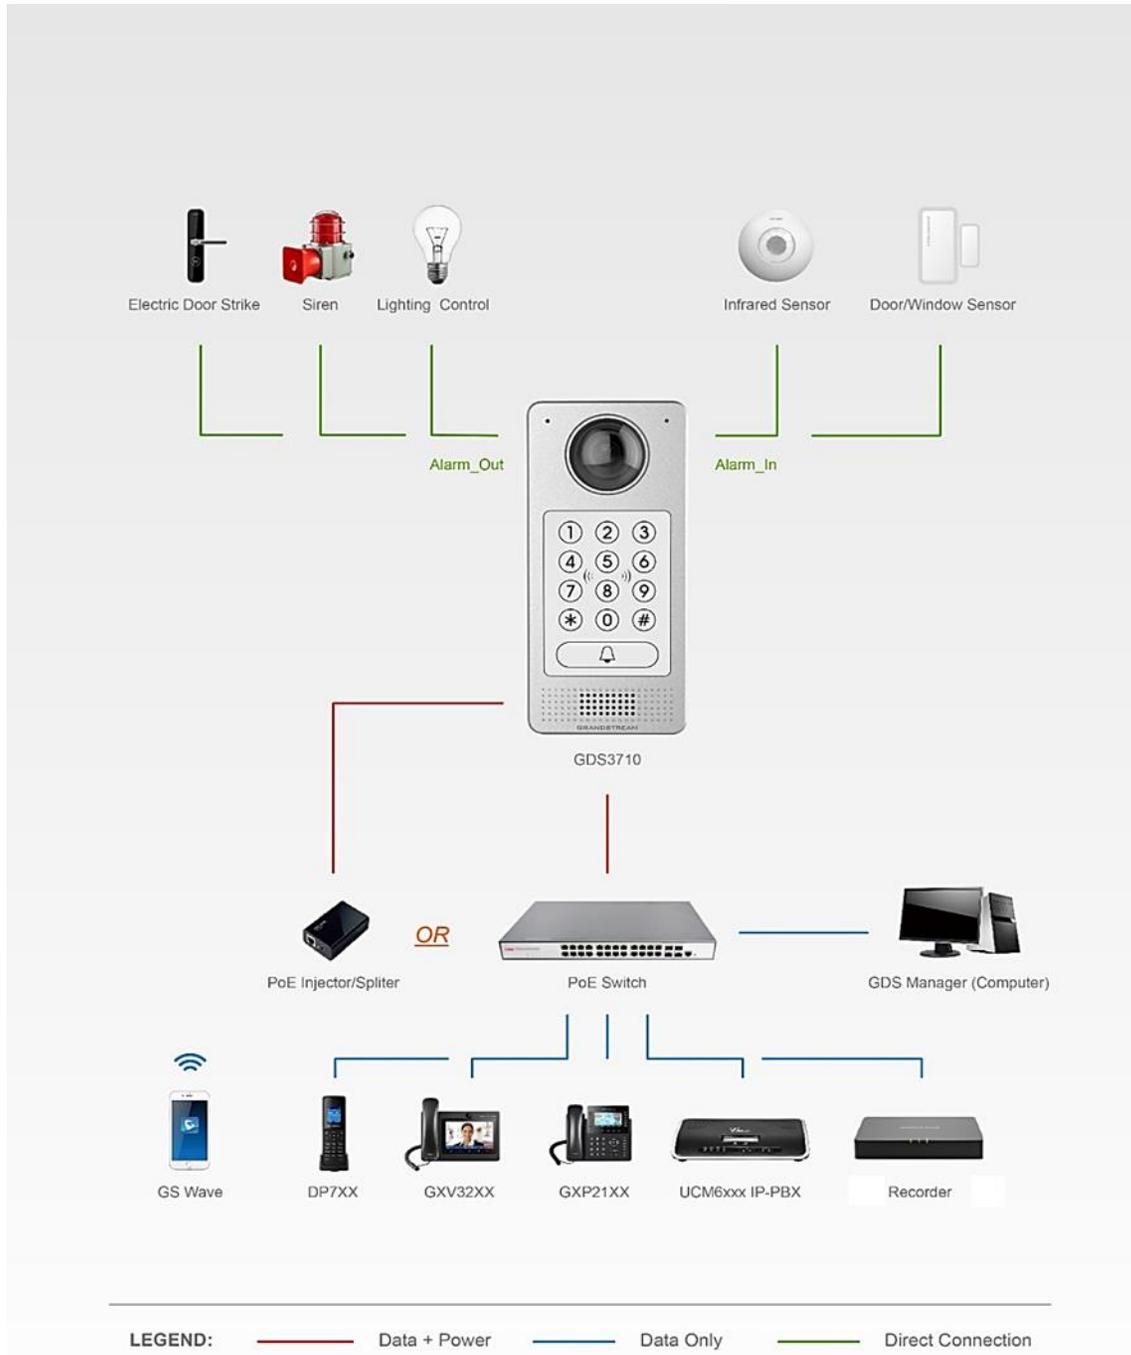


Figure 17: Peripheral Connections for GDS3710

Alarm IN/OUT

Alarm_In could use any 3rd party Sensors (like IR Motion Sensor).

Alarm_Out device could use 3rd party Siren and Strobe Light, or Electric Door Striker, etc.

The figure below shows illustration of the Circuit for Alarm_In and Alarm_Out.

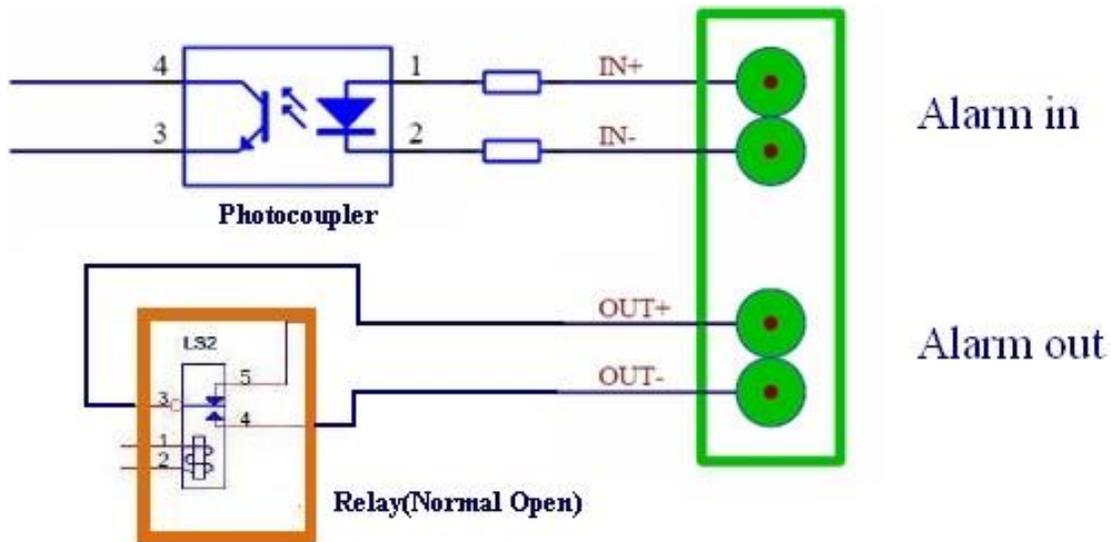


Figure 18: Alarm_In/Out Circuit for GDS3710

Notes:


- The Alarm_In and Alarm_Out circuit for the GDS3710 should meet the following requirement:

Alarm Input	3V<Vin<15V, PINs (1.02KΩ)
Alarm Output	125VAC/0.5A, 30VDC/2A, Normal Open, PINs

- The Alarm_In circuit, if there is any voltage change between 3V and 15V, as specified in the table above, the GDS3710 Alarm_In port will detect it and trigger the action and event.
- Higher voltage and wrong polarity connection are prohibited because this will damage the devices.

Protection Diode

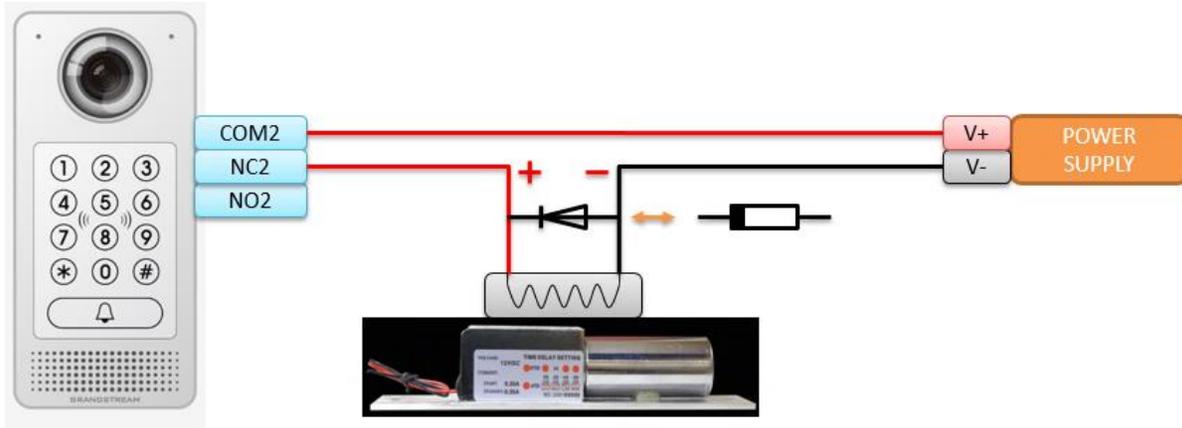
When connecting the GDS3710 to a door strike it is recommended to set an EMF protection diode in reverse polarity for a secure use, below examples of deployment for the protection diode.



Electric lock

Figure 19: Protection Diode - Example 1

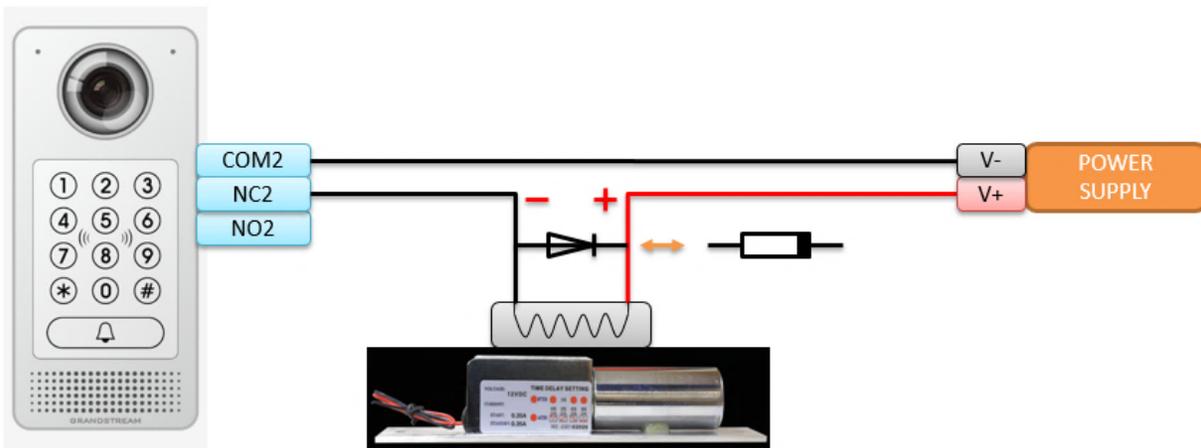The reverse EMF protection diode must always be installed in reverse polarity across the door strike.



Electric lock

Figure 20: Protection Diode - Example 2

Note: power polarity connection: Diode: SS24 or $I_f \geq 2A$, $V_r \geq 40V$.

Connection Examples

Below examples, show how to use wiring on the back cover of the GDS3710 to connect with external devices. The “NO” (Normal Open) model strike is used as example, “NC” (Normal Closed) should be similar and users need to decide which model (NO or NC) to be used on the door.

Wiring Sample using 3rd Party Power Supply

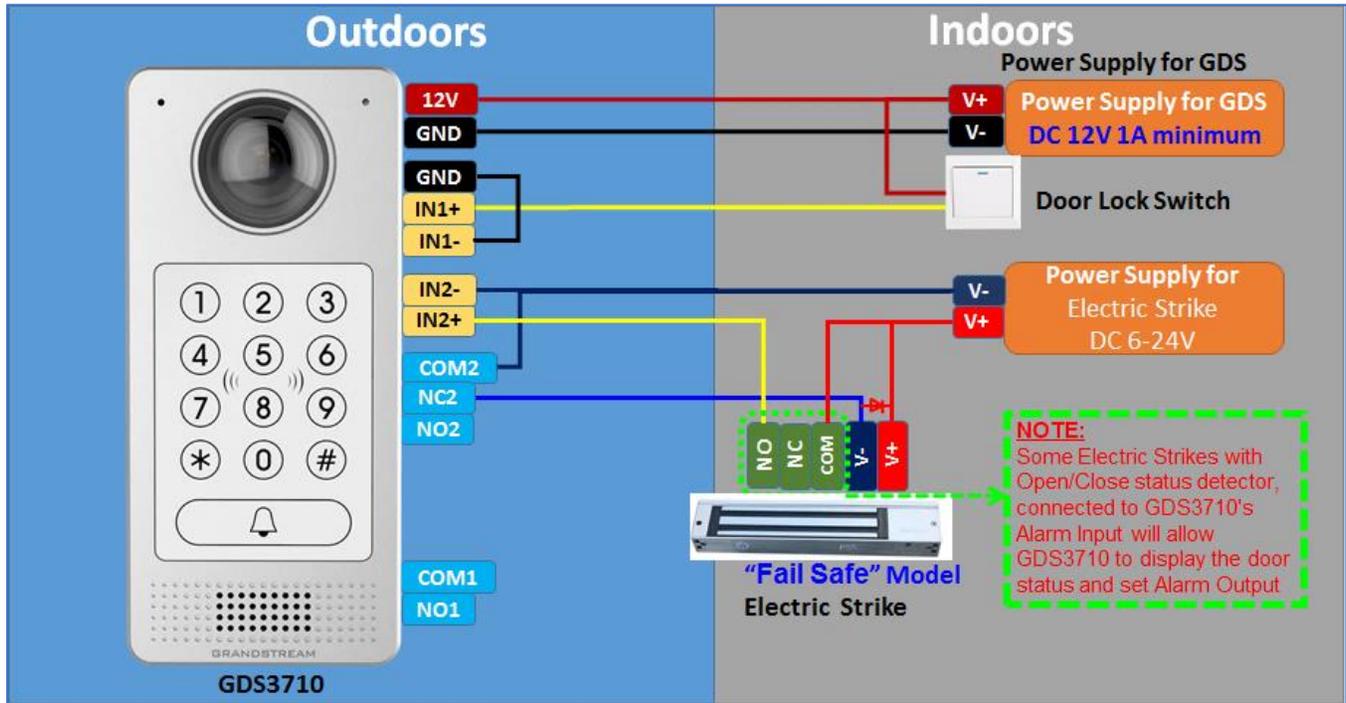


Figure 21: 3rd party Power Supply Wiring Sample

Wiring Sample using Power Supply for both GDS3710 and Electric Strike

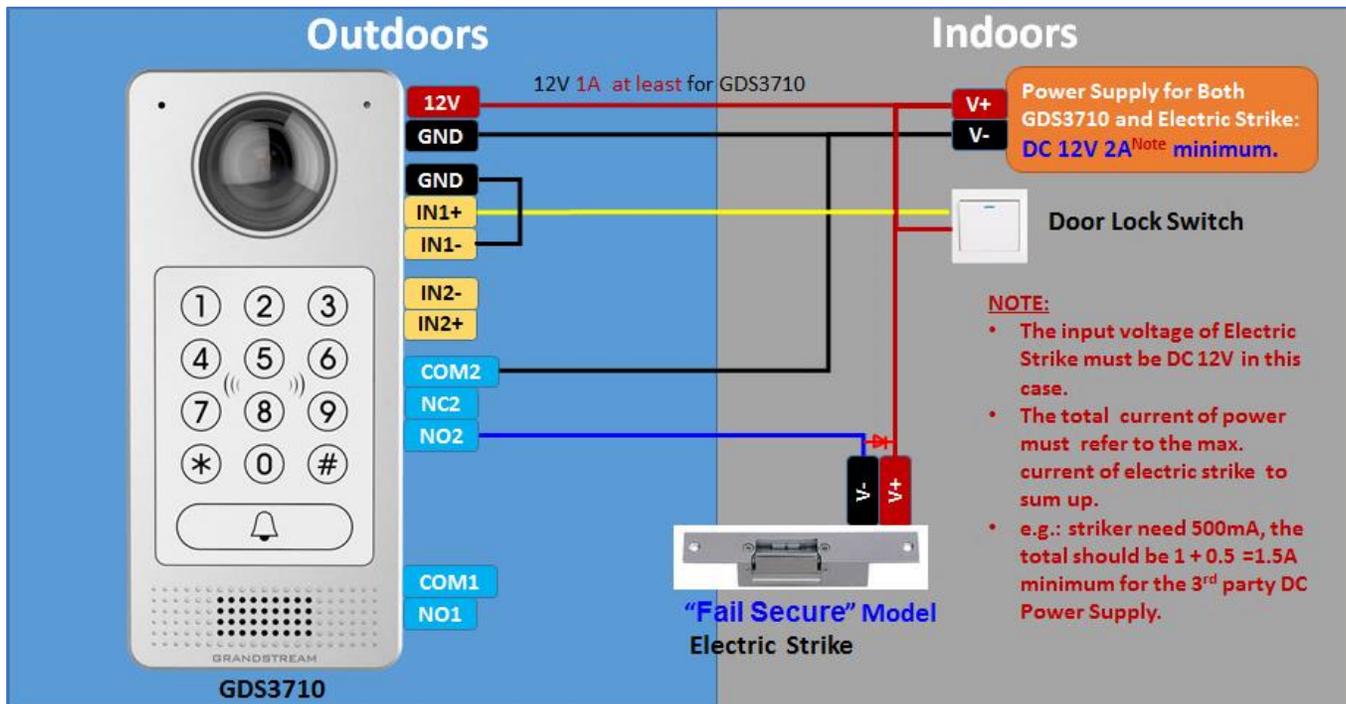


Figure 22: Power Supply used for both GDS3710 and Electric Strike



Wiring Sample using PoE to power GDS3710 and 3rd Party Power Supply for Electric Strike

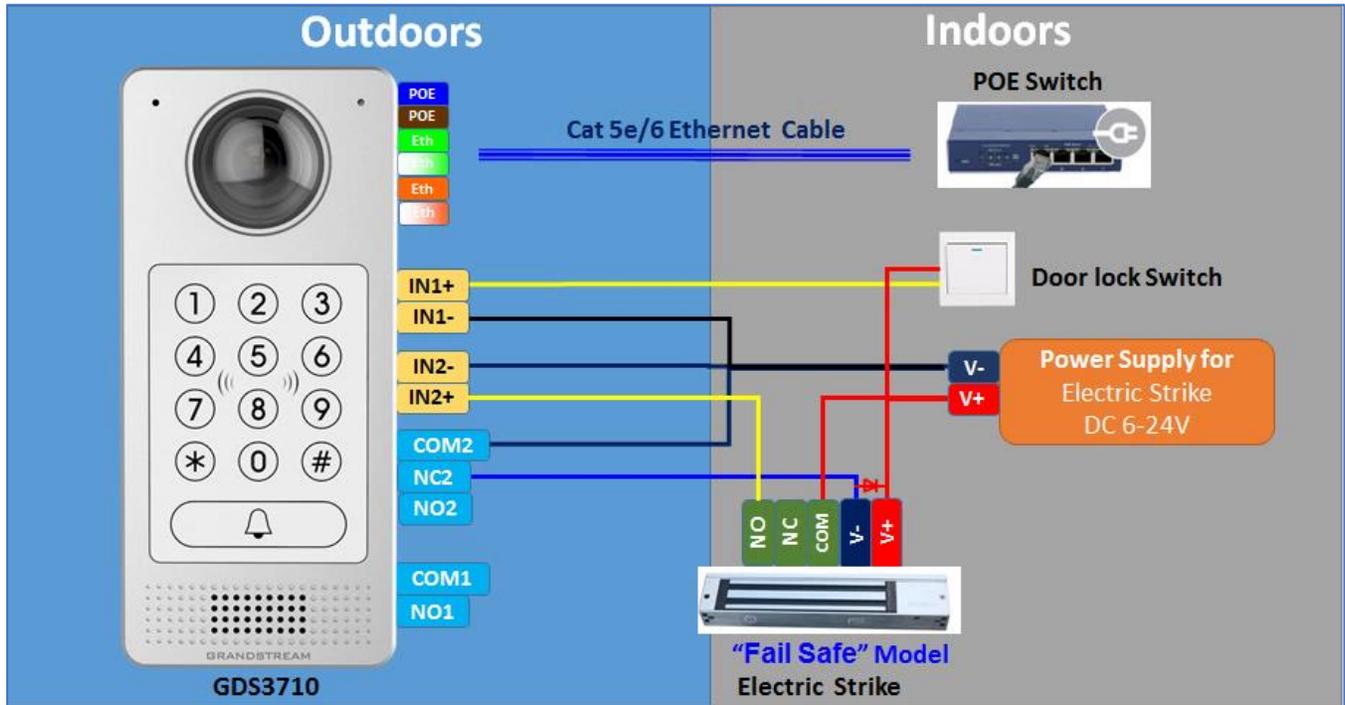


Figure 23: Wiring Sample using PoE to power GDS3710 and 3rd party Power Supply for Electric Strike

Warning: The following example should be avoided when powering the electric strike.

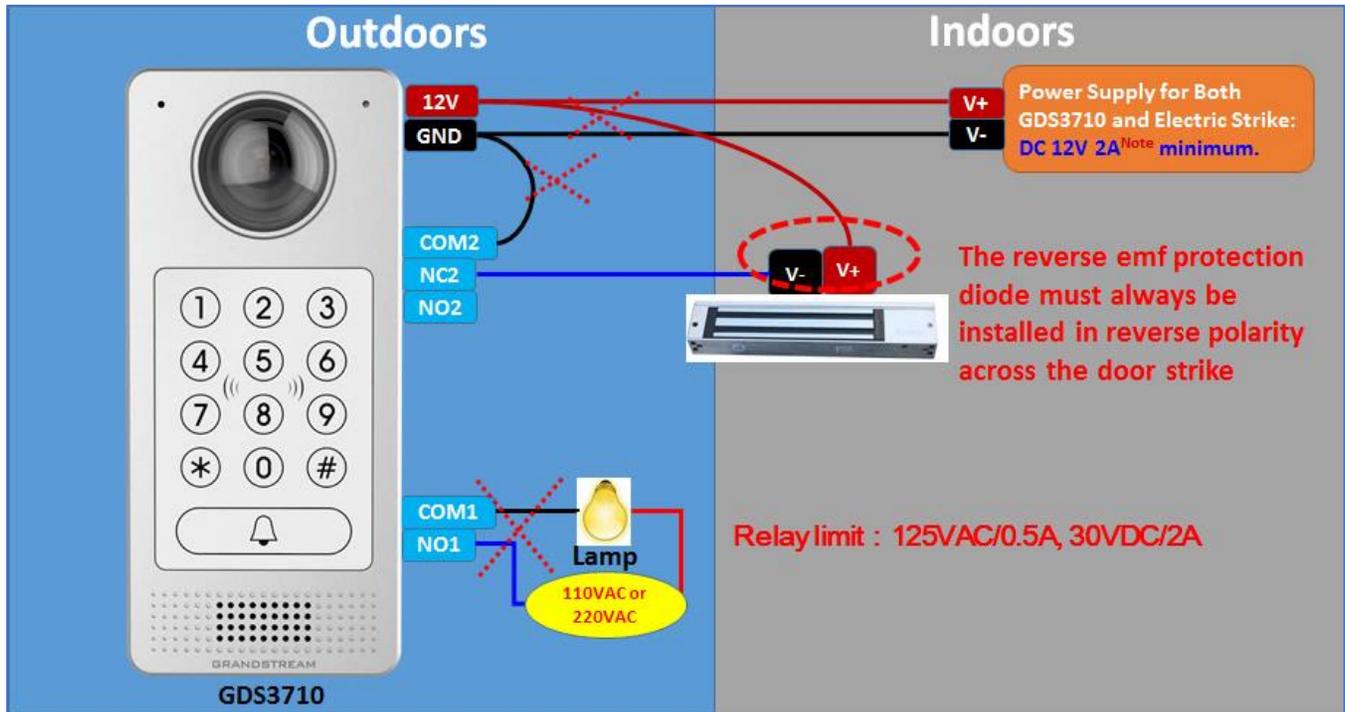


Figure 24: Example to Avoid when Powering the Electric Strike

Good Wiring Sample for Electric Strike and High-Power Device

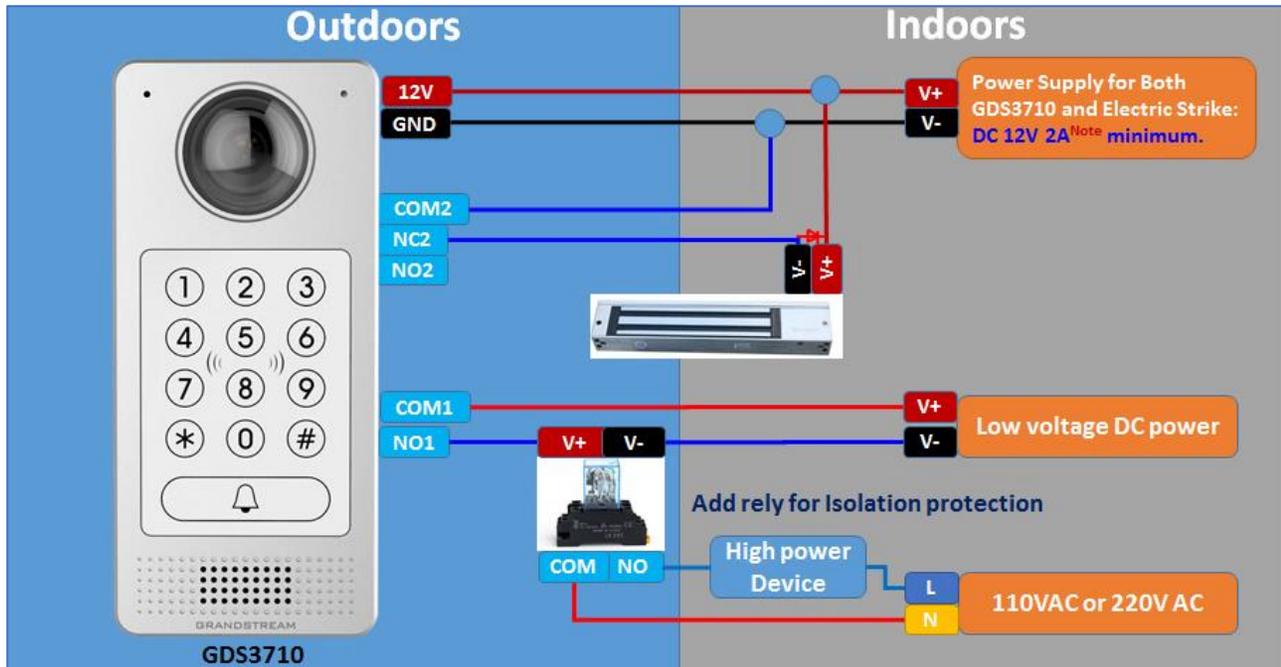


Figure 25: Electric Strike and High-Power Device Example

Wiegand Module Wiring Examples

GDS3710 package is shipped with one Wiegand cable for Input/Output Wiegand connections. The following examples shows how to connect the Wiegand Input/Output devices to the GDS3710.

Input example with 3rd party power supply for Wiegand device

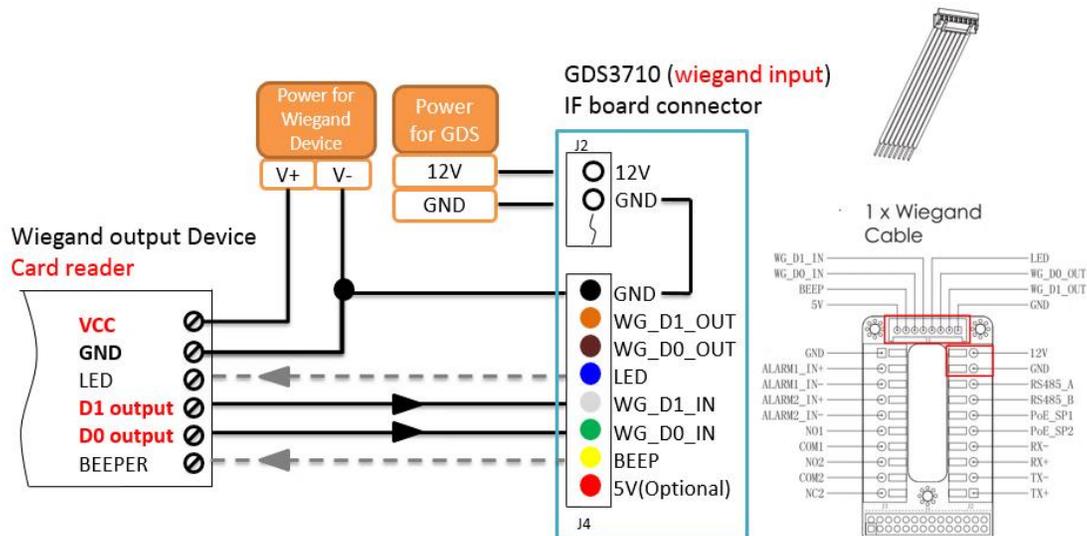


Figure 26: Wiegand Input Example with 3rd party Power Supply

Make sure to connect the GND of the Wiegand device and the GDS3710 Wiegand port.
 For Wiegand input mode, LED and Beep pins require that the Wiegand device support those interfaces.
 These two pins will not affect the Wiegand bus when not connected.

Input example with power supply for both GDS3710 and Wiegand device

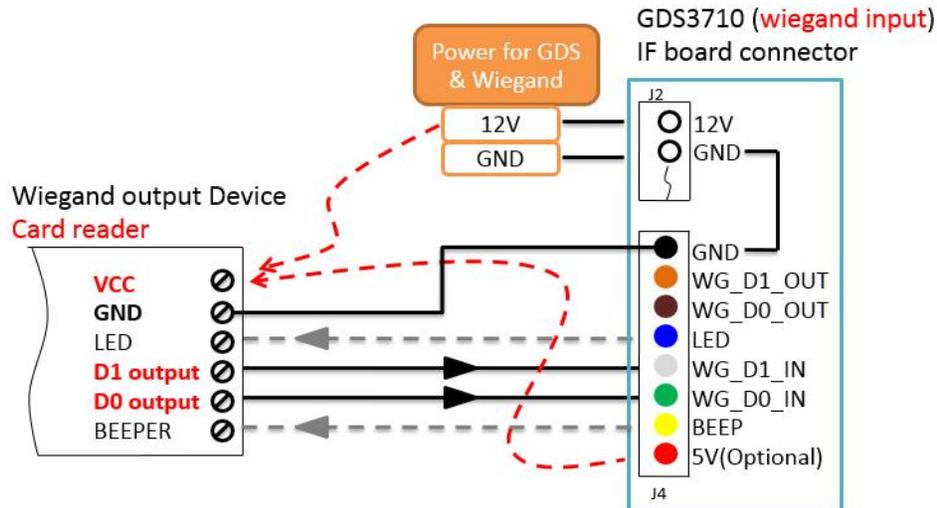


Figure 27: Wiegand Input Example with Power Supply for GDS3710 and Wiegand Device

If power source is **12VDC**, Wiegand device can share same power source of GDS3710. However, users need to check the max power consumption and the max capability of the power source.
 If Wiegand device is using **5VDC**, GDS3710 Wiegand port can provide 5VDC with max 500mA to power up Wiegand device.

Output example with 3rd party power supply for Wiegand device

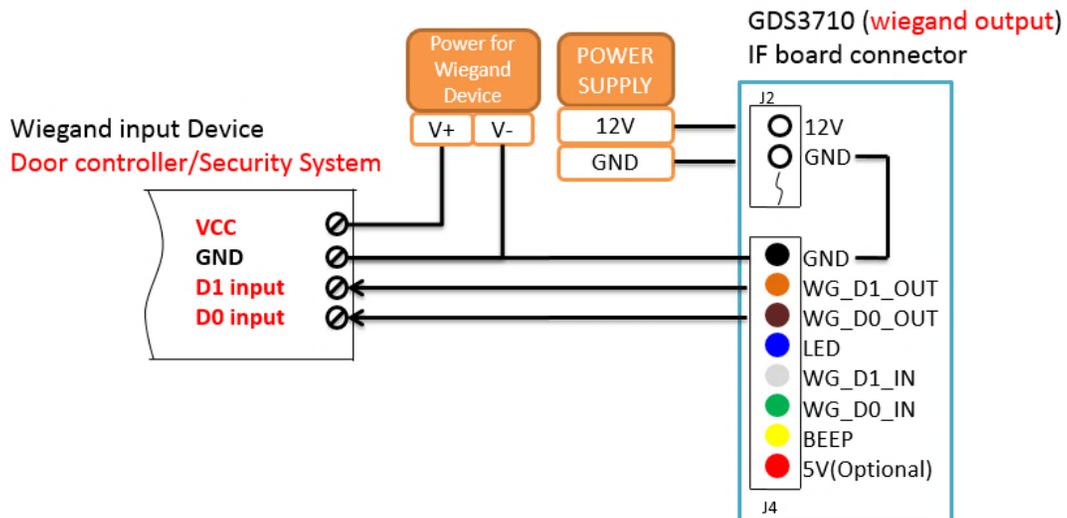


Figure 28: Wiegand Output Wiring Example

When the Wiegand output of the GDS3710 is connected, it acts as the signal receiver of the 3rd party Wiegand device, connecting to door controller. The major wiring is GND, D0, and D1. Because usually the door controller will consume big current and power, the power supply should be separated.

Wiegand RFID Card Reader Example

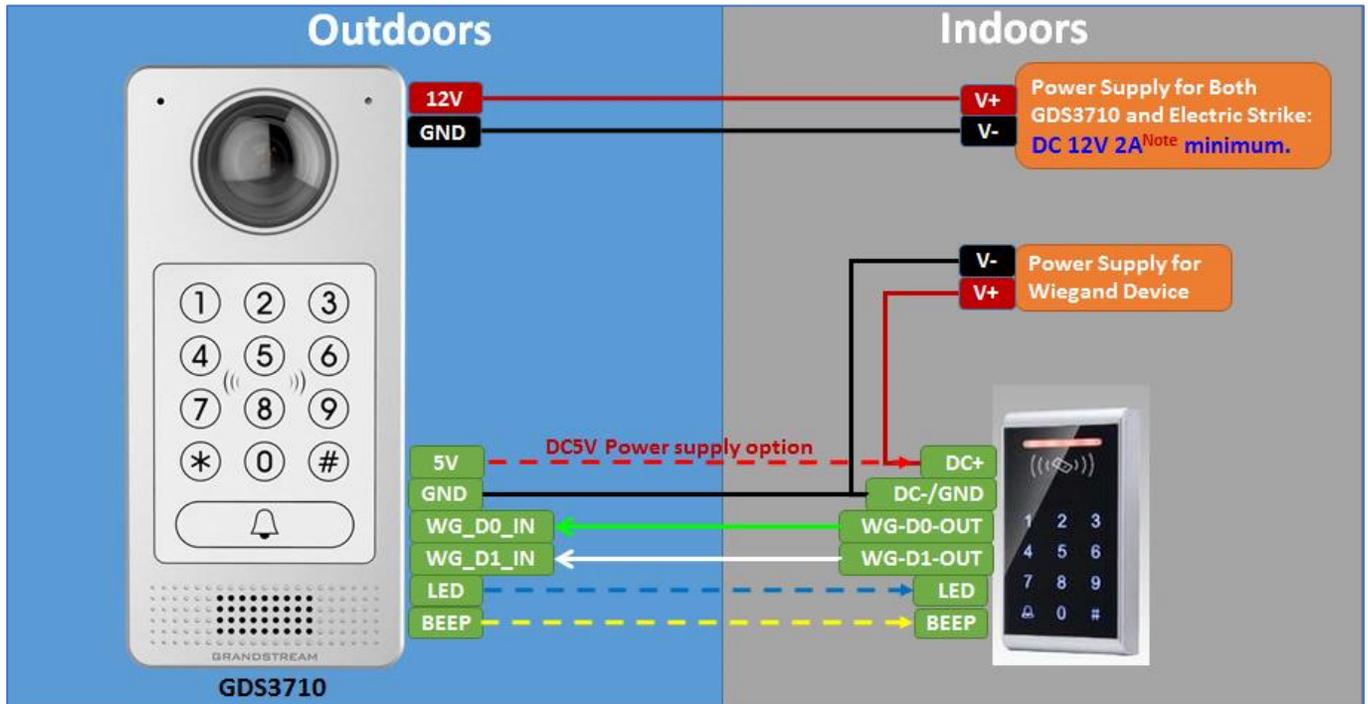


Figure 29: Wiegand RFID Card Reader Example

Siren alarming when door opened abnormally

When this feature enabled (special wiring required, see below wiring diagram), abnormal open door will be detected by DI port (**Alarm_In2** or **IN2** in below diagram showed) if wired correctly (connecting the **COMx** port to **DIx** port) therefore trigger siren alarm. Once abnormal open door alarm triggered, the siren will sound non-stop, until manually override by related person.

There are several ways to stop and disable the alarm:

- 1) Power cycle the GDS37xx
- 2) Pick up the Alarm Phone Call (if configured)
- 3) Open Door using PIN (either public PIN or private PIN)

Once alarm triggered, the GDS3710 will take snapshots when the abnormal open door happened, email and upload the snapshots to FTP or Central Server (when configured); call the configured alarm SIP phone, send the alarm output (if connected). User will only be able to disable the siren using the 3 methods mentioned above.

Detailed action information please refer to GDS37xx User Manual, "Alarm Action Settings" configuration.

Below are some diagrams showing the correct wiring to enable this new security enhancement feature:

GDS3710 Connection: IN2 set as Normal Close and “Fail Safe” Electric Strike using 3rd Party Power Supply

Digit Input	
Digit Input 1	Abnormal Door Control ▼
Digit Input 1 Abnormal Door Control Options	<input checked="" type="radio"/> Door 1 <input type="radio"/> Door 2
Digit Input 1 Status	Normal Close ▼

Figure 30: Digital Input set as Normal close

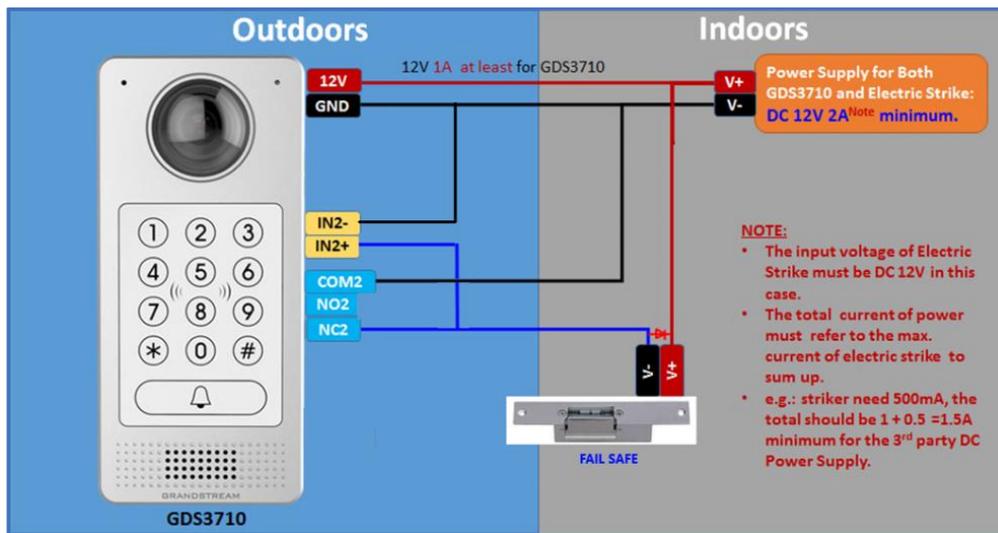


Figure 31: “Fail safe” Electric Strike using 3rd Party Power Supply

GDS3710 Connection: IN2 set as Normal Open and “Fail Secure” Electric Strike using 3rd Party Power Supply

Digit Input	
Digit Input 1	Abnormal Door Control ▼
Digit Input 1 Abnormal Door Control Options	<input checked="" type="radio"/> Door 1 <input type="radio"/> Door 2
Digit Input 1 Status	Normal Open ▼

Figure 32: Digital Input set as Normal open

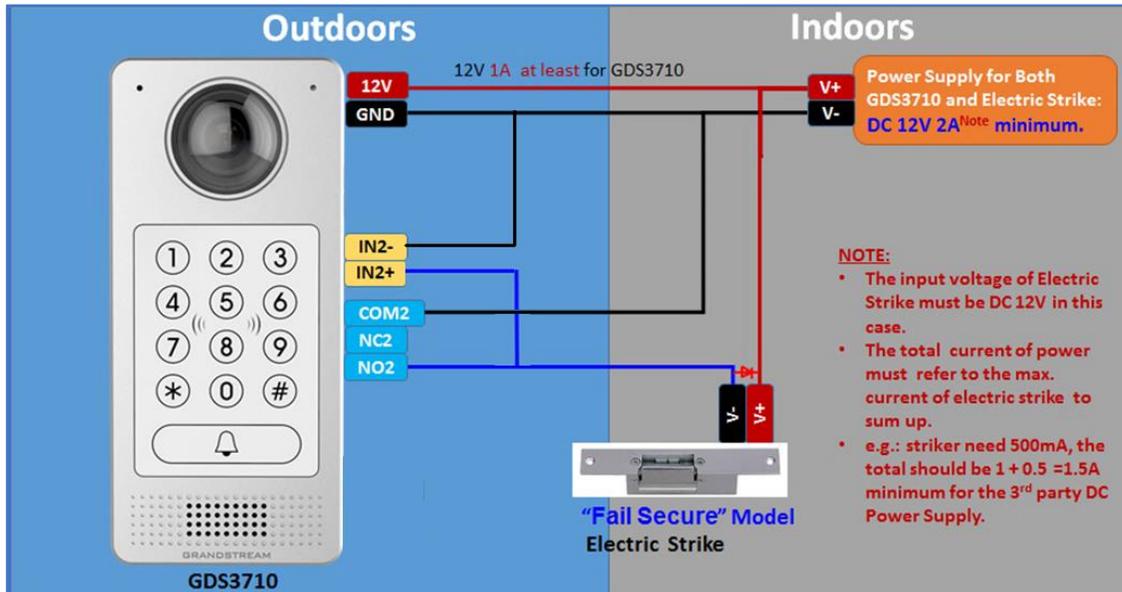


Figure 33: "Fail Secure" Electric Strike using 3rd Party Power Supply

GDS3710 Connection: IN2 set as Normal Open and "Fail Secure" Electric Strike using 3rd Party Power Supply with Door sensor

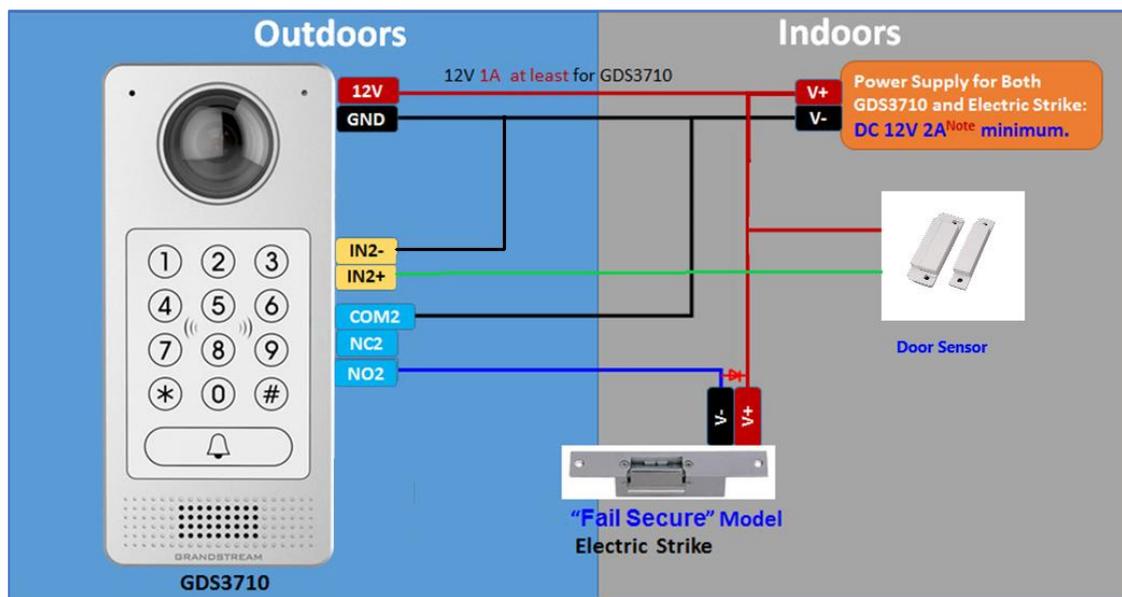


Figure 34: "Fail Secure" Electric Strike using 3rd Party Power Supply with Door Sensor

GSC3570 Secure Open Door via GDS37XX/GSC3570 Peering

This secure open door new feature is a major enhancement to GDS37xx, but need to include GSC3570 to make it a whole solution. The GDS37xx/GSC3570 will be peering together in LAN/WAN via IP/SIP, the door lock/strike will be wired to GSC3570Alarm_Out port and controlled by GSC3570. This way the strike control is inside the building with enhanced security. Below is a setup example:

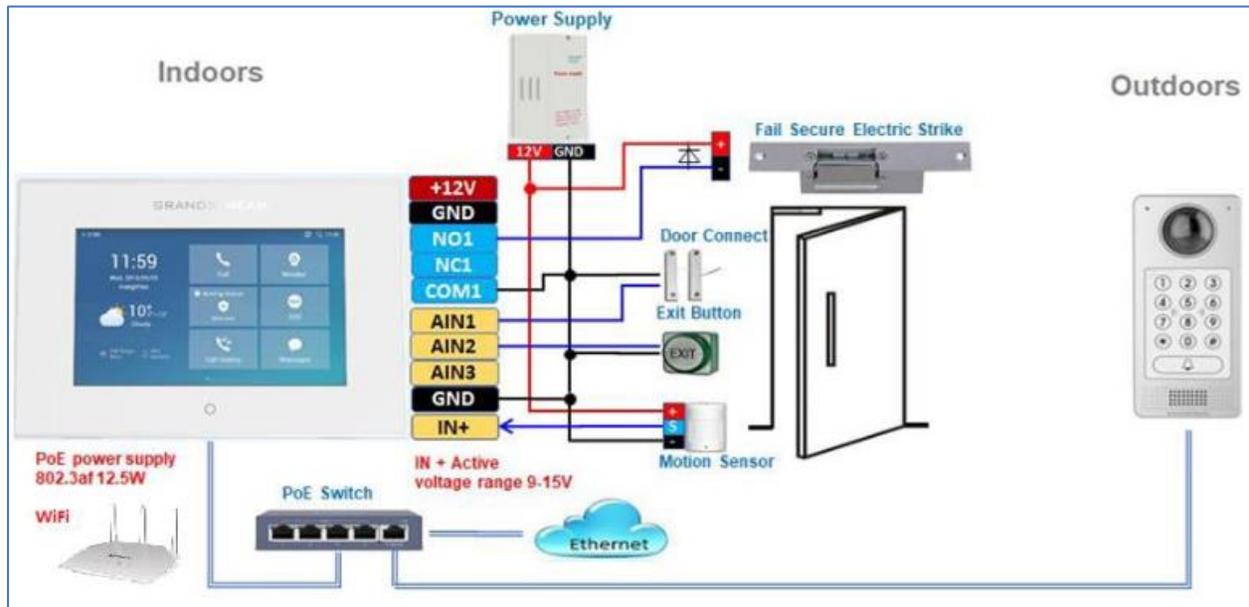


Figure 35: GSC3570 secure open door via GDS3710

Note:

Minimum firmware required for this to work:

- Outdoor Device: GDS3710(FW1.0.7.19) and GDS3705(FW1.0.1.13)
- Indoor Device: GSC3570(FW1.0.5.2)

The GDS37xx can be powered via PoE; the GSC3570 can connect to same network via PoE or WiFi. For open door combination with GSC3570 and GDS37xx, if GSC3570 needs to control multiple GDS37xx, it has to use SIP and the related GDS37xx will control the strike/lock. The different GDS37xx doorbell call will have "One Button Open Door" displayed when in "Preview" (early media support) or when call established.

The GSC3570 user will press the virtual button on touch screen to remotely open the door controlled by the related GDS37xx. There is no door limitation for such usage but only ONE DOOR can be opened at one time. It is just a SIP call open door application, but strike/lock control circuit is located outdoor.

For "Secure Open Door", the GSC3570 is peering with GDS37xx. The GSC3570 controlling the relay/strike/lock from inside the building (Unlike GDS37xx installed outside), but only ONE door can be controlled because GSC3570 only has one Relay Control circuit build in.

This peering can be via LAN/WAN but LAN is recommended and actually most of the application scene are in LAN environment because most likely the GSC3570 and GDS37xx are in the same building. Although SIP/UCM over Internet/WAN also works, it is recommended to use static IP if the GSC3570 (inside) and GDS37xx(outside) are at same location in the same LAN.

This setup is much simple and reliable in case there is network outage like Internet/UCM is down.

For the GSC3570 and GDS37xxpeering, it can be used via SIP only (Cloud or UCM); IP only (No SIP proxy or UCM but static IP address) and Mixed (SIP and fallback to IP if Proxy failed).

GDS3710 Web Configuration

This setup can be found under device web UI → Door System Settings → Basic Settings:

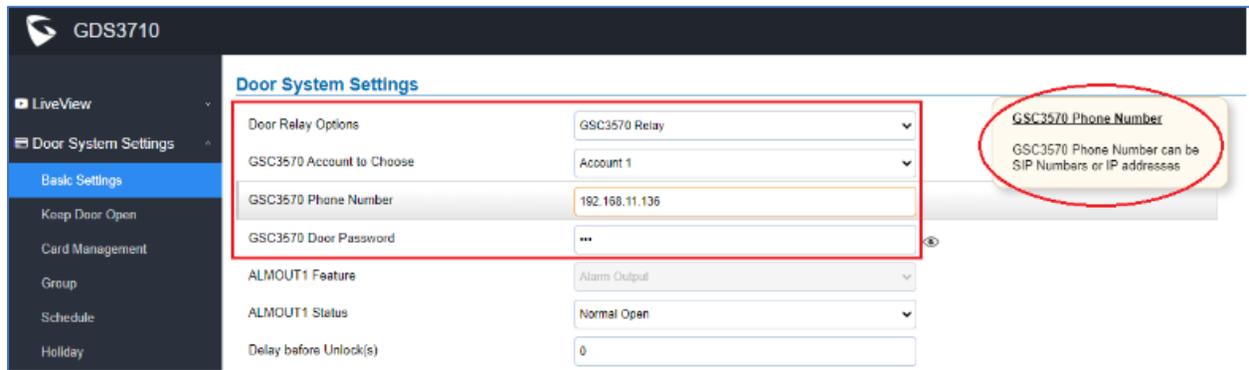


Figure 36: GSC3570 secure open door via GDS3710-GDS3710 configuration

GSC3570 Web Configuration

The GSC3570 side also need to be configured according, like below:

Settings		Grandstream Door System							
General Settings	Order	Account	System Identification	System Number	System IP Address	Door 1 Name	Door 1 Access Password	Door 2 Name	Door 2 Access Password
External Service	1	Account 1	Front_Door	873		Front_Door			
	2	Account 1	Back_Door	877		Back_Door			
Digital Output	3	Account 1	GDS3710	192.168.11.123	192.168.11.123	IP			

Figure 37: GSC3570 secure open door via GDS3710-GSC3570 Door System System configuration

Then we will be configuring the Digital Input on the GSC3570 as the figure below:

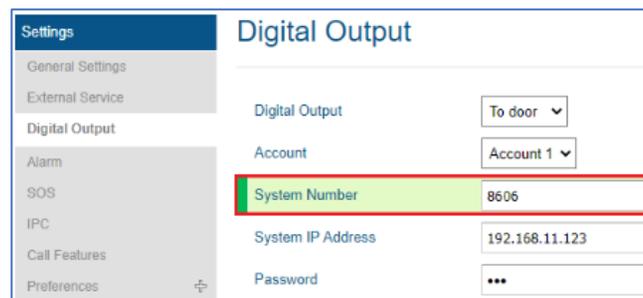


Figure 38: GSC3570 secure open door via GDS3710-GSC3570 Digital Input configuration

Notes:

- If the solution/integration is using static IP address without SIP Proxy, all the devices involved (GDS/GSC/IP Phone) should choose “NAT Traversal” to “No” and should NOT “Use Random Port”, otherwise will have problem of ghost call (SIP signaling working but NO media).
- The IP phone or GSC3570 can use any empty SIP account, meaning it can be mixed if Account 1 registered to UCM/Proxy and Account2 (blank) to use IP (but the account has to be configured as “Active”).

One-Way Interlocking Mode

This feature will allow GDS3710 to control two doors in one direction, with additional 3rd party window/door sensor installed accordingly (not provided by Grandstream). When configured and wired correctly, the two doors will operate under a controlling logic as below:

- 1) Only legal PIN or RFID card can open door when BOTH doors are detected closed.
- 2) When 1st door opened by valid user, the 2nd door is and will remain closed; the 2nd door will automatically open once detected the 1st door closed and programmed timer reached.
- 3) When 2nd door opening, the 1st door will NOT open even a valid PIN/RFID used.
- 4) If entering 1st door and after 1st door closed and 2nd door opened, the person failed to enter 2nd door promptly (after 2nd door opening time out) will be locked in between two doors until next transaction happens or ask help (e.g.: call posted number or press button if there is one) from security staff to open door remotely (via SIP call into GDS3710 or GDSManager, for example).

This open door logic will make sure two doors are open in “One-Way” direction, at any given time only one door can be opened, and only one legal open door request is allowed to execute.

The hallway or scene between two doors could be monitored by installing Grandstream IP cameras.

This feature can be used in application scene like: College Dorm, Bank Branches, Government Offices, Medical Clinics, Private Clubs, etc., where there are two doors in place, high security and flow control is required (only one entry per time) but security guard may not be on site always.

Below is the illustrating drawing of the application scene:



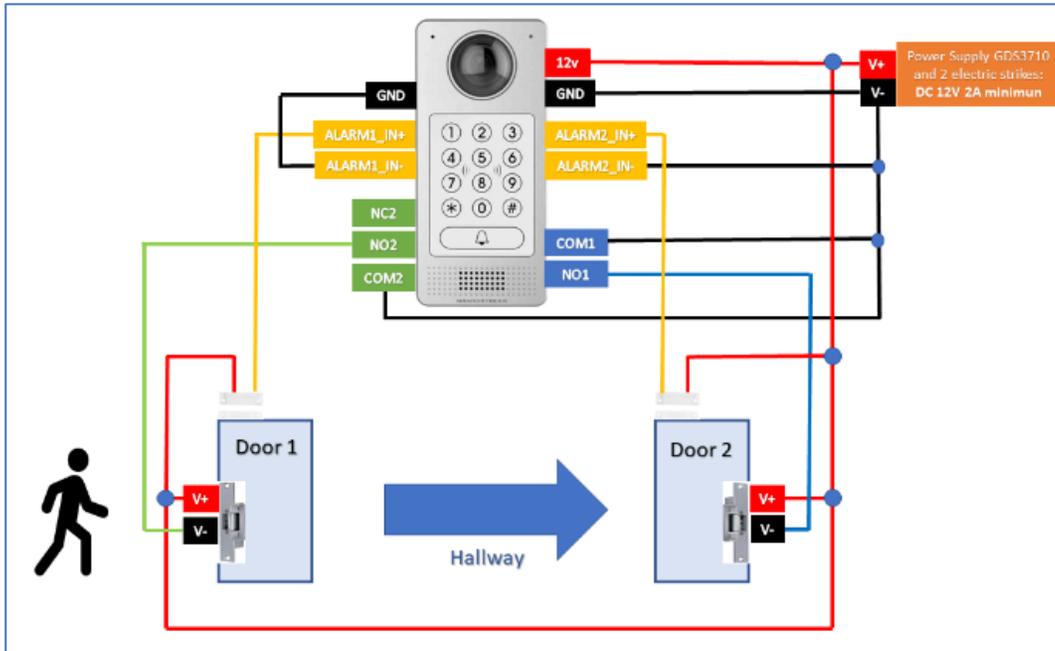


Figure 39: One-Way Interlocking Mode Diagram Example

Below is the wiring sample to implement this feature:

Note:

If required to use the same two doors for “Exit” direction, another GDS3710 is required and it can be configured in Door 2 to control “Exit” direction. The wiring/connection will be mirrored.

Web Configuration

This option can be found under device web UI → Door System Settings. Below example configuration screenshots are for reference only, customers need to test and get own parameters in field:

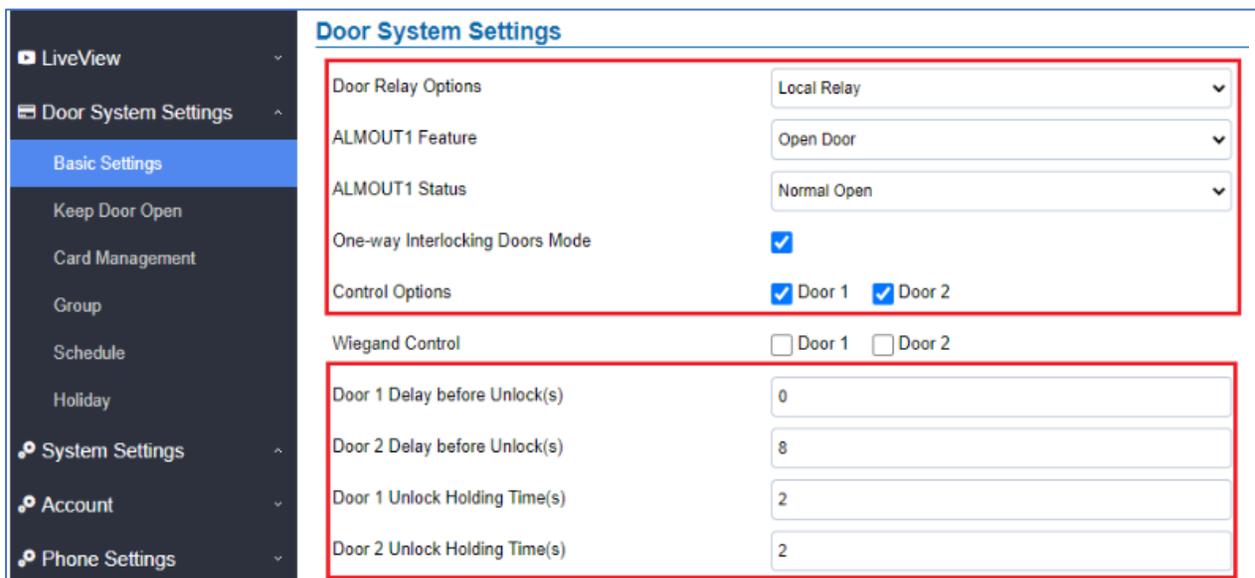


Figure 40: One-Way Interlocking Mode_GDS3710_Configuration_1



Notes:

- Door 2 Delay before Unlock(s): Will be the total transit time from Door 1 to Door 2 right after the Door 1 is closed (this time will be “Door 1 unlock holding time”).
- In above example, the Door1 unlock holding time is 2 seconds, the transit time of hallway is 6 seconds, therefore the Door 2 Delay before Unlock is set to 8 seconds.
- The transit time and unlock holding time will be decided and adjusted based on actual application scene by the installer or system integrator.
- COM1 (ALMOUT1) only has two sockets for wiring, and NO ONLY. If the connected strike/lock is a NO strike, this means ALMOUT1 Status should be set to “Normal Open” then door will be closed when power is lost.

Digital Input to Check Door Status (Door 1 & Door 2)

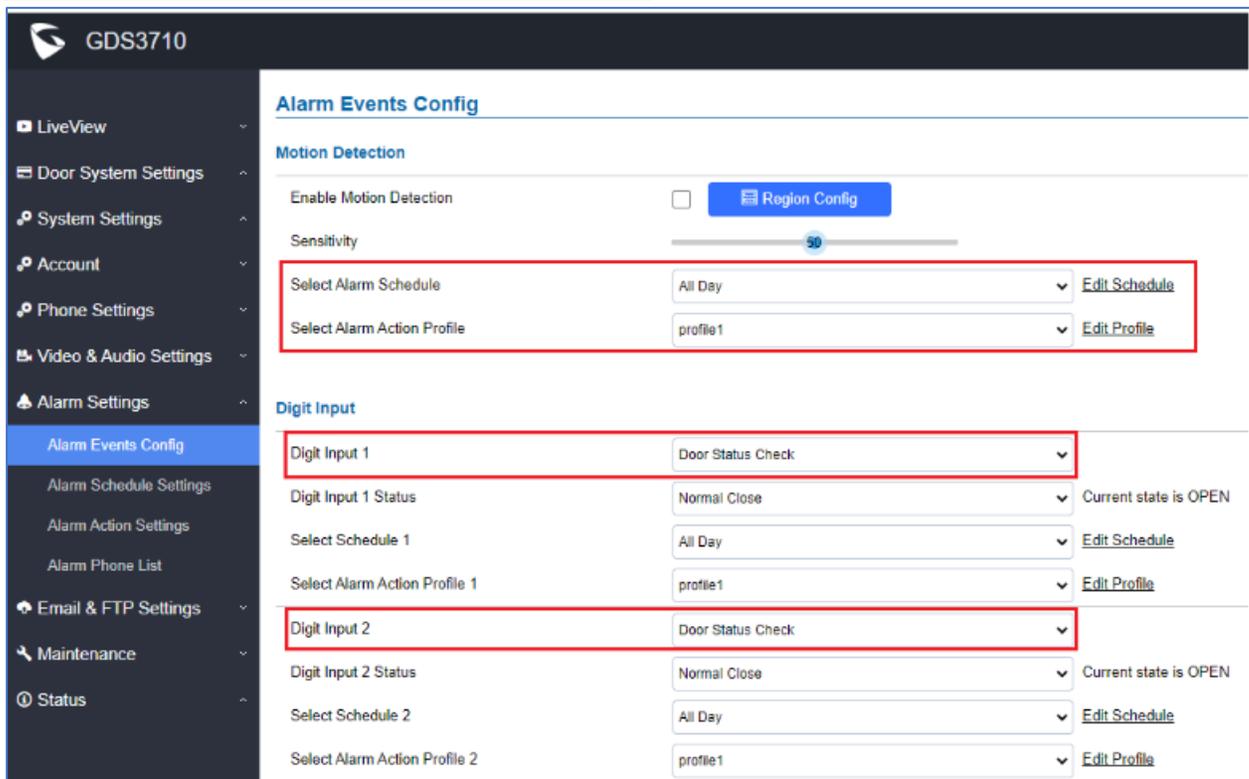


Figure 41: One-Way Interlocking Mode_GDS3710_Configuration_2

Proceed to **Alarm Settings** → **Alarm Events Config** → **Digit Input**, configured as follow:

- **Digit Input 1: Door Status Check.** The DI will validate the current status of the Door, whether it is close or open, based on the sensor signal sending to the “Digit input 1”.
- **Digit Input 1 Status:** If set to **Normal Open**: Configured door status check will be triggered when Digital Input Status switch from Close to Open, If set to **Normal Close**: Configured door status check will be triggered when Digital Input Status switch from Open to Close. By default, Input Digit 1 Status is “Disabled”.
- **Digit Input 2: Door Status Check.** The DI will validate the current status of the Door, whether it is close or open, based on the sensor signal sending to the “Digit input 2”.



- **Digit Input 2 Status:** If set to **Normal Open:** Configured door status check will be triggered when Digital Input Status switch from Close to Open, if set to **Normal Close:** Configured door status check will be triggered when Digital Input Status switch from Open to Close. By default, Input Digit 2 Status is “Disabled”.

Notes:

- “Alarm Schedule” and “Alarm Action Profile” must be configured and selected otherwise the Digit Input channel will not be activated.
- There are two doors wired with window/door sensor separately, please make sure the door sensor is wired to correct Digit Input channel and refer to sample wiring diagram for reference [Figure 39: One-Way Interlocking Mode Diagram Example].



Open Door via GDS37xx with or without a SIP Call

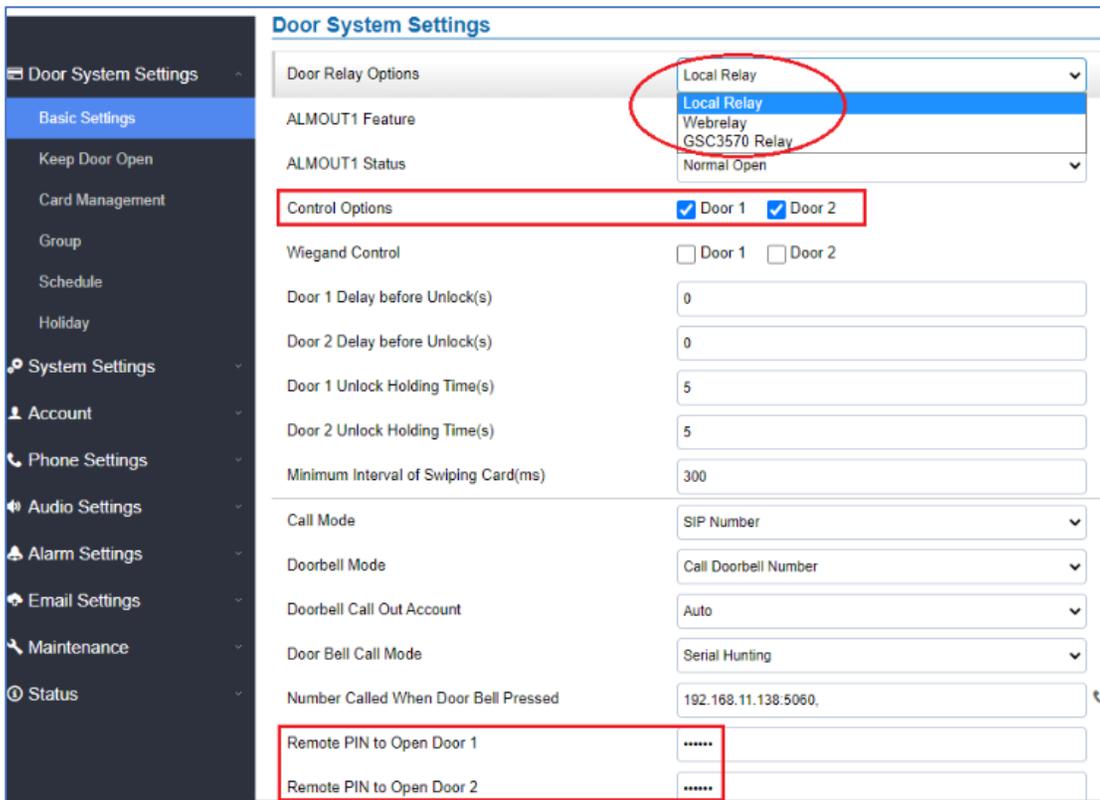
This feature needs related matching GDS37XX firmware to work. The minimum firmware version needed:

- **GDS3710: 1.0.7.19 or higher.**
- **GDS3705: 1.0.1.13 or higher.**

From GDS37XX side, the configuration is the same. Only difference is the number of doors be controlled: If using Local Relay controlled by GDS37XX, TWO DOORS can be controlled.

If using GSC3570 Relay, ONLY ONE DOOR can be controlled. The PIN and other settings are the same as SIP remote open door or GSC3570 secure open door.

The difference will come out at the touch screen UI operation of GSC3570.



Door System Settings

Door Relay Options: Local Relay

ALMOUT1 Feature: [Blank]

ALMOUT1 Status: [Blank]

Control Options: Door 1 Door 2

Wiegand Control: Door 1 Door 2

Door 1 Delay before Unlock(s): 0

Door 2 Delay before Unlock(s): 0

Door 1 Unlock Holding Time(s): 5

Door 2 Unlock Holding Time(s): 5

Minimum Interval of Swiping Card(ms): 300

Call Mode: SIP Number

Doorbell Mode: Call Doorbell Number

Doorbell Call Out Account: Auto

Door Bell Call Mode: Serial Hunting

Number Called When Door Bell Pressed: 192.168.11.138:5060

Remote PIN to Open Door 1: *****

Remote PIN to Open Door 2: *****

Figure 42: GDS37XX Configuration Example

Grandstream Door System										
Order	Service Type	Account	System Identification	System Number	System IP Address	Door 1 Name	Door 1 Access Password	Door 2 Name	Door 2 Access Password	
1	GDS	Account 1	Front_Door	873		Front_Door				
2	GDS	Account 1	Back_Door	877		Back_Door				
3	GDS	Account 1	GDS3710	192.168.11.125	192.168.11.125	IP				
4	GDS	Account 1	GDS3710	8606		SIP				
5	GDS	Account 1	GDS3705	192.168.11.116	192.168.11.116	IP1		IP2	***	
6	GDS	Account 1								

Figure 43: GSC3570 Configuration Example



Door opening with SIP Call:

When GSC3570 established call with GDS37XX, the screen will display virtual open door button(s), and user will press the button to open door:

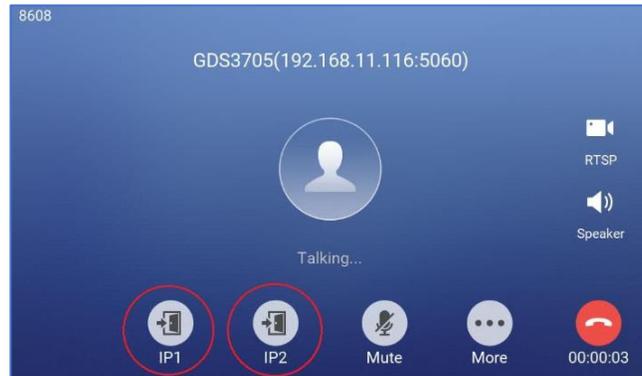


Figure 44: Open Door with SIP Call

GSC3570 Open Door NO SIP Call:

At the GSC3570 idle screen, press “Monitor →Door system”, the related GDS37XX will be displayed. In the blue bar, left is a “Phone” icon and right is the “Open door” icon. The “Phone” icon will establish SIP call as previous firmware behaved.

Press “Open door” icon, the GSC3570 will open door directly and NO SIP CALL will be established. Depending on how many doors controlled, if one door configured, the door will open directly; if two doors configured, another screen will pop up to allow user to choose which door to open, as shown below:

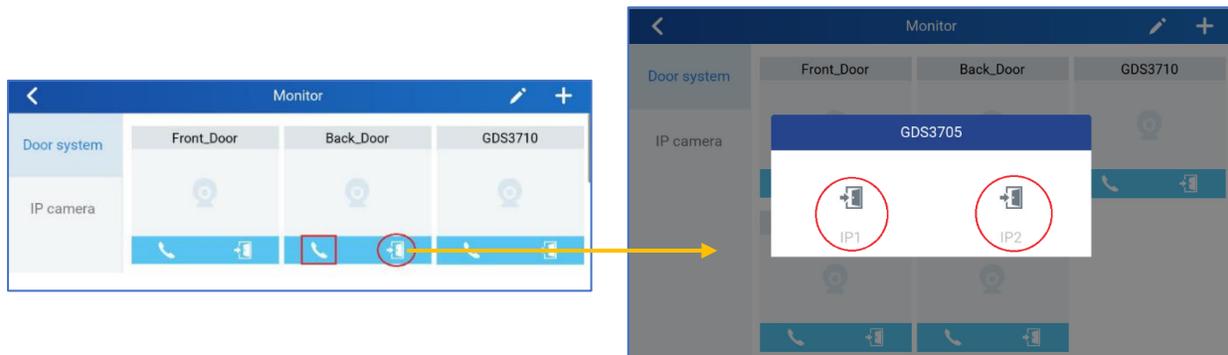


Figure 45: Open Door without SIP Call

When the door is successfully opened the following message will appear:

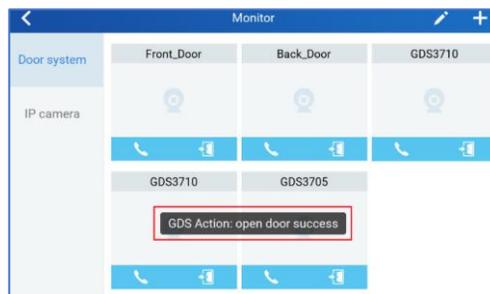


Figure 46: Open Door without SIP Call



GDS3710 HOME WEB PAGE

Once logged in successfully to the GDS3710, user will see the following page.

Note: the options displayed might differ from browser to another.

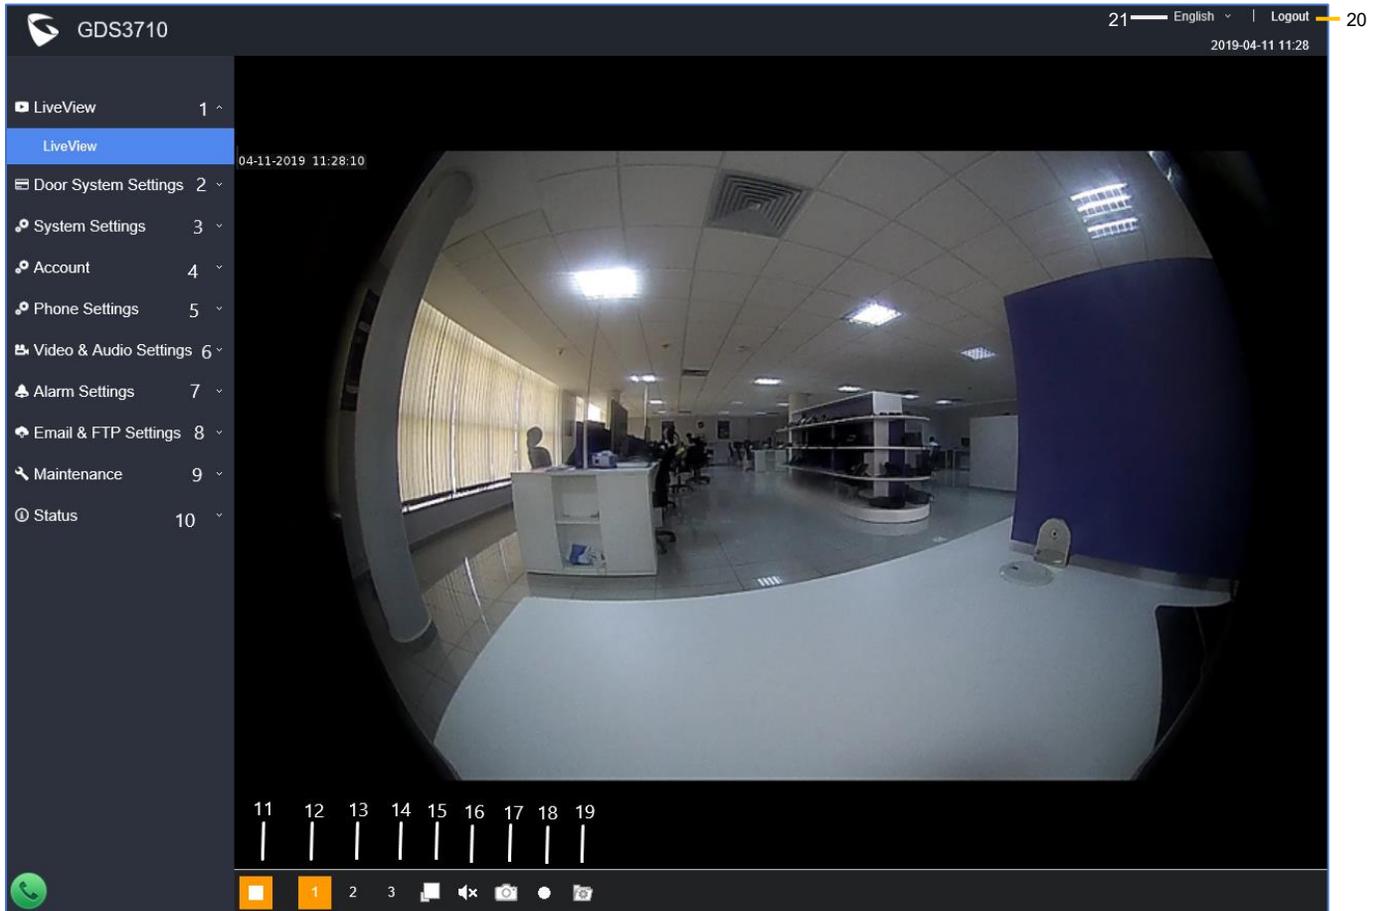


Figure 47: Home Page: Internet Explorer 11

Table 5: Home Page Description

Number	Fields	Description
1	LiveView	Access to live view stream page.
2	Door System Settings	Access to “Door System Settings” page.
3	System Settings	Access to “System Settings” page.
4	Account	Access to “Account” configuration page.
5	Phone Settings	Access to “Phone Settings” configuration page.



6	Video & Audio Settings	Access to "Video & Audio settings" page.
7	Alarm Settings	Access to "Alarm settings" page.
8	Email & FTP Settings	Access to "Email & FTP Settings" page.
9	Maintenance	Access to "Maintenance" page.
10	Status	Click to enter "Status" page.
11	Play/Stop	Start/Stop the video stream in the web page. (Internet Explorer 11)
12	Stream 1	Play the primary stream.
13	Stream 2	Play the secondary stream.
14	Stream 3	Play the third stream.
15	Window size	Resize the window. (Internet Explorer 11)
16	Audio	Click to mute / unmute the audio. (Internet Explorer 11)
17	Snapshot	Click to take a snapshot. (Internet Explorer 11)
18	Recording	Click to start recording. (Internet Explorer 11)
19	File Path Saved	Click to access Record and Capture paths. (Internet Explorer 11)
20	Logout	Logout from the web page.
21	Language	Select the webpage language.

GDS3710 Configuration & Language Page

- Once the IP address of the GDS3710 is entered on the user browser, the login web page will pop up allowing user to configure the GDS3710 parameters.
- When clicking on the "Language" drop down, supported languages will be displayed as shown in Figure below. Click to select the related webpage display language.



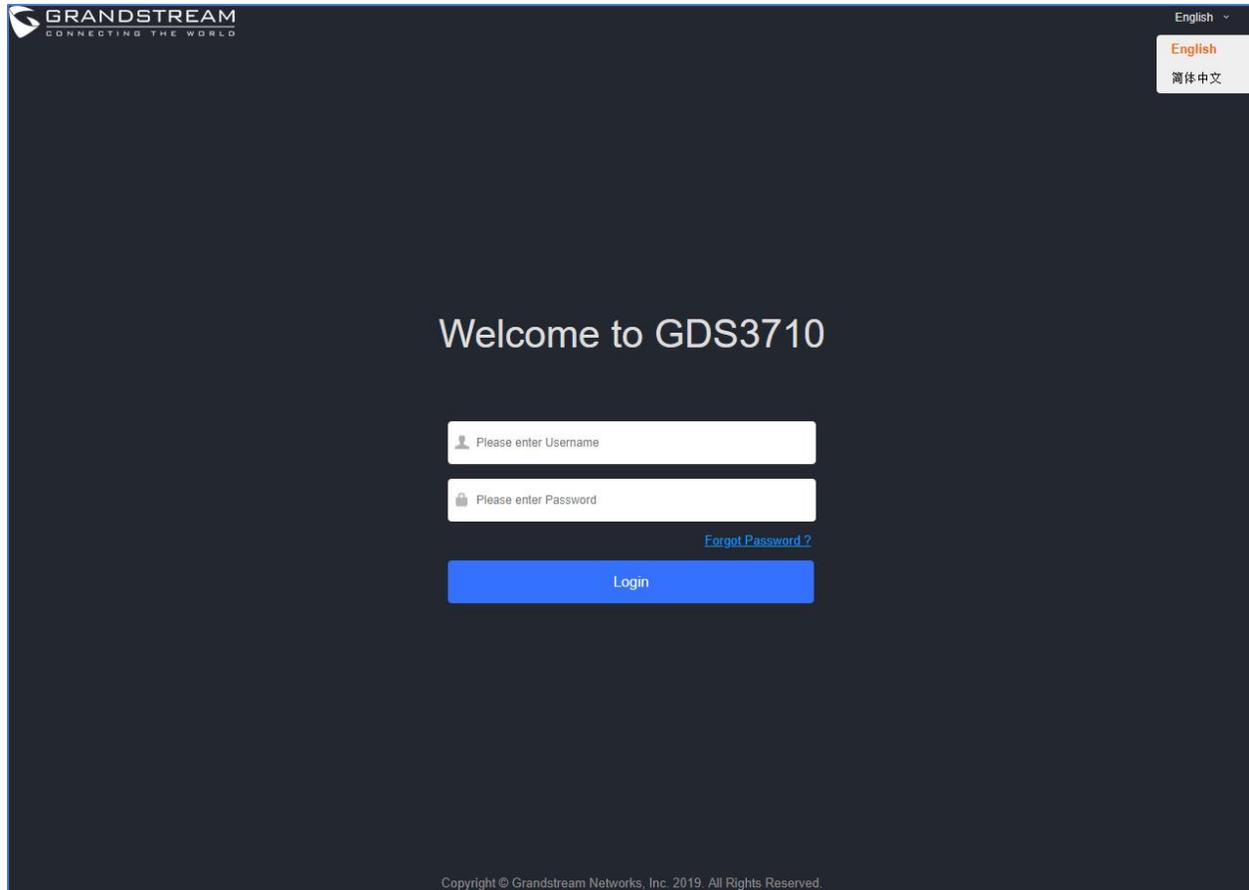


Figure 48: Switch Language Page

Note: Current firmware supports only English (default) and simplified Chinese.

GDS3710 SETTINGS

Live View Page

This page allows users to view the live video of the GDS3710 using popular browsers like Chrome or Firefox immediately without downloading and installing any plugins.

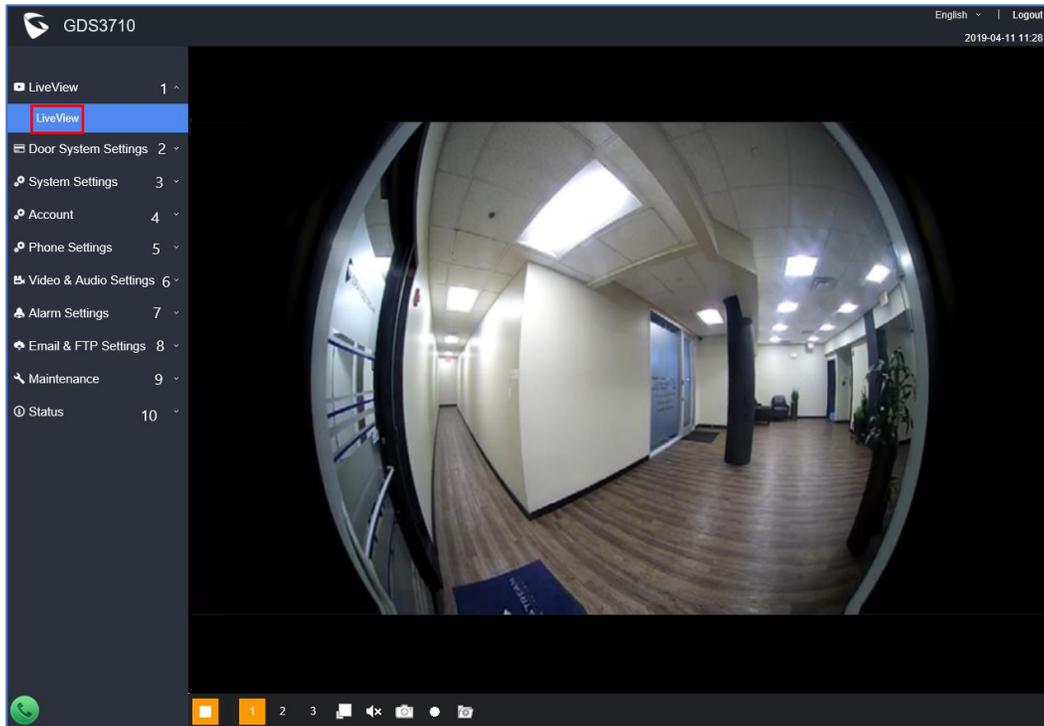


Figure 49: Live View Page: Google Chrome

Three streams are available:

- **Primary video stream:** 1920*1080 resolution, recommended for continuous full HD recording (If used with GXV355X NVR).
- **Secondary video stream:** 640*480 resolution, recommended for SIP/VoIP video calls (if used with GXV3240/GXV3275).
- **Third video stream:** 320*240 resolution, recommended for smartphone or Tablet Apps (IP Cam Viewer for instance).

Live Snapshot

Users can take view snapshots from GDS3710 live view via HTTP API, this can be used without installing the any browser plugin. Starting from firmware 1.0.3.34, users can deploy two methods to view snapshots depending on *JPEG Authentication Mode*, which can be set under following path:

Web UI → System Settings → Access Settings



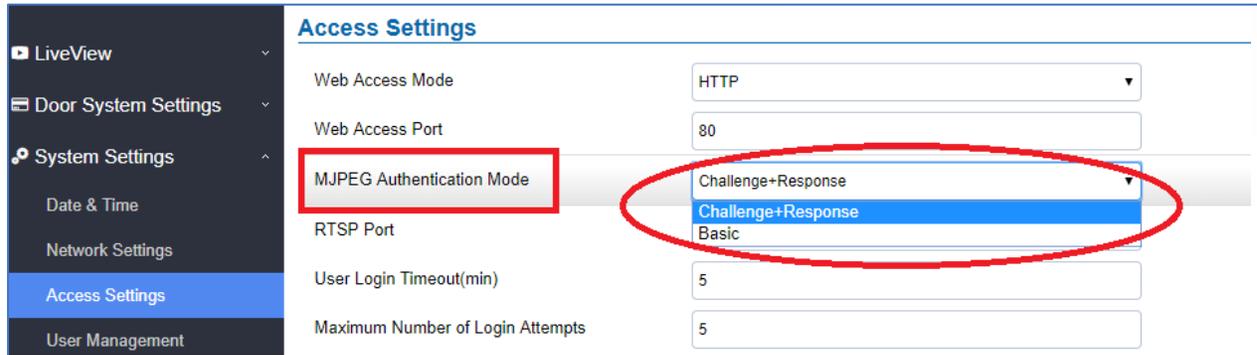


Figure 50: MJPEG Authentication Mode

1) Challenge+Response MJPEG Authentication Mode:

Please follow below steps in order to take a snapshot via HTTP commands on this mode:

1. In browser type in: **http(s)://IP_Address_GDS:Port/jpeg/view.html**
2. The browser will pop up the window above asking for credentials, user needs to enter admin credential.

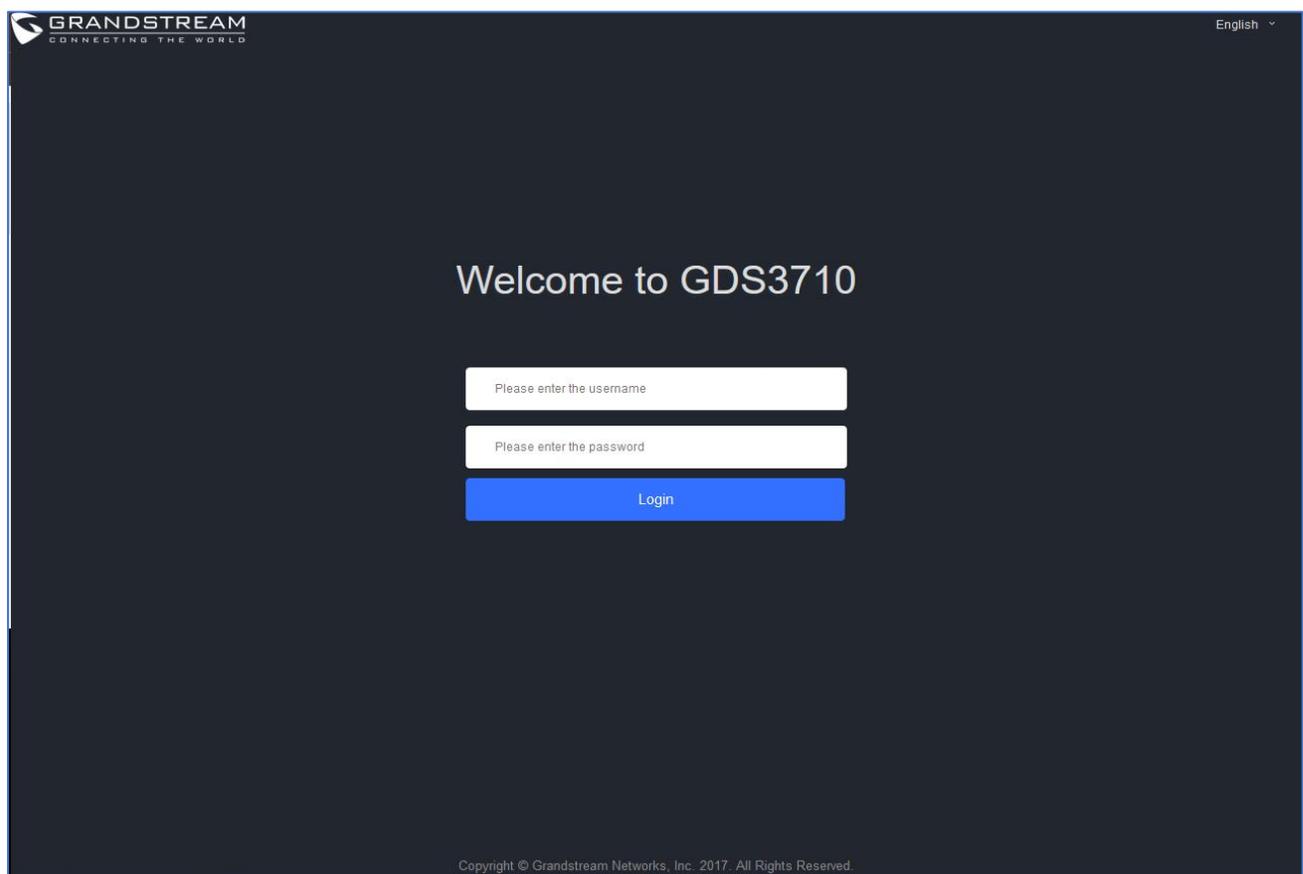


Figure 51 : Snapshot admin credential

3. The browser will show one frame of the video (720p) as a snapshot.



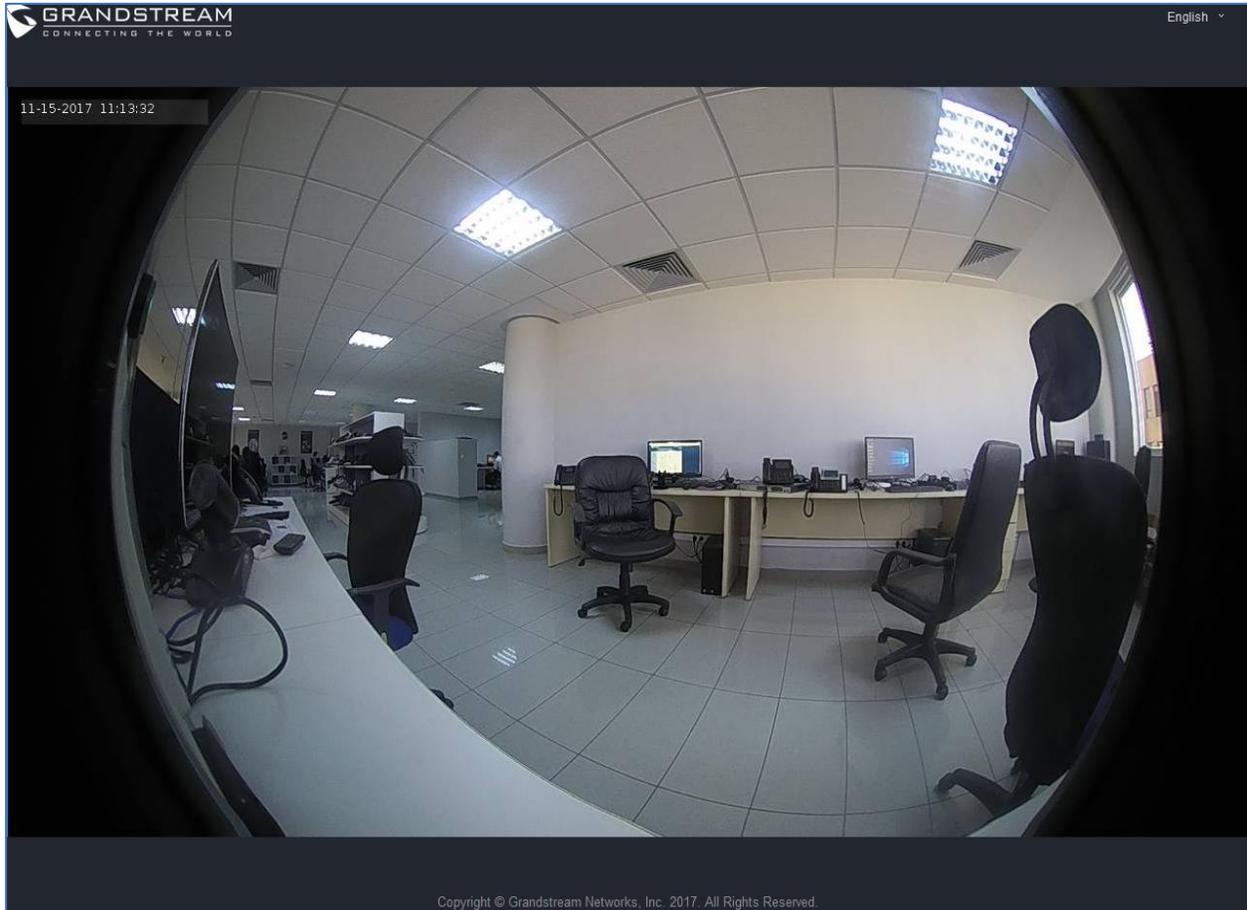


Figure 52 : Snapshot view using secured MJPEG authentication Mode

Note: This is supported on all browsers without installing any plugin and requires admin user authentication for more security.

2) Basic MJPEG Authentication Mode:

Please follow below steps in order to take a snapshot via HTTP commands:

1. In browser type in: **http(s)://admin:password@IP_Address_GDS:Port/jpeg/view.html**
2. The browser will show one frame of the video (720p) as a snapshot.

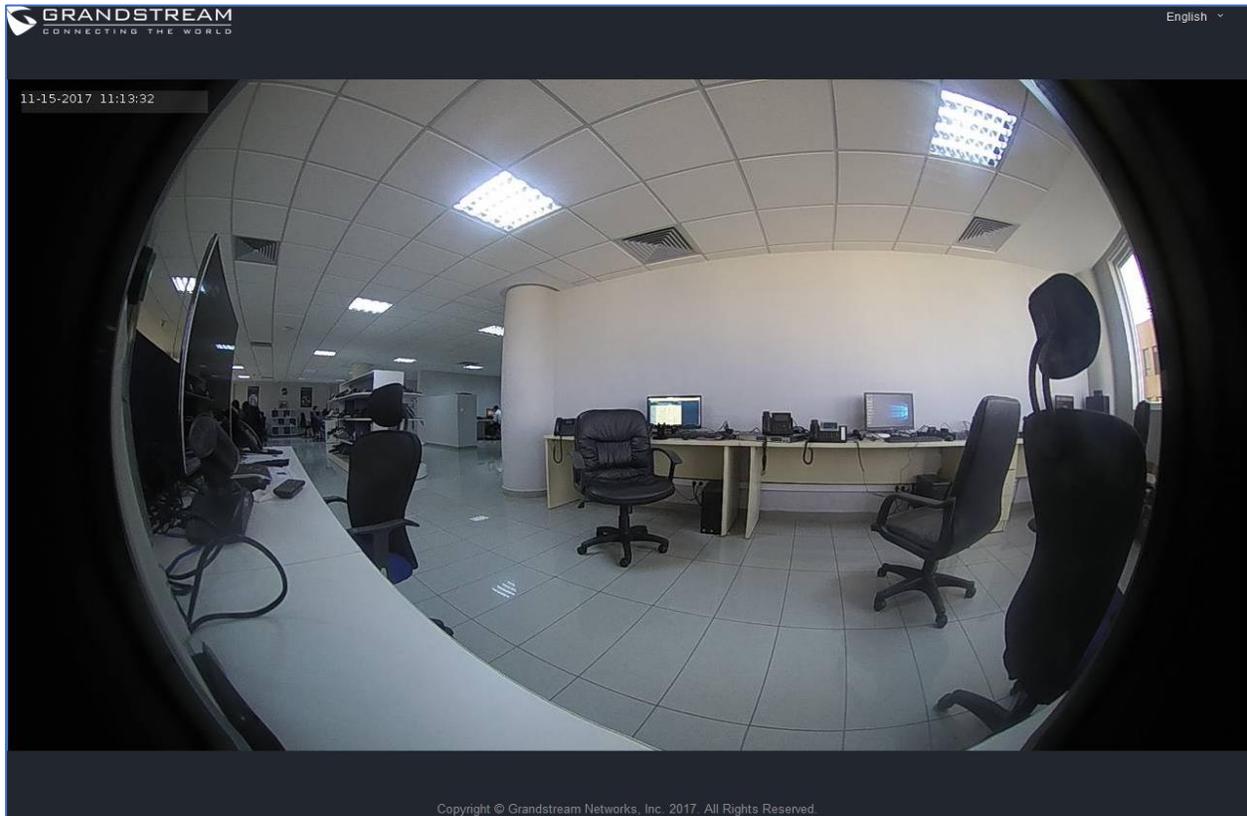


Figure 53: Snapshot view using Basic Authentication Mode

MJPEG Stream

The GDS3710 supports MJPEG Stream live viewing via HTTP API commands, this can be used without installing the Live view browser plugin. Starting from firmware 1.0.3.34, users can deploy two methods to retrieve MJPEG stream depending on *JPEG Authentication Mode*, which can be set under following path:

Web UI → System Settings → Access Settings

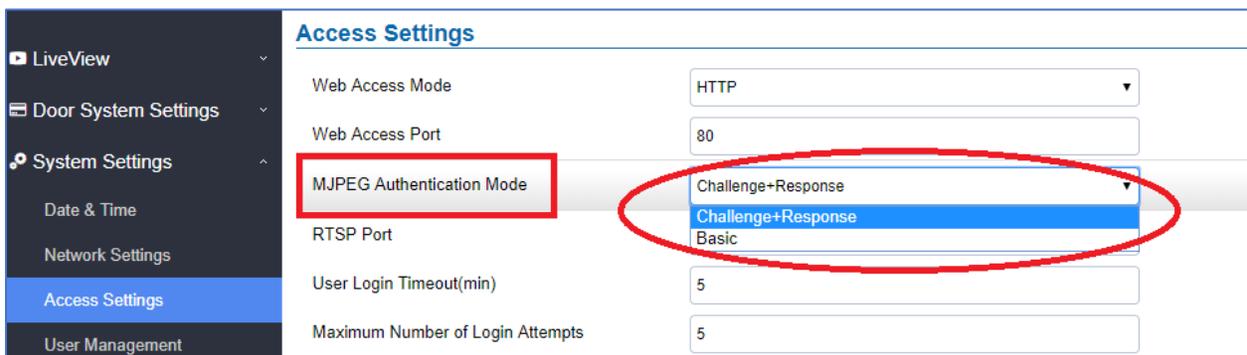


Figure 54: MJPEG Authentication Mode

1) Challenge+Response MJPEG Authentication Mode:



In order to get live view stream using MJPEG stream over HTTP command on this mode, please follow below steps:

1. In browser type in: **http(s)://IP_Address_GDS:Port/jpeg/mjpeg.html**
2. The browser will pop up the window above asking for credentials, user needs to enter admin credential.

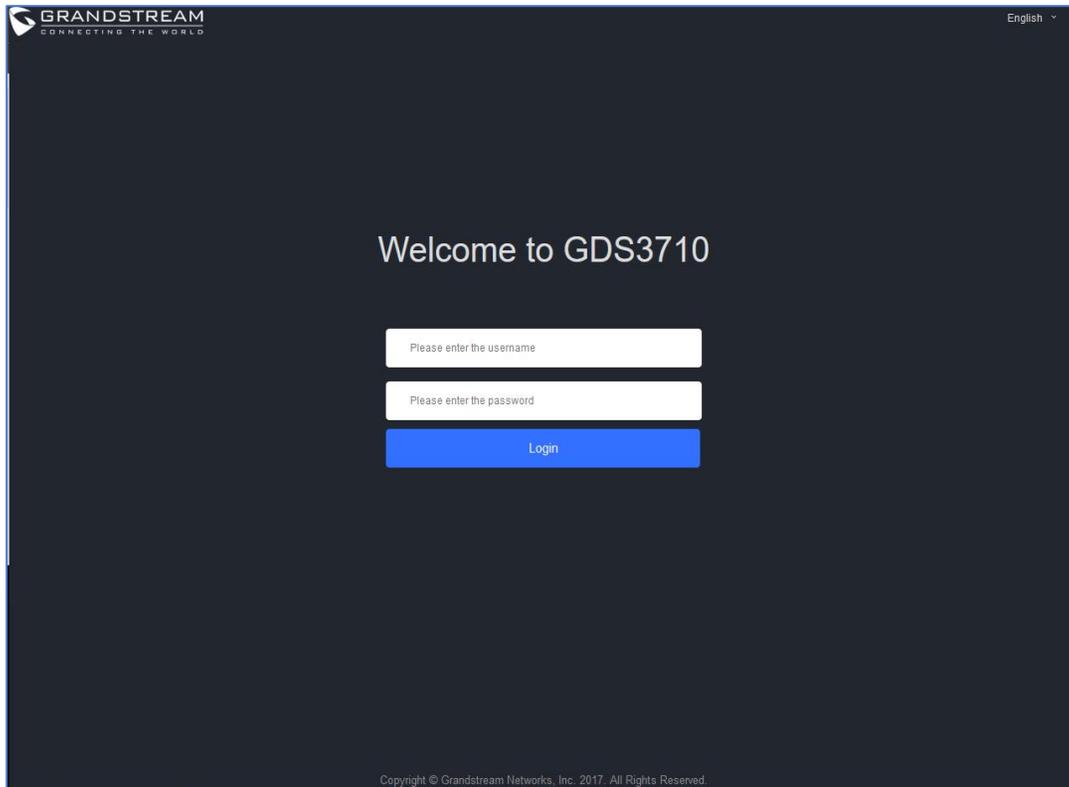


Figure 55 : MJPEG view admin credential

3. The browser will show MJPEG stream (720p).

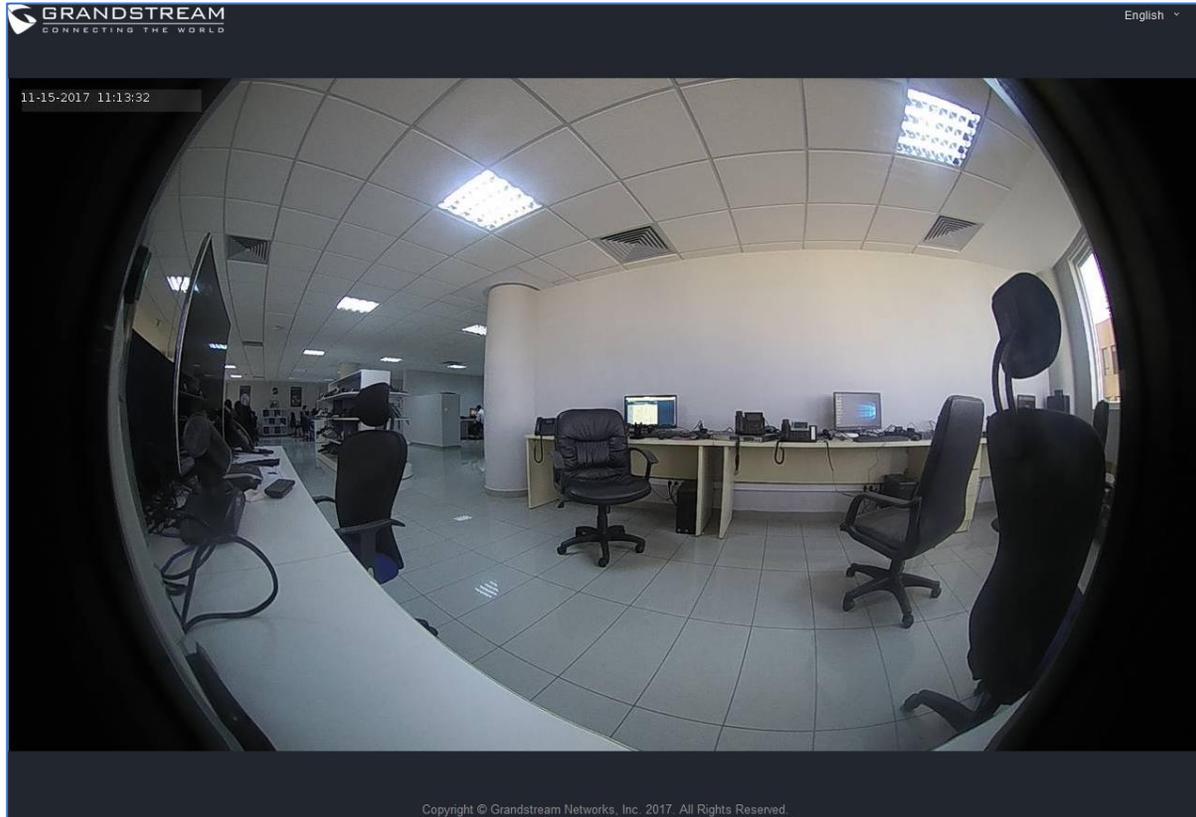


Figure 56 : MJPEG live view using secured MJPEG Authentication Mode

Note: This is supported on all browsers without installing any plugin and requires admin user authentication for more security.

2) Basic MJPEG Authentication Mode:

Please follow below steps in order to take a snapshot via HTTP commands:

1. In browser type in: **`http(s)://admin:password@IP_Address_GDS:Port/jpeg/mjpeg.html`**
2. The browser will show MJPEG stream (720p).

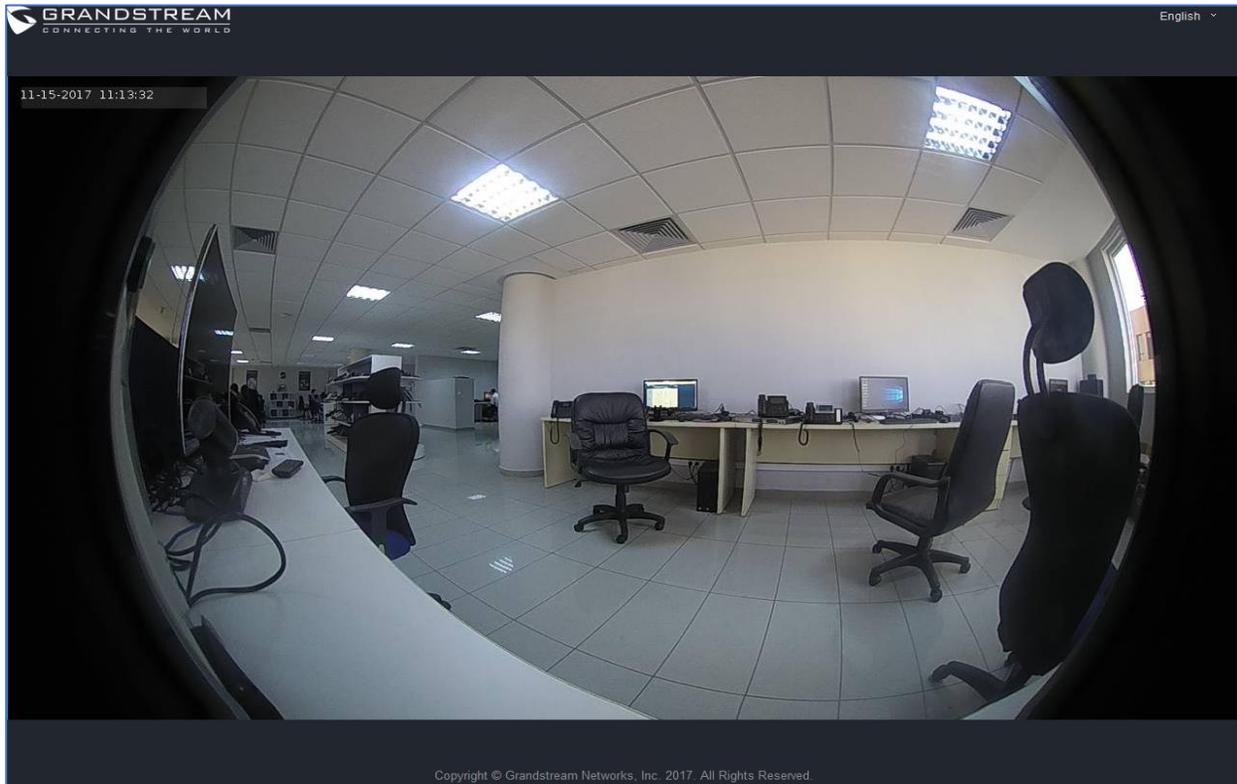


Figure 57: MJPEG view using Basic MJPEG Authentication Mode

Note: Similar command can be applied to open source application like **VLC MediaPlayer** to retrieve H.264 video stream with better quality: **rtsp://admin:password@IP_GDS3710:Port/X**

Where **X=0,4,8** corresponded to **1st, 2nd and 3rd** video stream (**2nd** recommended).

Door System Settings

Users can configure system operations parameters, like input PIN for the door and manage users' settings.

Basic Settings

GDS3710

- ▶ LiveView
- ☰ Door System Settings
 - Basic Settings
 - Keep Door Open
 - Card Management
 - Group
 - Schedule
 - Holiday
- ⚙️ System Settings
- 👤 Account
- 📞 Phone Settings
- 📺 Video & Audio Settings
- 🔔 Alarm Settings
- ✉️ Email & FTP Settings
- 🔧 Maintenance
- 📶 Status

Door System Settings

Door Relay Options	Local Relay ▼
Webrelay IP Address	<input type="text"/>
Webrelay Username	<input type="text"/>
Webrelay Password	<input type="password"/>
ALMOUT1 Feature	Alarm Output ▼
ALMOUT1 Status	Normal Open ▼
Delay before Unlock(s)	<input type="text" value="0"/>
Unlock Holding Time(s)	<input type="text" value="5"/>
Minimum Interval of Swiping Card(ms)	<input type="text" value="300"/>
Number of Snapshots when Door Opened	<input type="text" value="4"/>
Snapshot when Door Opened	<input checked="" type="checkbox"/> via FTP <input type="checkbox"/> via Email
Snapshot when Doorbell Pressed	<input type="checkbox"/> via FTP <input type="checkbox"/> via Email
Call Mode	Virtual Number ▼
Doorbell Call Out Account	Auto ▼
Doorbell Mode	Call Doorbell Number ▼
Door Bell Call Mode	Serial Hunting ▼

Save

Figure 58: Door System Settings Page

Table 6: Door System Settings

Door Relay Options	<p>This feature allows customers to integrate GDS37XX with 3rd party web relay to control door open over network, via script or other applications, to meet real application scene and enhance security. User need to input web relay IP address or domain name, as well as authentication information, to make this to work.</p> <p>There are two choices in the pull-down selection: Local Relay and Webrelay.</p> <ul style="list-style-type: none"> • Local Relay: Local Relay is the GDS3710 controlling the relay. The strike is wired into the COM2 or COM1 port of the GDS3710 depending 1 door or 2 door need to be controlled. • Webrelay: When Webrelay is selected, customers need to continue configure the webrelay IP address or domain name, together with credentials like Username and Password. When legal open door event happened, the configured web relay will get the communication from GDS3710, and will operate the strike to open door for the authenticated open door request. <p>Note: In web relay mode, the strike is wired to the web relay controller device.</p> <p>For more details, please refer to the Webrelay documentation from this link: webrelay user manual</p>
Webrelay URL ON	<p>When Door relay Option set to Webrelay, then enter the correct URL used by the third party controller so that the GDS3710 send the command to activate the relay.</p> <p>This adds an extra layer of security so when legal open door event happened, the configured web relay will get the communication from GDS3710, and will operate the strike to open door for the authenticated open door request or use that command to operate other industry application.</p> <p>Notes:</p> <ul style="list-style-type: none"> • Now there are two Webrelay URL fields available, with On or Off URL command allowed or other usage URL command allowed. Also allow Username and Password configured if the 3rdparty Webrelay requiring this security feature. • If some 3rdpartyWebrelay only support one URL command, then just leave another Off URL blank, or put whatever there as long as it is NOT a URL command.
Webrelay URL OFF	<p>When Door relay Option set to Webrelay, then enter the correct URL used by the third party controller so that the GDS3710 send the command to disable the relay.</p>
Webrelay Username	<p>Enter the web relay username.</p>
Webrelay Password	<p>Enter the web relay password.</p>



ALMOUT1 Feature	<p>This option allows to choose to use Alarm_Out (COM1) interface for either as alarm out with 3rd party device, or to control a second door “Door 2” (the two functions are mutual exclusive).</p> <p>When option “Open Door” is selected, will enable GDS3710 to control the operation of two doors via RFID, local and remote PINs.</p>
ALMOUT1 Status	Select Normal Open or Normal Close depending on the lock used.
Delay before Unlock (s)	Device will open door after specified delay (in seconds) when user issuing the authorization.
Unlock Holding Time (s)	<p>Configures the lock holding time, in seconds (default value is 5 seconds).</p> <p>Device will hold the door unlocked for this specified duration.</p> <p>Range: 1-1800 seconds.</p>
Minimum Interval of Swiping Card (ms)	Defines the interval in ms to swipe consecutive RFID cards. The range should be between 0ms and 2000ms.
Number of Snapshots when Door Opened	<p>Define number of snapshot to be sent by the GDS (via FTP or Email)</p> <p>Maximum up to 4 screenshots.</p>
Snapshot when Door Opened	User can choose to email the snapshot when door is opened without sending the snapshots via FTP to the FTP server.
Snapshot when Doorbell Pressed	User can choose to email the snapshot when doorbell pressed without sending the snapshots via FTP to the FTP server.
Call Mode	Chooses whether to make call to the SIP number or Virtual Number when dialing from the GDS3710 keypad.
Doorbell Call Out Account	This option sets the account to be used to make call upon the doorbell trigger. If set to Auto, the GDS will use the first available account.
Doorbell Mode	<p>Configures the action to be taken when the doorbell is pressed, three options are available:</p> <ul style="list-style-type: none"> • Call Doorbell Number: when Doorbell is pressed, a call will be made to the “Number Called When Door Bell Pressed” • Control Doorbell Output (Digital Output 1): when Door Bell is pressed electronic lock for Output 1 is opened. • Both of Above: When selected, both Call Doorbell Number and Control Doorbell Output options are enabled.



Door Bell Call Mode	<p>Select the ring strategy for the Numbers Called when pressing the Door Bell button to be either Serial or Parallel:</p> <ul style="list-style-type: none"> • Serial Hunting: the configured extensions and/or IP addresses will ring one after one by order. • Parallel Hunting: The configured extensions and/or IP addresses will ring simultaneously (up to 4 simultaneous SIP calls).
Number Called When Door Bell Pressed	<p>Configures SIP extension number (SIP Server mode), or IP address with port number (peering mode), to be called when the Door Bell is pressed:</p> <ul style="list-style-type: none"> • SIP Server mode: <ul style="list-style-type: none"> - The field can be configured to store multiple one or multiple SIP extensions, if configured with multiple extensions (ex: 1001, 1002, 1003), separated with “,” the GDS3710 will ring one extension after the other in a Serial Hunting Mode (GDS will ring each extension by default 15 seconds, this can be changed on the Ring Timeout) or ring them simultaneously in Parallel Hunting Mode. - When using UCM, users can also configure there a Ring Group extension (6400 for example) that will ring multiple extensions simultaneously, or one by one depending on the Ring Group ring strategy. - If all phones are GXP21XX, the phone will stream the video frame by frame and users can open door either by pressing Remote_PIN# or by pressing Open Door button if already configured. - If early medial is enabled on phone side, user can send the PIN code using the Open-Door button before answering the call (Of course users can open the door also after answering the call). • Peering mode: <ul style="list-style-type: none"> - User should configure multiple IP addresses of phones instead of SIP extensions, when Door Bell pressed the GDS3710 will ring the configured IP Addresses in Serial or Parallel Mode according to Doorbell Call Mode strategy. - If early media is enabled, the GXV32XX will receive the video stream while it is ringing, and user can open door by pressing the Open-Door button if already configured (Of course users can open the door also after answering the call). - GXP21XX phones receive the GDS3710 video using JPEG streaming this means that it will receive video if early media is enabled or disabled. Note: This field supports a Maximum of 256 characters.



Maximum Number of Dialed Digits	Configure the maximum digits allowed to dial in the keypad. Once the configured condition satisfied, the device will send out the digit to call automatically without pressing #. Disabled if set to 0.
No Key Input Timeout(s)	Defines the timeout (in seconds) for no key entry. If no key is pressed after the timeout, the digits will be sent out without pressing #. The default value is 4 seconds. The valid range is from 1 to 15.
Press Doorbell Schedule	Configure a schedule for the Doorbell button, once configured, the doorbell will turn ON/OFF based on configured schedule. Default setting is "All Day".
Remote PIN to Open the Door	<p>Configures PIN code stored in the GDS3710, remote SIP phone needs to input and match this PIN (the PIN is sent via DTMF while in call) so that the GDS3710 can open the door.</p> <p>Note: For enhanced security, when the call is initiated from GDS then only the numbers existing in "White List" will be able to use DTMF PIN to open door remotely.</p>
Local PIN Type	<p>Three options are available: Private Card PIN, Unified PIN or Card and Private PIN.</p> <ul style="list-style-type: none"> Private PIN: Means every member has a private PIN, the GDS will record who unlocked the door every time. Users need to enter the following sequence from the GDS3710 to open the door [*Virtual Number*Private PIN#]. <p><u>Notes:</u></p> <ol style="list-style-type: none"> When Local PIN type is set to private PIN, users can also open the door by swiping their cards. If "Disable Keypad SIP Number Dialing" is checked, users will be able to open door using private PIN with following sequence [Private PIN#]. <p>Note: Door can still be opened by Card and with the sequence [*Virtual Number*Private PIN#].</p> <p>For more details and conditions, refer to [<i>Disable Keypad SIP Number Dialing</i>].</p> <ul style="list-style-type: none"> Unified PIN: Means all members share a same PIN to unlock the door. Users need to enter the following sequence from the GDS3710 keypad to open the door [*Local PIN to Open the Door#]. <p><u>Notes:</u></p> <p>If "Disable Keypad SIP Number Dialing" is checked, users will be able to open door using Local PIN with following sequence [Local PIN#].</p> <ul style="list-style-type: none"> Card & Private PIN: Means every member needs to swipe his card and enter his private PIN to open the door using the following sequence [Swipe the card + * Private PIN#].



Local PIN to Open the Door	<p>Configures PIN stored in GDS3710, input locally this PIN on the GDS3710 keypad will unlock the door.</p> <p>This feature needs Private PIN, means every member has a private PIN, the GDS will record who unlocked the door every time.</p> <p>Users need to enter the following sequence from the GDS3710 to open the door [*Virtual Number*Private PIN#].</p> <p>Note: When local PIN type is set to private card PIN, users can also open the door by swiping their cards.</p>
Local PIN to Open Door Schedule	<p>Configure a schedule for the Local PIN to open the door. Once configured, the door opening ability using local PIN with turn ON/OFF based on configured schedule. Default setting is "All Day".</p>
Enable DTMF Open Door	<p>When enabled, remote SIP phones can open the door while in call by entering the remote PIN code configured (the PIN code is sent via DTMF). Default settings is disabled.</p>
Enable Guest PIN	<p>Enables password entry for guests.</p>
Guest PIN	<p>Configures the password that will be used by guests.</p>
Guest PIN Start Time	<p>Selects the start time when the Guest PIN start to take effect.</p>
Guest PIN End Time	<p>Selects the end time when the Guest PIN will stop working.</p>
Disable Auto Answer	<p>If checked, GDS3710 will not answer incoming calls automatically, users can press any key to answer the call. Default setting in unchecked.</p>
Enable Doorbell Button to Hang up Call	<p>If checked, Users can hang up an active call when pressing the doorbell button. Enabled by default.</p>
Disable Keypad (except the Doorbell Button)	<p>When checked the Keypad will be disabled, only Door Bell button can be pressed.</p>
Enable On Hook After Remote Door Opened	<p>When checked calls will be disconnected automatically 5 seconds after the remote open door event.</p>
Enable HTTP API Remote Open Door	<p>Enabling this option allows to use HTTP API command to open the door remotely.</p> <ul style="list-style-type: none"> • Disable: to disable the option. • Challenge + Response Authentication: this option allows the use of a multi-steps method to authenticate • Basic Authentication: this option uses a simple request to authenticate:



	<p>1. Open the door command example: https://admin:password@192.168.23.123/goform/apicmd?remotepin=12345&type=1</p> <p>2. Close the door command example: https://admin:password@192.168.23.123/goform/apicmd?remotepin=12345&type=2</p> <p>Important note: We will not be responsible for any security problems resulting from opening the HTTP API remote function, this option is disabled by default and the user should enable it while knowing how to mitigate the risk.</p>
Disable Keypad SIP Number Dialing	<p>When Keypad SIP number Dialing disabled, device will interpret each digit entry as private-password open door request after pressing #.</p> <p>Notes:</p> <ul style="list-style-type: none"> • “Local PIN Type” should choose “Private PIN”. • Dial keypad to make SIP call will NOT work (except for doorbell button call). • Private PIN must be UNIQUE among users, otherwise the door will still open but log will NOT tell who opened the door due to duplicated PIN and whoever user last matched in the database with the Private PIN will be shown in the log.
Enable Card Issuing Mode	<p>Enables RFID card issuing/program into the GDS3710. When selected sweeping an RFID card into the GDS3710 will add card information into.</p> <p>[Card Management]</p>
Card issuing State Expire Time(m)	<p>Card issuing mode will be automatically disabled when timer reached (The range of value is 1 – 1440, in minutes).</p>
Enable Key Blue Light	<p>When checked, the blue light will be activated when pressing the GDS3710 Keys.</p>
Enable Background Light	<p>When checked, the background light will turn on once clicking the GDS3710 Keys.</p>
Enable Doorbell Blue Light	<p>When enabled, Doorbell LED will light based on the configured Start/End Time. For instance, this option can be used when GDS is deployed on dark environment, the GDS will be located easily using Doorbell LED.</p>
Enable Keypad Blue Light	<p>When enabled, Keypad LED (except for Doorbell LED) will light based on the configured Start/End Time. For instance, this option can be used when GDS is deployed on dark environment, the GDS will be located easily using Keypad LED.</p>
Central Mode	<p>If enabled, Group/Schedule/Holiday can only be synchronized from the Central (GDS Manager), local configuration will not be allowed.</p> <p>If disabled, only local configuration from GDS3710 is allowed.</p>



Key Sensitivity Level	<p>Set the sensitivity level:</p> <p>Default: with this mode, the GDS3710 is using less sensitivity keypad parameters which applied to most usage scenes, especially in warm and high humidity places like tropic regions or places near seaside or riverside where high humidity weather condition exists, especially in Summer.</p> <p>High: This option is designed for application scenes located in high latitude regions normally very cold and user might need to press the keypad with gloves. Due to the sensitivity is high, false positive might happen if such parameter used in different place like low latitude environment.</p> <p>Notes: Most application scenes the Default setting of this firmware is good enough for application. Please use Default setting unless the usage scene really needs high keypad lever sensitivity.</p> <p>If with default or low sensitivity keypad, the false positive ghost call issue still happens frequently, that might indicate an inappropriate wiring or installation, or maybe the hardware faulty. Please contact Our Grandstream Support for assistance to resolve such problem.</p>
Key Tone Type	<p>Configures the key tones for the GDS3710.</p> <ul style="list-style-type: none"> • Default: Beeps will be played when pressing the GDS3710 keys. • DTMF: Tones will be played when pressing the GDS3710 keys. • Mute: No sound will be played when pressing keys.
Enable Wiegand Input	<p>This option needs to be enabled when GDS is connected to the wiegand. output device (RFID card reader for example)</p>
Wiegand Output	<p>This option is to be enabled when the GDS is the wiegand output device. (example: input device is a door controller)</p>

Notes: Remote SIP phone needs password (digits 0-9 only, ended with # key) matching the configuration on the web page to open the door (via DTMF).

GDS3710 support RFID for multiple users to open door, therefore every user has its own PIN. For environment with large number of users (limit is 2000), it's difficult for the GDS3710 to manage all these users, so a separate PC or Server should be involved for such kind of management and monitoring.

In environments with large number of users (limit is 2000), the GDS3710, another possibility would be to set one unified Local PIN for opening the door for all the users.

Using Alarm Out (COM 1) to Control a Second Door

Starting from firmware 1.0.5.2, user can now set Alarm_Out (COM1) interface to control a second Door, in additional to the existing Locker/COM2 interface (controlling Door1).



This feature allows GDS3710 to control the operation of two doors via RFID, local and remote PINs.

For example, a 3rd party Wiegand Input device or GDS3710 can be installed at Door2 with related cable wired into the control GDS3710 installed at Door1. The Door1 and Door2 can be configured to be open by programmed RFID cards, PINs either separately or both.

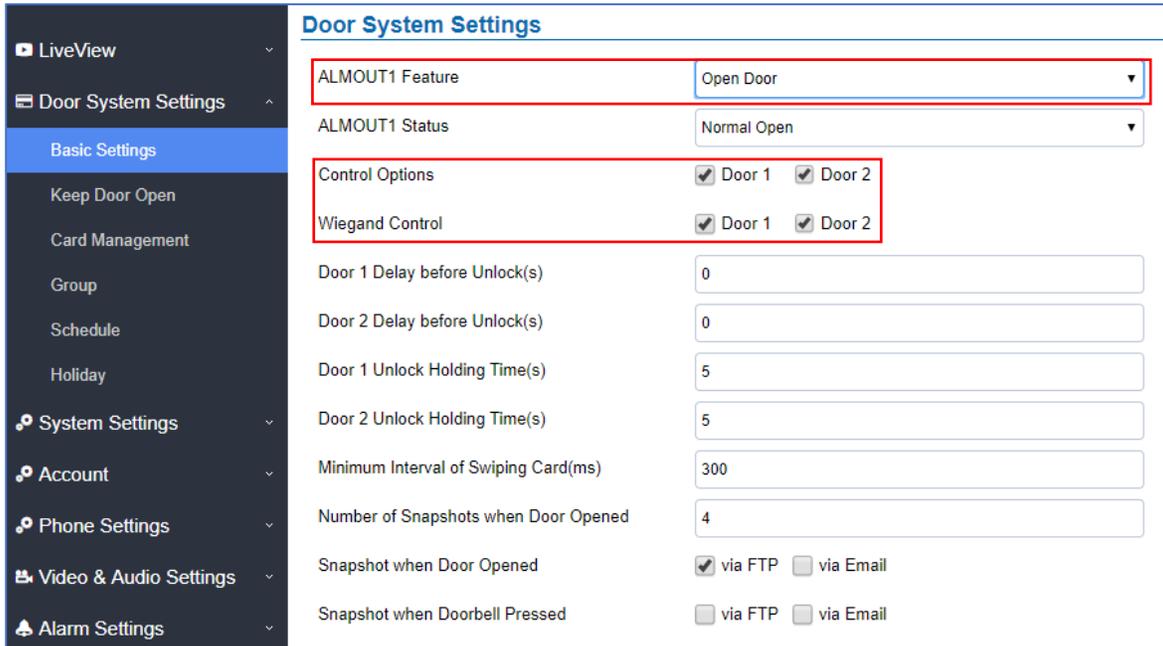


Figure 59: Alarm_Out1 Feature

- **Interface for Door Control (which Door can be OPEN):**

If Alarm_Out (COM1) interface is set to control Door 2 opening, “ALMOUT1 Status” can be configured by choosing “Normal Open” or “Normal Close” based on the strike used.

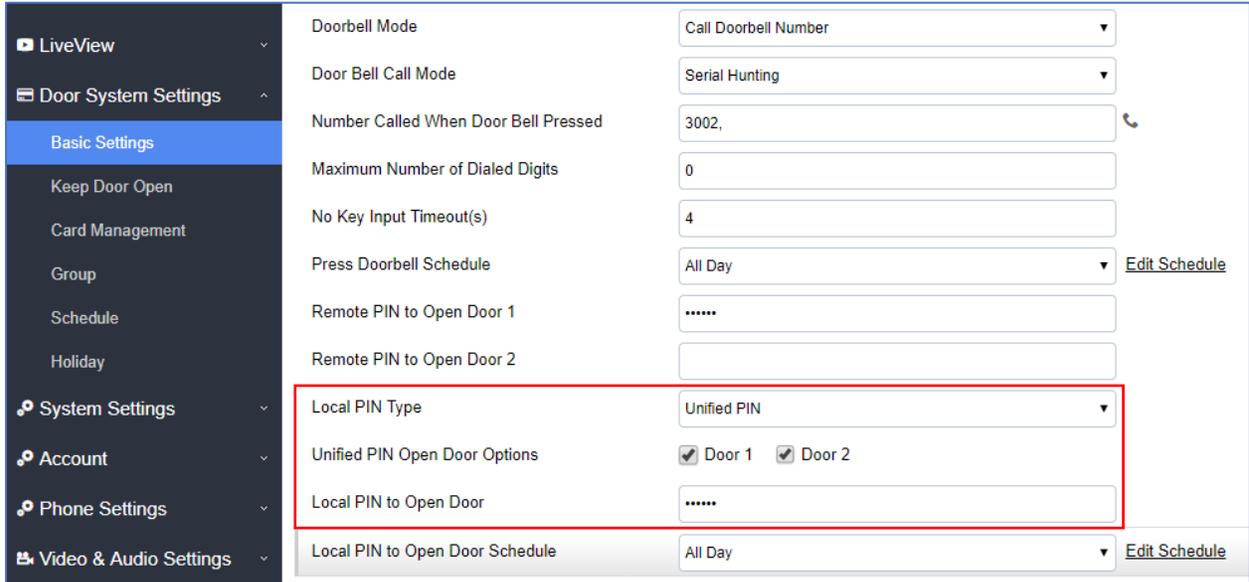
Unlike default COM2 which is designed for strike control and having three connecting sockets, the COM1 only has two connecting sockets. Therefore correct lock mode has to be configured to make the strike working as expected.

For above example, the GDS3710 is configured to control Door1 (wiring to COM2 interface); the 3rd party Wiegand Input is set to control Door2 (wiring to COM1 interface).

In case of a power loss then the DOOR STATUS when power is off will be depending on the following situations:

- COM2 has three wiring PINs, corresponding to NO or NC accordingly. Therefore when connecting NC2 and COM2 (Fail Safe) then strike will open when power is lost and when using a NO2 strike (connecting COM2 and NO2) then door is “locked” when power is lost (Fail Secure).

- COM1 (ALMOUT1) has only two PIN, and NO ONLY. If the connected strike/lock is a NO strike, this means ALMOUT1 Status should be set to “Normal Open” then door will be closed when power is lost, while if the strike connected is NC strike, and ALMOUT1 Status is set to “Normal Close” then door will be open when power is lost.
- **Universal PIN for Operation of Doors:**



LiveView	Doorbell Mode	Call Doorbell Number	▼
Door System Settings	Door Bell Call Mode	Serial Hunting	▼
Basic Settings	Number Called When Door Bell Pressed	3002,	☎
Keep Door Open	Maximum Number of Dialed Digits	0	
Card Management	No Key Input Timeout(s)	4	
Group	Press Doorbell Schedule	All Day	▼ Edit Schedule
Schedule	Remote PIN to Open Door 1	
Holiday	Remote PIN to Open Door 2		
System Settings	Local PIN Type	Unified PIN	▼
Account	Unified PIN Open Door Options	<input checked="" type="checkbox"/> Door 1 <input checked="" type="checkbox"/> Door 2	
Phone Settings	Local PIN to Open Door	
Video & Audio Settings	Local PIN to Open Door Schedule	All Day	▼ Edit Schedule

Figure 60: Universal Local PIN

If Unified PIN (Universal PIN) is configured to open door, then which door can be controlled by the PIN is configured in the UI once “Unified PIN” selected.

For example, like above screenshot, if this universal PIN is set to open both Door1 and Door2, but due to previous “Control Option” set to open Door1, and “Wiegand Control” set to open Door2, therefore the final result will be the INTERSECT result of both sets with condition qualified.

- **Remote PIN to Operation of Doors:**

For remote PIN to open door, the PIN can be configured in example down below.

The PIN can be different for Door1 and Door2 and has to be configured correctly in related IP Phone which will be used to operate “One Key Open Door”.

If BOTH doors need to be opened at the same time, then both Door1 and Door2 has to be configured with exactly SAME password or PIN as DTMF open door.

Note: For enhanced security, When call is initiated from GDS then only the numbers existing in “Number Called When Door Bell Pressed”, “Account White Lists” or “Card Management” will be able to use DTMF PIN to open door remotely.

LiveView  Door System Settings  Basic Settings  Keep Door Open Card Management Group Schedule Holiday System Settings  Account  Phone Settings  Video & Audio Settings  Alarm Settings 	Doorbell Mode	Call Doorbell Number 
	Door Bell Call Mode	Serial Hunting 
	Number Called When Door Bell Pressed	3002, 
	Maximum Number of Dialed Digits	0
	No Key Input Timeout(s)	4
	Press Doorbell Schedule	All Day  Edit Schedule
	Remote PIN to Open Door 1
	Remote PIN to Open Door 2	
	Local PIN Type	Unified PIN 
	Unified PIN Open Door Options	<input checked="" type="checkbox"/> Door 1 <input checked="" type="checkbox"/> Door 2
	Local PIN to Open Door
	Local PIN to Open Door Schedule	All Day  Edit Schedule
	Enable DTMF Open Door	<input checked="" type="checkbox"/>

Figure 61: Remote PIN to Open Door

- **Private PIN or Card & Private PIN:**

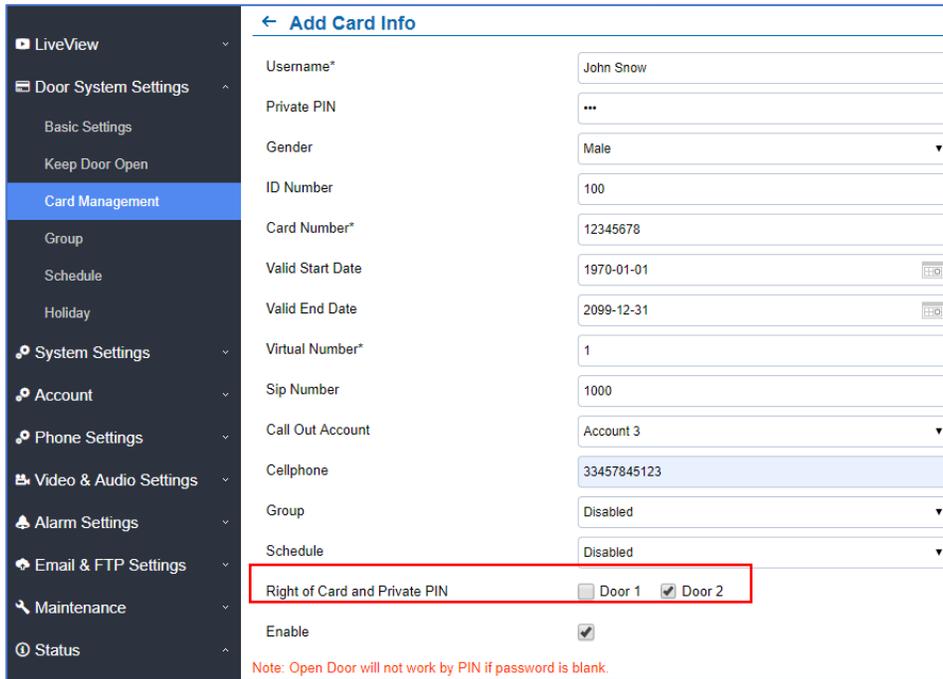


Figure 62: Right of Card and Private PIN

If using RFID card or Private PIN to open door, then which door can be opened by the RFID card or Private PIN is configured via “Card Management”, see above screenshot.

Notes:

For all the settings, the final result of which door can be opened is the **LOGIC INTERSECT OPERATOR** of ALL the sets of condition qualified.

Please refer to our Open Door Flow chart for better understanding on how to configure and control 2 Doors operation: http://firmware.grandstream.com/GDS3710_opendoors_logic.pdf

Keep Door Open

This feature allows users to set either an immediate or scheduled open door, this will allow usage scene like schools or similar private or public places where the door needs to keep open at specific time window and closed otherwise. Also handy for buildings or properties where a seminar needs to be hosted for some period or lunch breaks in a factory or company where the door keeps open and no access log required then back to locked with authorized entry after that, by default it’s disabled.

There are two modes under this section:



1- Immediate Open Door (One Time Only Action)

Keep Door Open

Keep Door Open	<input style="width: 100%; border: 1px solid #0070C0;" type="text" value="Immediate Open Door"/>
Interval of Keep Door Open(min)	<input style="width: 100%; border: 1px solid #0070C0;" type="text" value="5"/>

Figure 63: Immediate Open Door

Table 7: Immediate Open-Door Table

Keep Door Open	Select the Keep Door Open mode.
Interval of Keep Door Open (min)	Set the amount of time in minutes where the door will keep opened. Click  to open door immediately.

Note: When Alarm OUT 1 is set to Open Door then this option would be available separately for each door.

2- Schedule Open Door (Repeated Action)



Keep Door Open

Door 1

Keep Door Open:

Schedule Start Time:

Schedule End Time:

Holiday Mode: [Edit Holiday](#)

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	0	
Sun																										
Mon																										
Tue																										
Wed																										
Thu																										
Fri																										
Sat																										
Holiday																										

Door 2

Keep Door Open:


Emergency PIN to Disable Keep Door Open:

Figure 64: Schedule Open Door

Table 8: Schedule Keep Door Open

Keep Door Open	Select the Keep Door Open mode (Schedule Open Door on this case).
Valid Schedule Start Time	Selects the start time when the door will be opened.
Valid Schedule End Time	Selects the end time when the door will be locked.
Holiday Mode	Selects the holiday schedule to be included into the Keep Door Open schedule (Supported for Door 1 and Door 2).

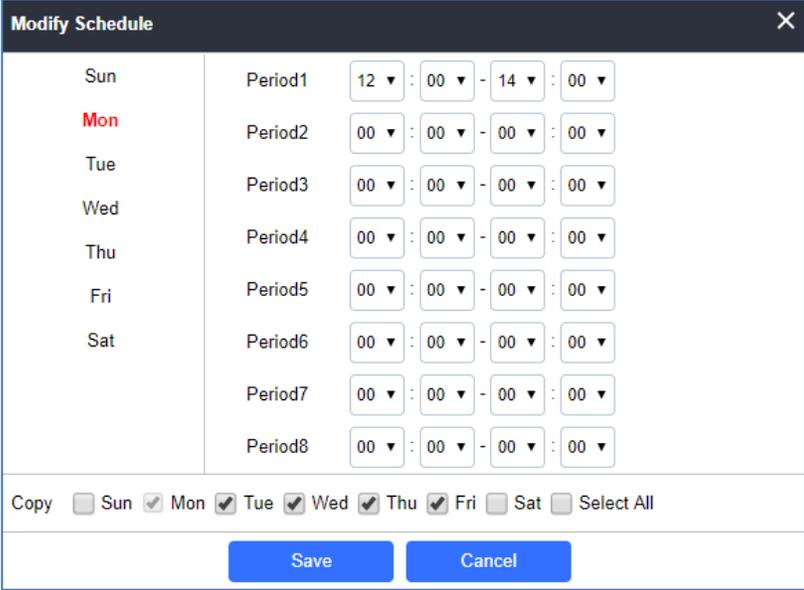Click on Edit schedule to select which periods for each day the door will remain open, as shown on below screenshot.




Day	Period	Start Time	End Time
Sun	Period1	12:00	14:00
Mon	Period2	00:00	00:00
Tue	Period3	00:00	00:00
Wed	Period4	00:00	00:00
Thu	Period5	00:00	00:00
Fri	Period6	00:00	00:00
Sat	Period7	00:00	00:00
	Period8	00:00	00:00

Copy Sun Mon Tue Wed Thu Fri Sat Select All

Save Cancel

Figure 65: Edit Schedule

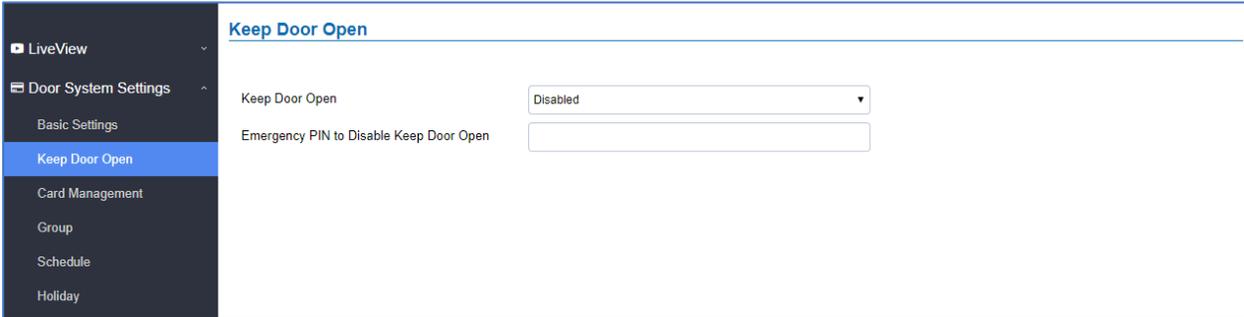Emergency PIN



Keep Door Open

Keep Door Open: Disabled

Emergency PIN to Disable Keep Door Open:

Figure 66: Keep Door Open – Emergency PIN

When Keep Door Open option is set to “Disabled”, user is offered the possibility to force closing the door from the device keypad by dialing the Emergency PIN set to be used.

Example:

1. Fill in the password in Emergency PIN to Disable Keep Door Open, in our example: 2018
2. Open the door using either Immediate/Scheduled Keep Door open
3. enter the following Emergency Password sequence: *2018#
4. After entering the sequence *Emergency PIN#, the GDS will close the door, and when entering the web GUI, the Keep Door Open section is switched automatically to "Disabled" Option.

Note: When ALMOUT1 Feature is set to Open Door then separated Keep Door Open features would be available on this page for each door.

Card Management

This page allows users to add information about RFID cards, two options are possible either add RFID cards manually or automatically.

Card Management

Add User
Reload Data
Delete Data
Username*
Q
Import Data
Export Data

No.	Username*	Card Number*	Virtual Number*	Sip Number	Account	Cellphone	ID Number	Gender	Group	Schedule Valid	Start Date	Valid End Date	Edit
1	John	33656478	1	1000	Auto	33457845123	412	Male	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>
2	Robert	124578	2	2000	Account 1	212682522210	413	Male	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>

Figure 67: Card Management

Notes:

- The GDS3710 can add up to 2000 user cards.
- Press Export Data or Import Data to import / export users' configuration file, information and data stored on the GDS3710.
- Users can export and upload .CSV and .GS files:
- “.gs” format is encrypted database file, it can NOT be edited and the password or PIN inside also can NOT be viewed.
- “.csv” format is NOT encrypted therefore all the content are viewable and editable.
- System Administrator should be VERY careful when export database in such file format, as convenience is provided in the cost of security. It is STRONGLY suggested system administrator to set PASSWORD to Safe Guard the exported CSV format database file when edit or revise the file using Excel.

Add Users Manually

To add users, click on Add User, the following page will pop up.



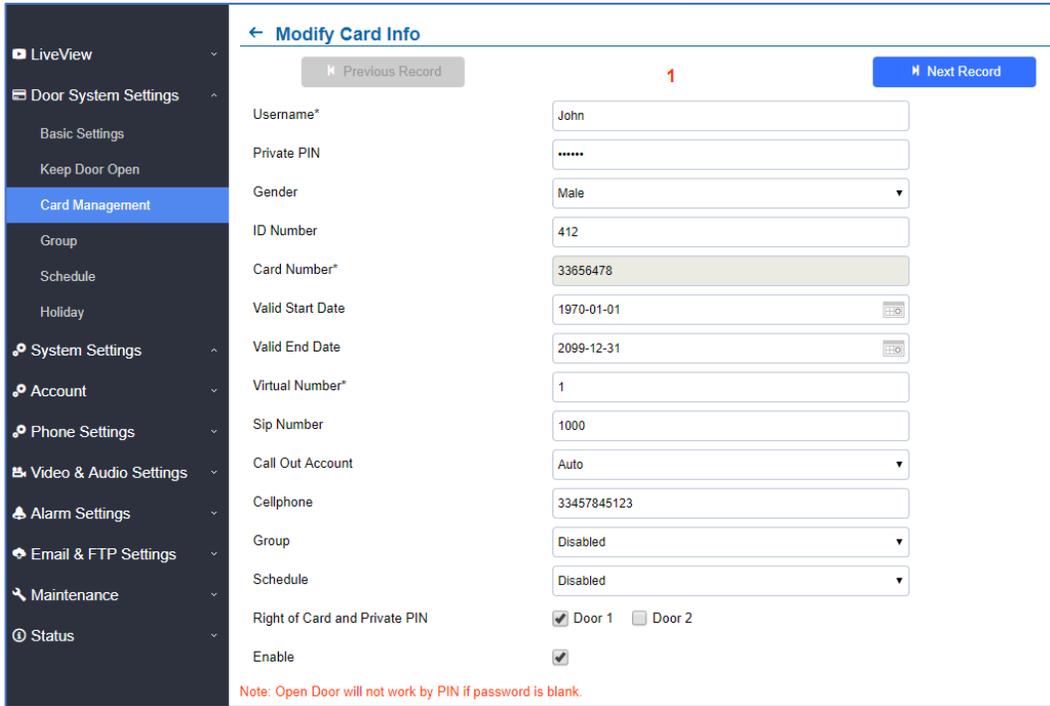


Figure 68: Card Info

Table 9: Card Info

Username	Configures the username to identify the user.
Private PIN	Specifies a PIN to unlock the door for this particular user.
Gender	Selects a gender, either Male or Female.
ID Number	Enters an ID number (This number is set by the admin to identify each user uniquely).
Card Number	Enters the RFID Card number (this is the number written on the RFID card. When “card issuing mode” is enabled, this field will be added automatically. Maximum number that can be entered is 2147483647.
Valid Start Date	Configures the start date of validity of the RFID card.
Valid End Date	Configures the End date of validity of the RFID card.
Virtual Number	When dialing directly from the keypad, the GDS accept only Virtual number to identify a user, once the Virtual number is typed followed by # key, the SIP Number will be dialed.
SIP Number	Configures the SIP Number which is mapped with virtual number. Once the virtual number is dialed the GDS3710 will send an INVITE to the SIP Number. Note: The SIP Number can be configured with an extension/phone number or IP address. Example: 192.168.5.124

Call Out Account	Select the Account from which the GDS3710 will call the User SIP Number when dialing from the keypad. Default is Auto.
Cellphone	Configures cellphone of the user.
Group	Specifies to which group the user will be added.
Schedule	Specifies the schedule that will be assigned to the user.
Right of Card and Private PIN	Select the doors that can be accessed by user.
Enable	When checked, the user's RFID and Private PIN will be active for door opening. If unchecked, the Private PIN nor RFID card swipe won't take effect.


Note:

- Group overrides Schedule.
- If Schedule is set as "Disabled" the RFID Card will be accepted when swiped All Day.
- If user disabled, the related Card or PIN will fail to Open Door.
- Private PIN Open Door will not work if "Private PIN" is blank.

Add Users Automatically

If *[Enable Card Issuing Mode]* is checked, the GDS3710 keypad will start blinking and once an RFID card is swiped, data stored on the card will be added into the GDS3710 card management page, user can still edit the entry added automatically by modifying some fields.


Users Operation

- Click on  to edit the entry or show details of the entry.
- Select the entries and click on  to delete the selected users.
- Click  to refresh the data entered to the GDS3710.
- Users can use Go to:  to navigate through User Management pages.

Show private PIN

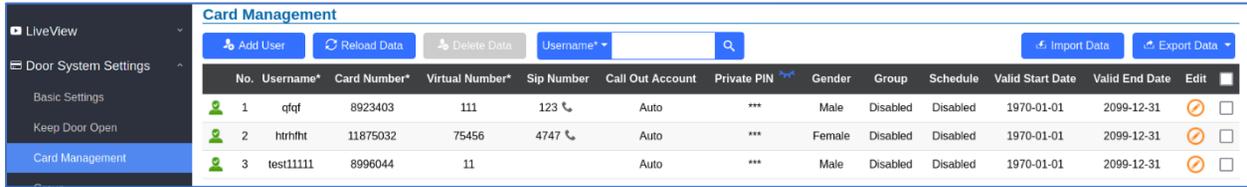The private PIN can be displayed easily from the card management page using the eye icon.






Card Management

No.	Username*	Card Number*	Virtual Number*	Sip Number	Call Out Account	Private PIN	Gender	Group	Schedule	Valid Start Date	Valid End Date	Edit
1	qfxf	8923403	111	123	Auto	***	Male	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>
2	htrhft	11875032	75456	4747	Auto	***	Female	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>
3	test11111	8996044	11		Auto	***	Male	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>

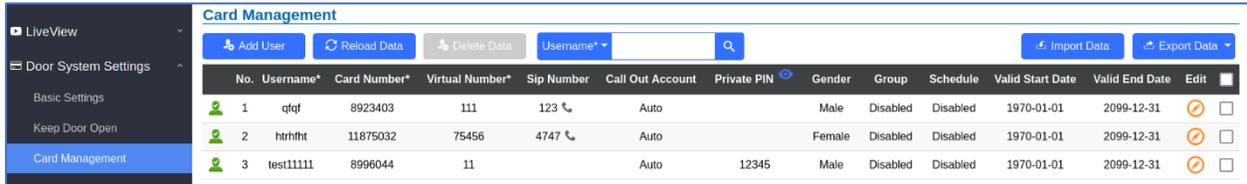Figure 69: Hidden Private PIN




Card Management

No.	Username*	Card Number*	Virtual Number*	Sip Number	Call Out Account	Private PIN	Gender	Group	Schedule	Valid Start Date	Valid End Date	Edit
1	qfxf	8923403	111	123	Auto		Male	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>
2	htrhft	11875032	75456	4747	Auto		Female	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>
3	test11111	8996044	11		Auto	12345	Male	Disabled	Disabled	1970-01-01	2099-12-31	<input type="checkbox"/>

Figure 70: Visible Private PIN

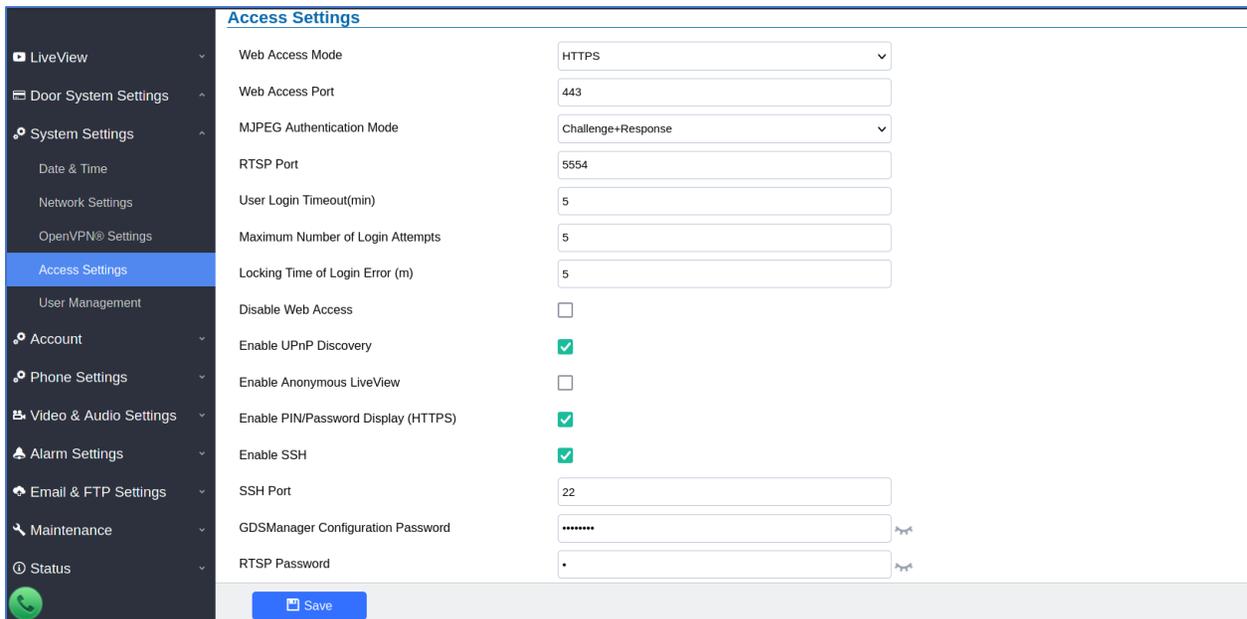To enable this feature, on the web UI, head to System Settings > Access Settings, switch the Web Access Mode to HTTPS and enable PIN/Password Display (HTTPS)



Access Settings

Web Access Mode	HTTPS
Web Access Port	443
MJPEG Authentication Mode	Challenge+Response
RTSP Port	5554
User Login Timeout(min)	5
Maximum Number of Login Attempts	5
Locking Time of Login Error (m)	5
Disable Web Access	<input type="checkbox"/>
Enable UPnP Discovery	<input checked="" type="checkbox"/>
Enable Anonymous LiveView	<input type="checkbox"/>
Enable PIN/Password Display (HTTPS)	<input checked="" type="checkbox"/>
Enable SSH	<input checked="" type="checkbox"/>
SSH Port	22
GDSManager Configuration Password	*****
RTSP Password	*

Figure 71: PIN/Password display and HTTPS enabled

Note:

- By default, this feature is disabled for security reasons.
- This feature only works when HTTPS is used as web UI access method.

Group

The Group page permits to manage the groups which will contains multiple users, click on

to create new groups or  to edit existing groups or  to delete the group.

Note: Users can create up to 50 groups.


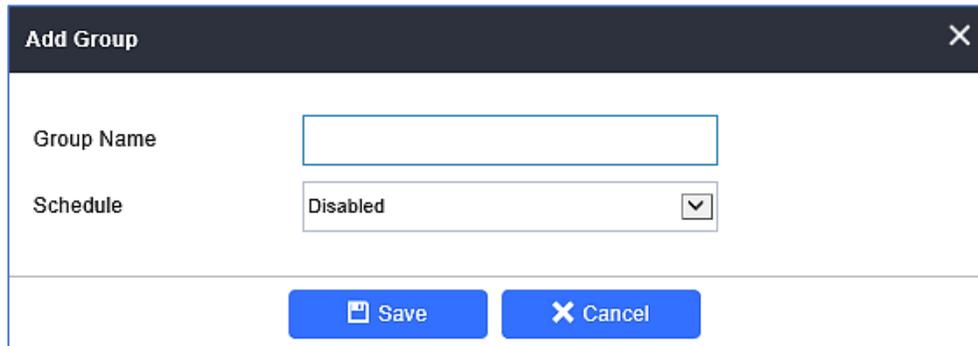


Figure 72: Add Group

Table 10: Add Group

Group Name	Configures the name to identify the group.
Schedule	Specifies the schedule that will be used by the group.

The following screenshots display the list of the created groups.

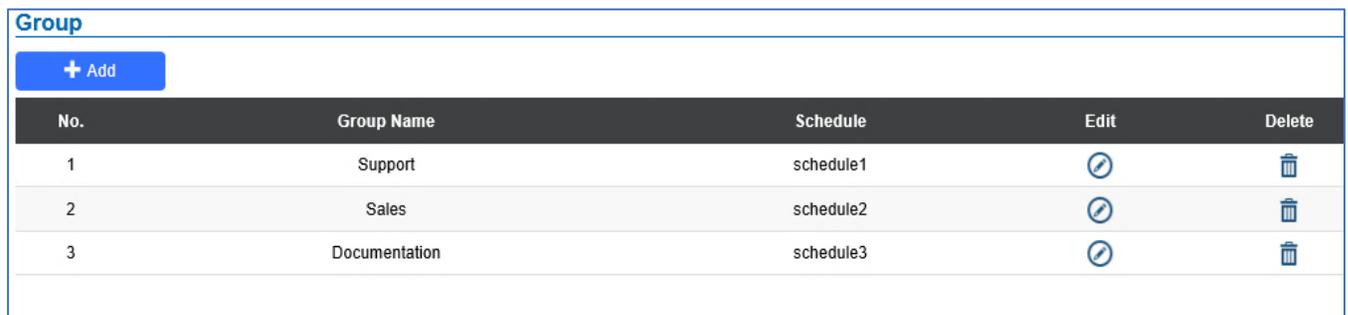

No.	Group Name	Schedule	Edit	Delete
1	Support	schedule1		
2	Sales	schedule2		
3	Documentation	schedule3		

Figure 73: Groups List

Schedule

The Schedule page allows to manage schedule time frames which will be assigned to the users for door system usage. Out of the configured time intervals, GDS3710 will not allow users to access.

Click on  to edit a schedule or  for schedule details.

Note: The GDS3710 supports up to 10 schedules.

Modify Schedule

Schedule Name:

Holiday Mode:

Sun	Period1	08	:	00	--	17	:	00
Mon	Period2	00	:	00	--	00	:	00
Tue	Period3	00	:	00	--	00	:	00
Wed	Period4	00	:	00	--	00	:	00
Thu	Period5	00	:	00	--	00	:	00
Fri	Period6	00	:	00	--	00	:	00
Sat	Period7	00	:	00	--	00	:	00
Holiday	Period8	00	:	00	--	00	:	00

Copy Sun Mon Tue Wed Thu Fri Sat Holiday Select All

Save **Cancel**

Figure 74: Edit Schedule Time

Holiday

The Holiday page allows to manage holidays which will be assigned to the users for door system usage.

Click on  to edit the holidays or  for holiday details.

Schedule Name:

Duration1: - 

Calendar: Sep 2017

Sun	Mon	Tue	Wed	Thu	Fri	Sat
27	28	29	30	31	1	2
3	4	5	6	7	8	9
10	11	12	13	14	15	16
17	18	19	20	21	22	23
24	25	26	27	28	29	30
1	2	3	4	5	6	7

Today OK

Save **Cancel**

Figure 75: Edit Holiday Time

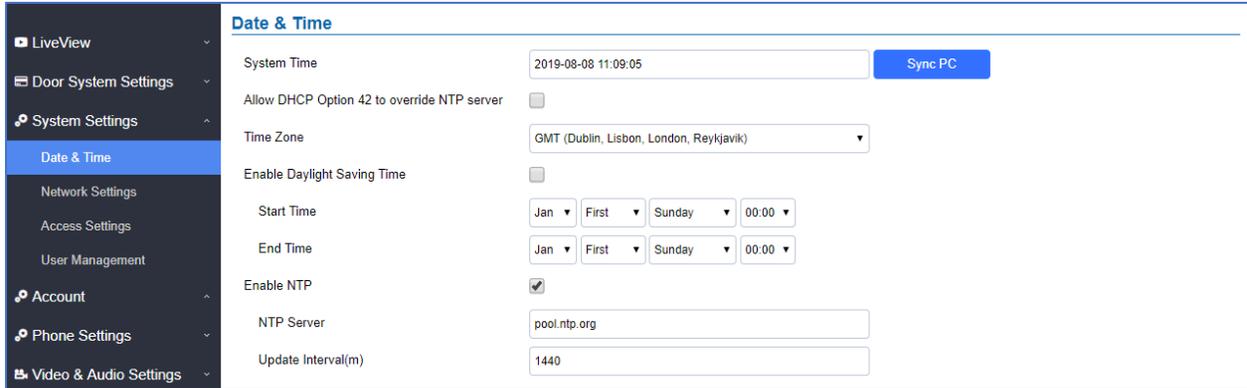


System Settings

This page allows users to configure date and time, network settings as well as access method to the GDS3710 and password for accessing the Web GUI.

Date & Time Settings

This page allows users to adjust system date and time of the GDS3710.



The screenshot shows the 'Date & Time' settings page. On the left is a navigation menu with options like LiveView, Door System Settings, System Settings, Date & Time (selected), Network Settings, Access Settings, User Management, Account, Phone Settings, and Video & Audio Settings. The main content area is titled 'Date & Time' and contains the following settings:

- System Time:** 2019-08-08 11:09:05, with a 'Sync PC' button.
- Allow DHCP Option 42 to override NTP server:**
- Time Zone:** GMT (Dublin, Lisbon, London, Reykjavik)
- Enable Daylight Saving Time:**
- Start Time:** Jan, First, Sunday, 00:00
- End Time:** Jan, First, Sunday, 00:00
- Enable NTP:**
- NTP Server:** pool.ntp.org
- Update Interval(m):** 1440

Figure 76: Date & Time Page

Table 11: Date & Time

System Time	Displays the current system time.
Allow DHCP Option 42 to override NTP server	Defines whether DHCP Option 42 should override NTP server or not. When enabled, DHCP Option 42 will override the NTP server if it's set up on the LAN. The default setting is "Yes".
Sync PC	Clicks to synchronize current time with the computer.
Time Zone	Selects from drop down menu the preferred time zone.
Enable Daylight Saving Time	Enables Daylight Saving Time.
Start time	Selects the Start time of DST.
End Time	Selects DST end time.
Enable NTP	Enables NTP to synchronize device time.
NTP Server	Configures the domain name of NTP server.
Update Interval	Configures the Interval (in minutes) to retrieve updates from the NTP server.

Network Settings

This page allows users to set either a static or DHCP IP address to access the GDS3710.

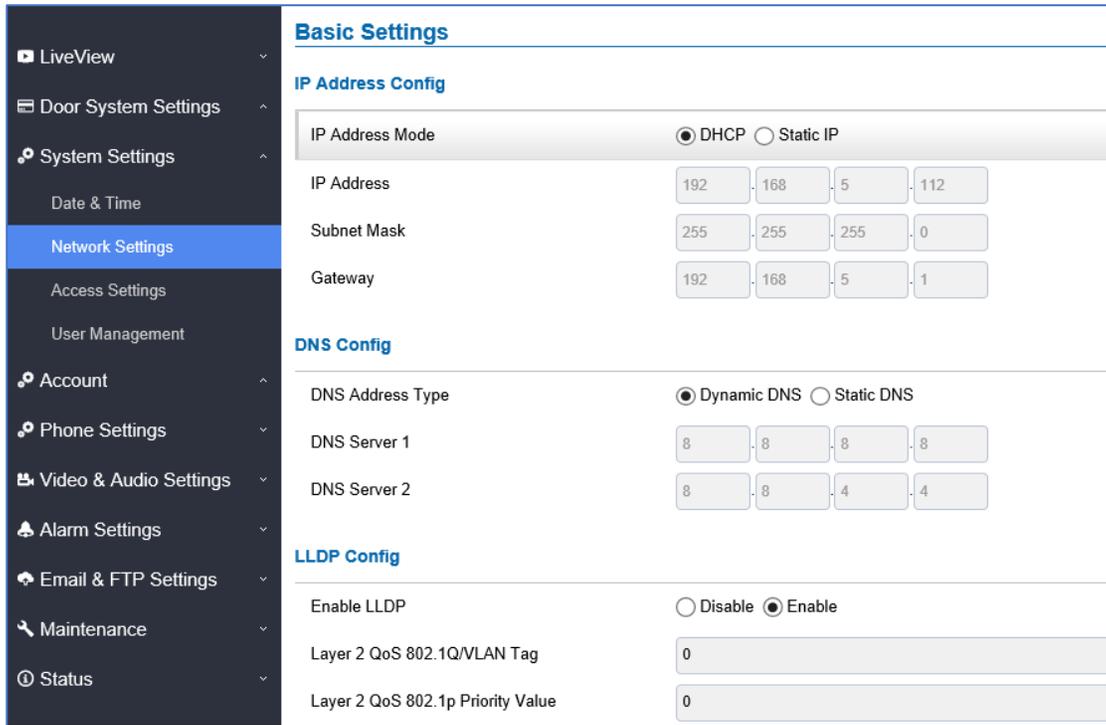


Figure 77: Basic Settings Page

Table 12: Basic Settings


IP Address Mode	Selects DHCP or Static IP. Default DHCP. (Static recommended)
IP Address	Configures the Static IP of the GDS3710.
Subnet Mask	Configures the Associated Subnet Mask.
Gateway	Configures the Gateway IP address.
DNS Address Type	Specifies the DNS type used: Dynamic DNS or Static DNS.
DNS Server 1	Configures DNS Server 1 IP address.
DNS Server 2	Configures DNS Server 2 IP address.
Enable LLDP	Controls the LLDP (Link Layer Discovery Protocol) service. The default setting is "Enabled".
Layer 2 QoS 802.1Q/VLAN Tag	Assigns the VLAN Tag of the Layer 2 QoS packets. Default value is 0.
Layer 2 QoS 802.1p Priority Value	Assigns the priority value of the Layer2 QoS packets. Default value is 0.

Notes:

- If the GDS3710 is behind SOHO (Small Office Home Office) router with port forwarding configured for remote access, static IP should be used to avoid IP address changes after router reboot.
- TCP port above 5000 is suggested to Port forward HTTP for remote access, due to some ISP would block port 80 for inbound traffic. For example, change the default HTTP port from 80 to 8088, to make sure the TCP port will not be blocked.
- In addition to HTTP port, RTSP port is also required to configure via port forwarding, so that the remote party can view the video stream.
- If the default TCP port 80 is changed to port “A”, then RTSP port should be “2000+A” (changed from default TCP 554). Both TCP port “A” and “2000+A” should be configured for port forwarding in the router. For example, of the HTTP port is changed to 8088, the RTSP port should be 10088, both TCP ports 8088 and 10088 should be configured for port forwarding to have remote GDS3710 access: 8088 for web portal, and 10088 for video streaming.

OpenVPN® Settings

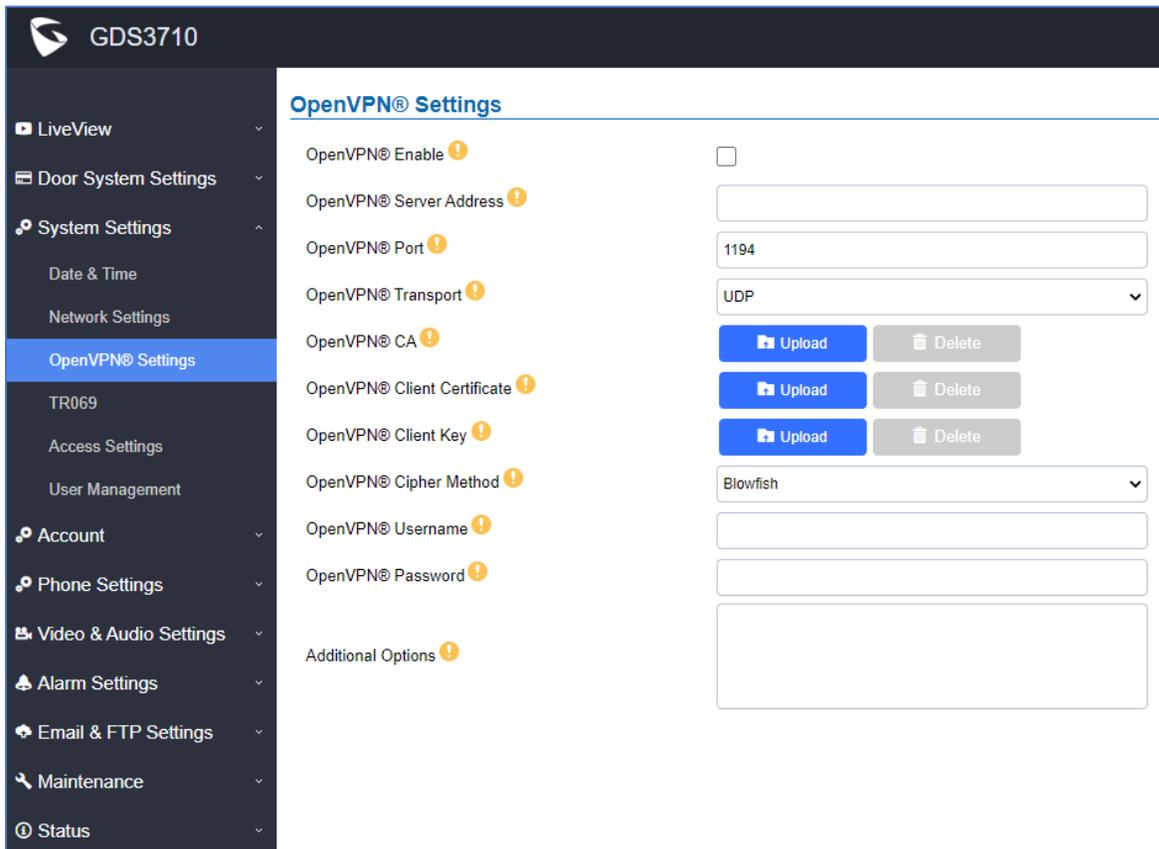This page allows users to configure OpenVPN settings.



GDS3710

OpenVPN® Settings

OpenVPN® Enable !

OpenVPN® Server Address !

OpenVPN® Port !

OpenVPN® Transport !

OpenVPN® CA !

OpenVPN® Client Certificate !

OpenVPN® Client Key !

OpenVPN® Cipher Method !

OpenVPN® Username !

OpenVPN® Password !

Additional Options !

Figure 78: OpenVPN Settings page



Enable OpenVPN®	<p>Enables/disables OpenVPN® functionality and requires the user to have access to an OpenVPN® server.</p> <p>Note: To use OpenVPN® functionalities, users must enable OpenVPN® and configure all of the settings related to OpenVPN®, including server address, port, OpenVPN® CA, certificate and key. Additionally, the user must also set the SIP account to use "VPN" for the "NAT Traversal" (under Account → Network Settings).</p>
OpenVPN® Server Address	Defines the URL/IP address for the OpenVPN® server.
OpenVPN® Port	Defines the network port for the OpenVPN® server. The default setting is 1194 .
OpenVPN® Transport	<p>Determines network protocol used for OpenVPN® (UDP or TCP).</p> <p>The default setting is TCP.</p>
OpenVPN® CA	OpenVPN® CA file (ca.crt) required by the OpenVPN® server for authentication purposes. Press "Upload" to upload the corresponding file to the device.
OpenVPN® Client Certificate	OpenVPN® CA file (ca.crt) required by the OpenVPN® server for authentication purposes. Press "Upload" to upload the corresponding file to the device.
OpenVPN® Client Key	OpenVPN® Client key (*.key) required by OpenVPN® server for authentication purposes. Press "Upload" to upload the corresponding file to the device.
OpenVPN® Cipher Method	The cipher method of OpenVPN®, must be the same cipher method used by the OpenVPN® server. Supported methods are: Blowfish, AES-128, AES-256 and Triple-DES.
OpenVPN® Username	Configures the OpenVPN® authentication username (optional).
OpenVPN® Password	Configures the OpenVPN® authentication password (optional).
Additional Options	<p>Additional options to be appended to the OpenVPN® config file, separated by semicolons. For example, <i>comp-lzo no; auth SHA256</i></p> <p>Note: Please use this option with caution. Make sure that the options are recognizable by OpenVPN® and do not unnecessarily override the other configurations above.</p>

Access Settings

This page configures the GDS3710 access control parameters.



Access Settings

Web Access Mode	<input type="text" value="HTTPS"/>
Web Access Port	<input type="text" value="443"/>
MJPEG Authentication Mode	<input type="text" value="Challenge+Response"/>
RTSP Port	<input type="text" value="554"/>
User Login Timeout(min)	<input type="text" value="5"/>
Maximum Number of Login Attempts	<input type="text" value="5"/>
Locking Time of Login Error (m)	<input type="text" value="5"/>
Disable Web Access	<input type="checkbox"/>
Enable UPnP Discovery	<input checked="" type="checkbox"/>
Enable Anonymous LiveView	<input type="checkbox"/>
Enable PIN/Password Display (HTTPS)	<input checked="" type="checkbox"/>
Enable SSH	<input checked="" type="checkbox"/>
SSH Port	<input type="text" value="22"/>
GDSManager Configuration Password	<input type="password" value="....."/> 👁
RTSP Password	<input type="password" value="....."/> 👁

Figure 79: Access Settings Page

Table 13: Access Settings

Web Access Mode	Selects the access mode to the webGUI either HTTP or HTTPS.
Web Access Port	Specifies the TCP port for Web Access, default 443.
JPEG Authentication Mode	<p>Allows 3rd party system integrator or developers to implement related application for users. By default, this feature is disabled and use more secured “Challenge+Response” mode.</p> <p>If enabled, user can send HTTP API with correct credentials to retrieve MJPEG video stream or JPEG snapshot from GDS3710.</p> <p>Notes:</p> <p>1- The MJPEG stream can be retrieved via the following URL HTML based → http(s)://admin:password@IP_GDS3710:Port/jpeg/mjpeg.html Stream → http(s)://admin:password@ip:port/jpeg/stream</p>

	The MJPEG stream retrieved via the methods above is running on the background and cannot be tuned. If users want more flexibility, they can use the three configurable video streams.
JPEG Authentication Mode	<p>Allows 3rd party system integrator or developers to implement related application for users. By default, this feature is disabled and use more secured “Challenge+Response” mode.</p> <p>If enabled, user can send HTTP API with correct credentials to retrieve MJPEG video stream or JPEG snapshot from GDS3710.</p> <p>Notes:</p> <p>2- The MJPEG stream can be retrieved via the following URL HTML based → http(s)://admin:password@IP_GDS3710:Port/jpeg/mjpeg.html Stream → http(s)://admin:password@ip:port/jpeg/stream</p> <p>The MJPEG stream retrieved via the methods above is running on the background and cannot be tuned. If users want more flexibility, they can use the three configurable video streams as shown on [Retrieving Video Streams].</p>
RTSP Port	Specifies RTSP port for media stream, default TCP port 554.
User Login Timeout(min)	If no action is made within this time the GDS3710 will logout from the Web GUI, range is between 3 and 60.
Maximum Number of Login Attempts	Specifies the allowed login times error limit, if the unsuccessful login attempts exceed this value, the GDS3710 webGUI will be locked for the time specified in Login Error Lock Time.
Locking Time of Login Error (m)	Specifies how long the GDS3710 is locked before a new login attempt is allowed.
Disable Web Access	<p>Allow or deny the web access to the GDS3710. (HTTP API do not take effect when this option is enabled).</p> <p>Note: If both WebUI and SSH are disabled, GDS3710 will get blocked and not be able to be accessed. Only two ways to get it back:</p> <ol style="list-style-type: none"> 1. Re-provisioned by ITSP or Service Provider (by adjusting the related parameters) 2. Hard Reset (GDS3710 has to be offline and uninstalled to perform this hard reset).
Enable UPnP Discovery	UPnP (or mDNS) function for local discovery. Default setting is enabled.



<p>Enable Anonymous LiveView</p>	<ol style="list-style-type: none"> When enabled, user can display the camera stream from GDS without admin credentials using the following URL scheme: http(s)://GDS3710_IP:port/videoview.html User can also retrieve a real-time snapshot without admin credentials using the following URL: http(s)://IP:port/anonymous/snapshot/view.html Or with: https://IP_GDS3710:Port/anonymous/snapshot/view.jpg To retrieve video stream via RTSP, users can use the following format: rtsp://IP_GDS3710:Port/X where X=0,4,8 for 1st, 2nd, 3rd streams respectively. To retrieve Anonymous MJPEG, user can use following URLs to retrieve the related MJPEG streams: http(s)://IP:Port/anonymous/jpeg/stream=X (X=0, 1, 2, or default 3) For example: https://192.168.1.128/anonymous/jpeg/stream=3 <p>Notes:</p> <ul style="list-style-type: none"> Except default value 3, the stream 0, 1, 2 mapped to the stream 1, 2, 3 in the “Video Setting” page. Unless using default value 3, all other values require to choose “MJPEG” in the “Preferred Video Codec” in the “Preferred Video Codec”
<p>Enable SSH</p>	<p>Allows SSH access for remote secured configuration purposes (restart, upgrade, provision...)</p>
<p>Enable PIN/Password Display (HTTPS)</p>	<p>If Enabled, this option allows to view system PIN/Password. Default setting is Disabled.</p>
<p>SSH Port</p>	<p>Specifies the SSH port. Default setting is 22.</p>
<p>GDSManager Configuration Password</p>	<p>User can set in this field a custom admin password instead of using GDS3710 webUI administrator’s credentials, and this custom admin password will be the one used when adding the GDS3710 unit to GDSManager database. Default password is the Admin’s default random password of the GDS3710.</p>
<p>RTSP Password</p>	<p>This feature enhancement is based on field feedback from customers. Customer request NOT using admin password to view the RTSP video stream via 3rdparty applications like VLC Player or own development Scripts.</p>



Now customer can still use admin as username, but NOT use admin password and configure another RTSP password to view the live stream via own scripts or 3rdparty application like VLC Media Player.

For example, using VLC Media Player, if configure the RTSP password to be “1234” in GDS3710, then using following command can get the video stream: **rtsp://admin:1234@192.168.11.128/4** (here it shows the 2ndstream as “4” used)

FORMAT:
RTSP://admin:rtsp_password@IP_GDS3710:Port/X
 (X = 0, 4, 8 correspondent to Stream 1, 2, 3)

The selected live video stream with audio will play out with some delay based on the computer processing power and network conditions.

Notes:

- Please make sure the environment is secure before using this feature.
- Please reminder user the privacy when using this feature.

User Management

This page allows users to configure the password for administrator. Since this is a door system which must be a secure product, the use is only limited to administrator.

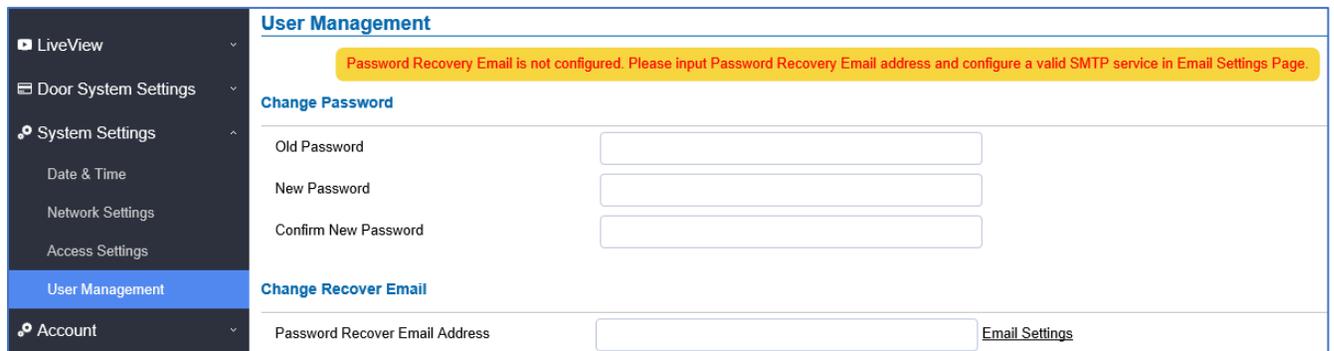


Figure 80: User Management Page

Table 14: User Management

Old Password	Old password must be entered to change new password.
New Password	Fill in the revised new password in this field.
Confirm User Password	Re-enter the new password for verification, must match.
Password Recovery Email Address	This option is highly recommended , as if the password is lost, you can recover it on the configured Email address. Note: Make sure to configure SMTP Email Settings under “ Email Settings ”



Note:

When trying to change the password, users need to set the “Password Recovery Email” which should be a valid Email account configurable under “**Email & FTP Settings → Email Settings**” to retrieve the email before the new admin password take effect as displayed on the following screenshot.

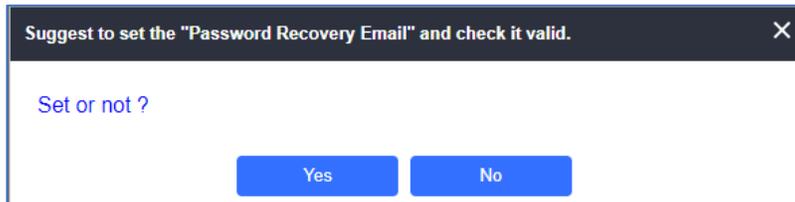


Figure 81: Password Recovery Email

Account

Starting from version 1.0.5.6, the GDS3710 supports for 4 SIP accounts and 4 lines, this section covers the configuration of basic and advanced sip settings for each account.

Account 1 - 4

This page allows the administrator to configure the SIP account basic and advanced settings for each SIP account:

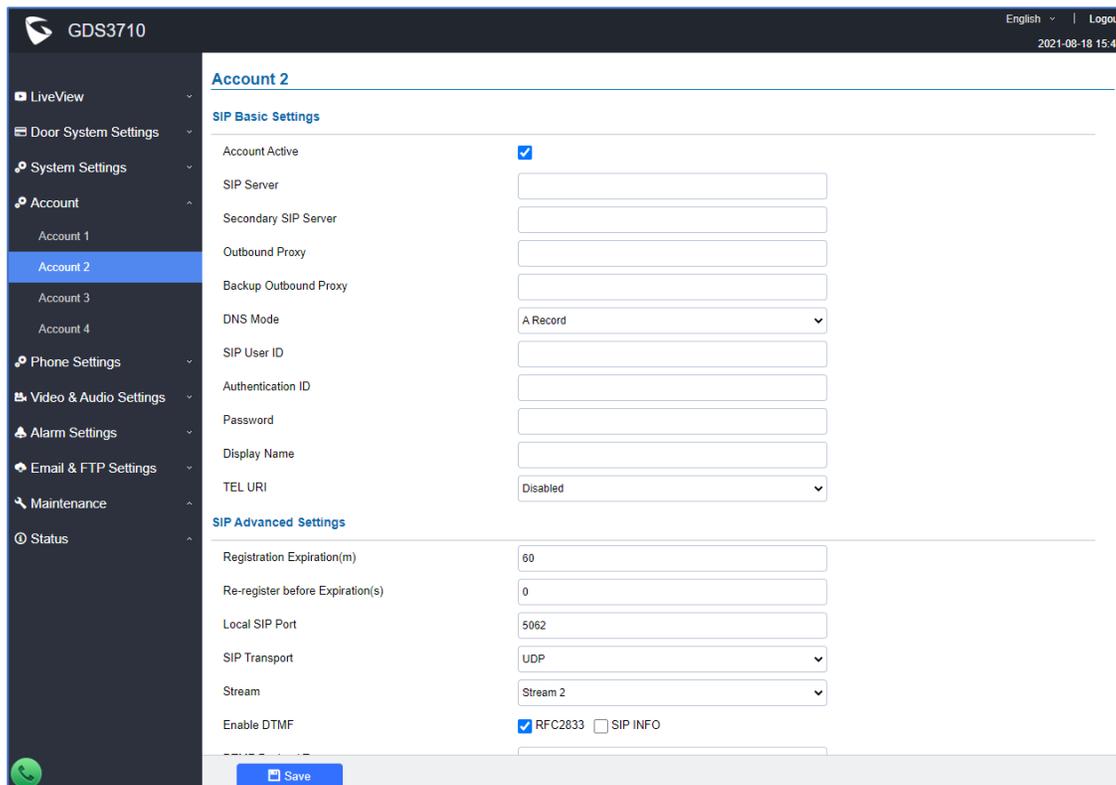


Figure 82: SIP Account Settings Page

Table 15: SIP Account Basic & Advanced Settings

SIP Basic Settings	
Account Active	This field indicates whether the account is active. Default setting is "Yes".
SIP Server	Configures the FQDN or IP of the SIP server from VoIP service provider or local IPPBX.
Secondary SIP Server	Configures the FQDN or IP of the secondary SIP server from VoIP service provider or local IPPBX. The Second SIP Server allows users to use secondary SIP server if primary SIP server having problems to ensure service availability.
Outbound Proxy	Configures the IP address or the domain name of the outbound proxy, media gateway, or session border controller. It's used by the GDS for firewall or NAT penetration in different network environments. If a symmetric NAT is detected, STUN will not work and only an outbound proxy can provide a solution.
Backup Outbound Proxy	Configures the backup outbound proxy to be used when the "Outbound Proxy" registration fails. By default, this field is left empty.
DNS Mode	Configure which DNS mode will be used to translate the SIP Server FQDN (Default value is A Record): <ul style="list-style-type: none"> • A Record. • SRV. • NAPTR/SRV.
SIP User ID	Configures the SIP username or telephone number from ITSP. Note: Letters, digits and special characters including @ are supported.
Authenticate ID	Configures the Authenticate ID used by SIP proxy.
Password	Sets the Authenticate password used by SIP proxy. Note: For security reasons, the SIP password is invisible on the web UI.
Display Name	To allow user to input display name to be illustrated in far side SIP device(if having LCD display or similar hardware) so user will know what extension or device connected in SIP calling, to increase the usability.
TEL URI	Select "User=Phone" or "Enabled" from the dropdown list. If the SIP account has an assigned PSTN telephone number, this field should be set to "User=Phone". Then a "User=Phone" parameter will be attached to the Request-Line and "TO" header in the SIP request to indicate the E.164 number. If set to "Enable", "Tel:" will be used instead of "SIP:" in the SIP request. The default setting is "Disable".
SIP Advanced Settings	



Registration Expiration (m)	<p>Sets the registration expiration time.</p> <p>Default setting is 60 minutes. Valid range is from 1 to 64800 minutes.</p>
Re-register before Expiration (s)	<p>Specifies the time frequency (in seconds) that the GDS3710 sends re-registration request before the Register Expiration. The default value is 0. Range is from 0-64800 seconds.</p>
Local SIP Port	<p>Sets the local SIP port. Default setting is 5060 for Account 1, 5062 for Account 2, 5064 for Account 3, 5066 for Account 4.</p>
SIP Transport	<p>Chooses the SIP transport protocol. UDP, TCP or TCP/TLS.</p> <p>Default setting is UDP.</p>
Stream	<p>Select the Video stream to be used by the GDS3710 when call is made from this SIP Account.</p> <p>Default is Stream 2.</p>
Enable DTMF	<p>Specifies the mechanism to transmit DTMF digits. There are 2 supported modes:</p> <ul style="list-style-type: none"> • RFC2833 sends DTMF with RTP packet. Users can check the RTP packet to see the DTMFs sent as well as the number pressed. • SIP INFO uses SIP INFO to carry DTMF. Default setting is "RFC2833"
DTMF Payload Type	<p>Configures the payload type for DTMF using RFC2833.</p> <p>Default value is 101.</p> <p>Range: 96~127.</p>
Unregister On Reboot	<p>Allows the SIP user's registration information to be cleared when the GDS reboots. The SIP REGISTER message will contain "Expires: 0" to unbind the connection.</p>
NAT Traversal	<p>This parameter configures whether the NAT traversal mechanism is activated. Users could select the mechanism from No, STUN, Keep-alive, UPnP, Auto. The default setting is "No".</p> <p>If set to "STUN" and STUN server is configured, the GDS will route according to the STUN server. If NAT type is Full Cone, Restricted Cone or Port-Restricted Cone, the unit will try to use public IP addresses and port number in all the SIP&SDP messages.</p> <p>The GDS will send empty SDP packet to the SIP server periodically to keep the NAT port open if it is configured to be "Keep-alive". Configure this to be "No" if an outbound proxy is used. "STUN" cannot be used if the detected NAT is symmetric NAT. If the firewall and the SIP device behind the firewall are both able to use UPNP, it can be set to "UPNP". Both parties will negotiate to use which port to allow SIP through.</p>



Enable SRTP	<p>Enable SRTP mode based on your selection from the drop-down menu.</p> <p>The default setting is “Disabled”, the two other modes are “Enabled but Not Forced” and “Enabled and Forced”.</p>
Special Feature	<p>Configures GDS settings to meet different vendors’ server requirements.</p> <p>Users can choose from Standard, Broadsoft or Telefonica Spain.</p> <p>The default setting is “Standard”.</p>
Outbound Proxy Mode	<p>In route: outbound proxy FQDN is placed in route header. This is used for the SIP Extension to notify the SIP server that the device is behind a NAT/Firewall.</p> <p>Always sent to: SIP messages will always be sent to Outbound proxy.</p> <p>Not in route: remove the Route header from SIP requests.</p>
Enable RTCP	<p>This option allows 3rd party Service Provider or Cloud Solution to monitor the operation status of the GDS3710 by using related SIP Calls.</p> <p>By default, it’s disabled. Users can choose either RTCP or RTCP-XR.</p>
H.264 Payload Type	<p>The H.264 payload type can now be configured to be compatible with 3rd party video phones, as well as other advanced SIP settings, to easy system integration process. Default is 99.</p>
Accept Incoming SIP from Proxy Only	<p>When set to “Yes”, the SIP address of the Request URL in the incoming SIP message will be checked. If it doesn’t match the SIP server address of the account, the call will be rejected. The default setting is disabled.</p>
Add MAC in User-Agent	<p>This option is used with 3CX so that the GDS37xx can be compatible with 3CX auto provisioning. The option adds the MAC address into User-Agent in the SIP Header.</p> <ul style="list-style-type: none"> • No: to disable the option • Yes to all SIP: SIP messages will always be have User-Agent • Yes except REGISTER: SIP messages will always be have User-Agent except the REGISTER message
SIP URI Scheme When Using TLS	<p>This option allows the GDS3710 to work with Cisco WebEX server as SIP client. The two modes are SIP and SIPS.</p>
Support SIP Instance ID	<p>When enabled, the GDS3710 will work with Cisco WebEX server as SIP client.</p>
Vocoder Settings	
Preferred Vocoder	<p>Select multiple audio codecs by priority order (lowest is the highest priority).</p> <p>Supported codecs are: PCMU, PCMA, G.722 and G.729A/B.</p>



Voice Frame Per TX

Configures the number of voice frames transmitted per packet. When configuring this, it should be noted that the “ptime” value for the SDP will change with different configurations here. This value is related to the codec used and the actual frames transmitted during the in-payload call. For end users, it is recommended to use the default setting, as incorrect settings may influence the audio quality.

The default setting is 2.

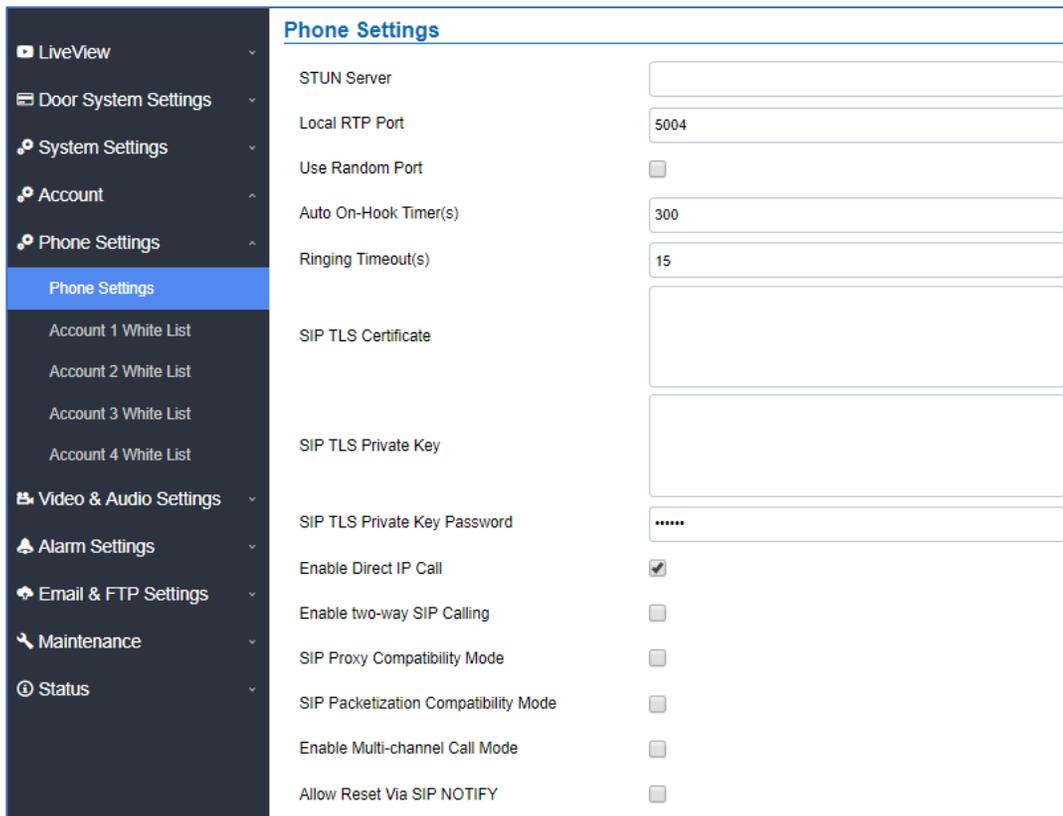
Range is from 1-64.

Phone Settings

The phone settings allow users to configure the GDS3710 phone settings and the White list for all the SIP accounts.

Phone Settings

This page allows users to configure the GDS3710 phone settings.



Phone Settings	
STUN Server	<input type="text"/>
Local RTP Port	<input type="text" value="5004"/>
Use Random Port	<input type="checkbox"/>
Auto On-Hook Timer(s)	<input type="text" value="300"/>
Ringing Timeout(s)	<input type="text" value="15"/>
SIP TLS Certificate	<input type="text"/>
SIP TLS Private Key	<input type="text"/>
SIP TLS Private Key Password	<input type="password" value="....."/>
Enable Direct IP Call	<input checked="" type="checkbox"/>
Enable two-way SIP Calling	<input type="checkbox"/>
SIP Proxy Compatibility Mode	<input type="checkbox"/>
SIP Packetization Compatibility Mode	<input type="checkbox"/>
Enable Multi-channel Call Mode	<input type="checkbox"/>
Allow Reset Via SIP NOTIFY	<input type="checkbox"/>

Figure 83: Phone Settings Page

Table 16: Phone Settings

STUN Server	Configures the STUN server FQDN or IP. If the device is behind a non-symmetric router, STUN server can help to penetrate & resolve NAT issues.
Local RTP Port	Sets the local RTP port for media. Default setting is 5004. Range between 1024~65400.
Use Random Port	Forces the GDS to use random ports for both SIP and RTP messages. This is usually necessary when multiple units are behind the same full cone NAT. The default setting is “Disabled” Note: This parameter must be set to “Disabled” for Direct IP Calling to work.
Auto On-Hook Timer	Configures the auto on-hook timer (in seconds) for automatic disconnecting the SIP call. Default setting is 300. Range between 0~65535.
Ring Timeout(s)	Specifies the Ring timeout, when no reply is returned from the called party after exceeding this field, the GDS will hang up the call. The value is in the range of 0s – 90s. By default; it is “30” seconds.
SIP TLS Certificate	Input the TLS certificate here for encryption.
SIP TLS Private Key	Input private key here for TLS security protection.
SIP TLS Private Key Password	Specifies the password for SIP TLS private Key.
Enable Direct IP Call	Accepts peer-to-peer IP call (over UDP only) without SIP server. Default is “Enabled”.
Enable two-way SIP Calling	Allows the user to enable/disable the alarm sound during a SIP call triggered by doorbell pressing.
Enable two-way SIP Calling	Allows the user to enable/disable the alarm sound during a SIP call triggered by doorbell pressing.
SIP Proxy Compatibility Mode	Enables more proxy compatibility with cost of bandwidth, the SIP call will send audio no matter what.
SIP Packetization Compatibility Mode	When enabled, the GDS will have in SDP “packetization-mode = 0”. This is required when GDS is interacting with legacy video phones that only accepts this value to decode the RTP.



Enable Multi-channel Call Mode	<p>This feature allows the device to receive multiple calls at the same time, with one active and others on hold (up to 4 calls maximum). The first call the blue LED light will light up keypad digit “1”, 2nd call will light up keypad digit “2”, and so on. On hold call will have related digit blinking while active call will have the digit blue LED solid light up. Call can be switched by pressing the blinking digits.</p>
Allow Reset Via SIP NOTIFY	<p>Allows to factory reset the devices directly through SIP Notify.</p> <p>If “Allow Reset Via SIP NOTIFY” is “check”, then once the GDS3710 receives the SIP NOTIFY from the SIP server with Event: reset, the GDS3710 will perform a factory reset after authentication.</p> <p>This authentication can be either with:</p> <ul style="list-style-type: none"> • The admin password if no SIP account is configured on the GDS3710. • The SIP User ID and Password credentials of the SIP account if configured on the GDS3710. <p>Default is unchecked (disabled).</p>

Account [1-4] White List

This page allows users to configure the white list per account, which is a phone number or extension list that can call the GDS3710. (The call will be automatically answered when calling from a phone set on the white list, and all other inbound calls will be blocked), the user can configure up to 200 white phone numbers per SIP account.

Moreover, besides numbers associated to active cards, and numbers on the "Number Called When Door Bell Pressed" setting, all whitelisted numbers can open door remotely by using the respective PIN code.



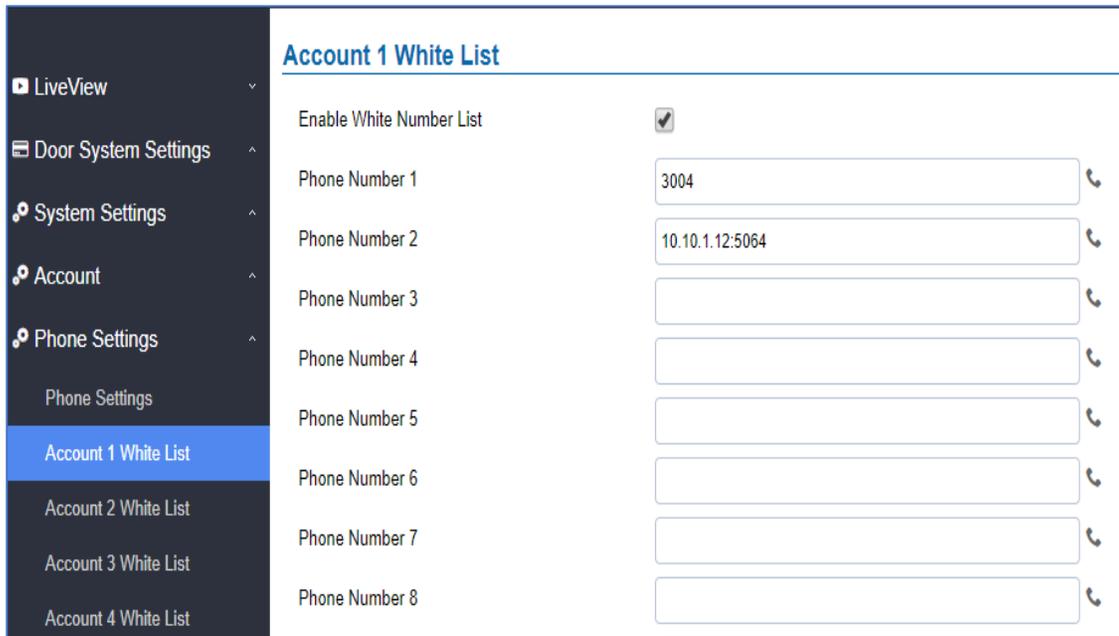


Figure 84: White List Page

The table below gives a brief overview of the options:

Table 17: White List

Enable White Number List	Enables the White List feature.
Phone Number 1 -200	Adds a new phone number to the white list.

Click-To-Dial

The GDS3710 allows users to manage their calls using the Click to Dial feature which permits to initiate calls using the Web GUI by pressing the Click to dial button to access the call menu as displayed on the following screenshot.



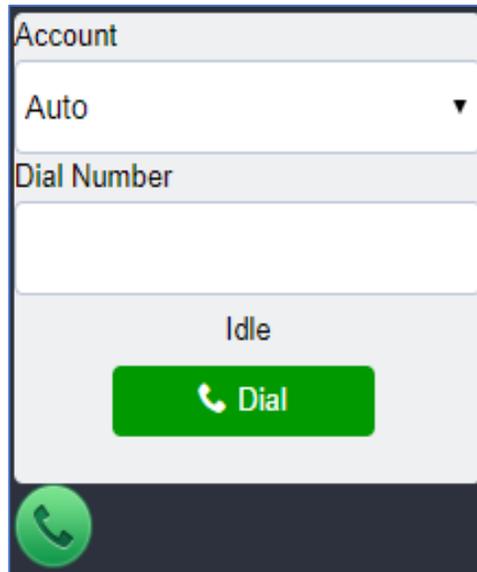


Figure 85 : Click-To-Dial

Note: Only the whitelisted numbers can open door remotely using PIN Code when calling GDS.

Video & Audio Settings

The audio and videos settings allow users to configure the video / audio codecs, videos resolution, CMOS settings and audio related settings.

Video Settings

- [LiveView](#)
- [Door System Settings](#)
- [System Settings](#)
- [Account](#)
- [Phone Settings](#)
- [Video & Audio Settings](#)
 - Video Settings
 - OSD Settings
 - CMOS Settings
 - Audio Settings
 - Privacy Masks
- [Alarm Settings](#)
- [Email & FTP Settings](#)
- [Maintenance](#)
- [Status](#)

Video Settings

Stream 1

Preferred Video Codec	H264
Profile	Main Profile
Resolution	1920*1080(16:9)
Bit Rate(kbps)	4096
Frame Rate(fps)	30
Bit Rate Control	CBR (Constant Bit Rate)
Image Quality	Normal
I-frame Interval	80

Stream 2

Preferred Video Codec	H264
Profile	Main Profile
Resolution	1280*720(16:9)
Bit Rate(kbps)	512
Frame Rate(fps)	25
Bit Rate Control	CBR (Constant Bit Rate)
Image Quality	Normal
I-frame Interval	80

Stream 3

Preferred Video Codec	H264
Profile	Main Profile
Resolution	320*240(4:3)

Save

Figure 86: Video Settings Page

Table 18: Video Settings

Preferred Video Codec (Stream1)	Selects the videos codecs, the codecs supported are H.264 and MJPEG supported. Default setting is H.264.
Profile	Selects the H.264 profile. Three profiles are available: Baseline, Main Profile and High Profile. Default setting is “Main Profile”.
Resolution	Specifies the resolution in pixels used at video image, 1080p or 720p.
Bit Rate(kbps)	Selects the video bit rate or bandwidth used.
Frame Rate(fps)	Selects the maximum frame rate used (more data if big frame used).

Bit Rate Control	Selects the constantly bit rate, or variable bit rate.
Image Quality	Selects the image quality used when Variable Bit Rate used.
I-frame Interval	Configures the I-frame interval (suggested 2~3 times of frame rate).
Preferred Video Codec(Stream2)	Selects the videos codecs, the codecs supported are H.264 and MJPEG supported. Default setting is H.264.
Profile	Selects the H.264 profile. Three profiles are available: Baseline, Main Profile and High Profile. Default setting is "Main Profile".
Resolution	Specifies the resolution in pixels used at video image, 1080p or 720p.
Bit Rate(kbps)	Selects the video bit rate or bandwidth used.
Frame Rate(fps)	Selects the maximum frame rate used (more data if big frame used).
Bit Rate Control	Selects the constantly bit rate, or variable bit rate.
Image Quality	Selects the image quality used when Variable Bit Rate used.
I-frame Interval	Configures the I-frame interval (suggested 2~3 times of frame rate).
Preferred Video Codec(Stream3)	Selects the videos codecs, the codecs supported are H.264 and MJPEG supported. Default setting is H.264.
Profile	Selects the H.264 profile. Three profiles are available: Baseline, Main Profile and High Profile. Default setting is "Main Profile".
Resolution	Specifies the resolution in pixels used at video image, 1080p or 720p.
Bit Rate(kbps)	Selects the video bit rate or bandwidth used.
Frame Rate(fps)	Selects the maximum frame rate used (more data if big frame used).
Bit Rate Control	Selects the constantly bit rate, or variable bit rate.
Image Quality	Selects the image quality used when Variable Bit Rate used.
I-frame Interval	Configures the I-frame interval (suggested 2~3 times of frame rate).

Notes:

- H.264 suggested if the GDS3710 needs to be viewed via Internet.
- For definition of Baseline, Main Profile and High profile of H.264 please refer to: [H.264 Profiles](#)
- If MJPEG is selected, reduce the frame rate to the minimal value to save bandwidth and get better image.
- Grandstream GDS3710 provides three video streams, users can use them with flexibility. For example, the high-resolution stream for local recording, another low or high resolution for SIP video phone call or remote smartphone monitoring application, or vice versa depending application scenarios.
- Use below link to calculate bandwidth and storage before installation
<http://www.grandstream.com/support/tools/bandwidth-storage-calc>



Retrieving Video Streams

- To retrieve video stream via RTSP, users can use the following format :
[rtsp://admin:password@IP_GDS3710:Port/X](#) where X=0,4,8 for 1st, 2nd, 3rd streams respectively
- To retrieve MJPEG video stream via http, users can use the following format:
[http\(s\)://admin:password@IP:port/jpeg/stream=X](#) (X=Stream channel 0,1,2)

Important note: MJPEG is uncompressed video and it can consume a lot of bandwidth and hardware resources, it is recommended to use it while taking this into consideration that it might slow down network and device.

OSD Settings

OSD Settings (On Screen Display) allow the users to Display time stamp and text on the video screen.

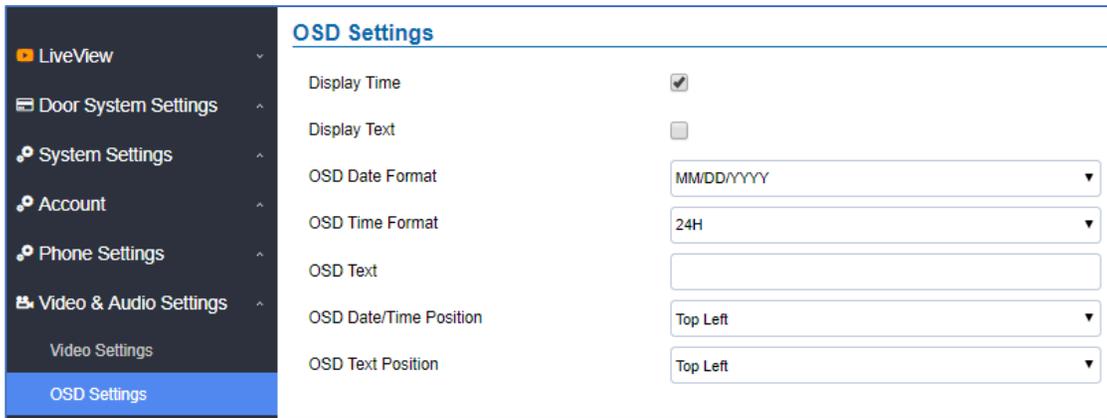


Figure 87: OSD Settings Page

Table 19: OSD Settings

Display Time	When checked, time will be displayed inside the video image.
Display Text	When checked, inputted text on “OSD Test” will be displayed on the video image.
OSD Date Format	OSD Date format, choose based on user preference.
OSD Time Format	OSD Time format, choose based on user preference.
OSD Text	Input a text (to identify the GDS3710) it will be shown on the screen. Maximum length is 32.
OSD Date/Time Position	Show the Date/Time position on the screen.
OSD Text Position	Show the text position on the screen.

CMOS Settings

This page configures the CMOS parameters for different scenarios.

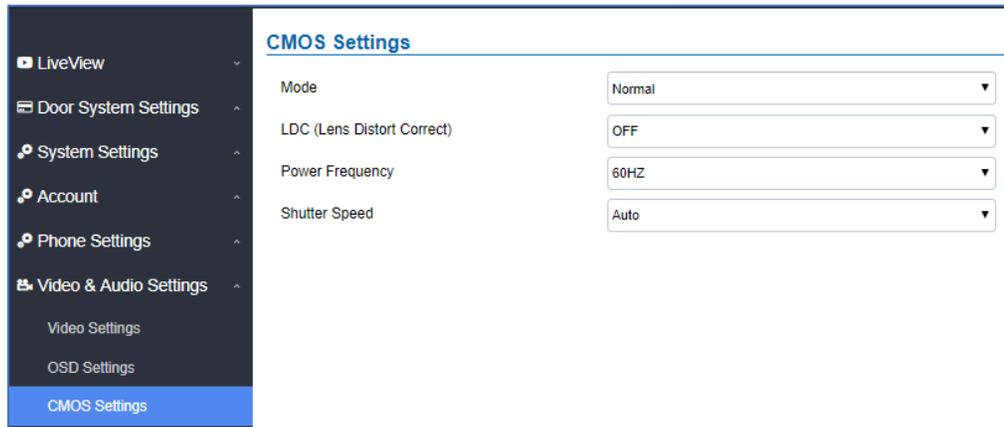


Figure 88: CMOS Settings Page

Table 20: CMOS Settings

Mode	Pull down to choose “Normal, Low Light, WDR” for different light condition. Default “Normal”.
LDC	Default “OFF”. When “ON” the display will take a normal shape, but will lose some details located at corner of the original view.
LDC Ratio	Select LDC Ratio. Available options: 0.7 ; 0.8 ; 0.9 ; 1.0 ; 1.1 ; 1.2 ; 1.3 Default value is 1.0
Power Frequency	Select the frequency power. 50Hz or 60Hz.
Shutter Speed	Defines how much time the shutter of the camera or exposed to the light, when taking a screenshot.

Audio Settings

This page allows users to configure the audio settings.



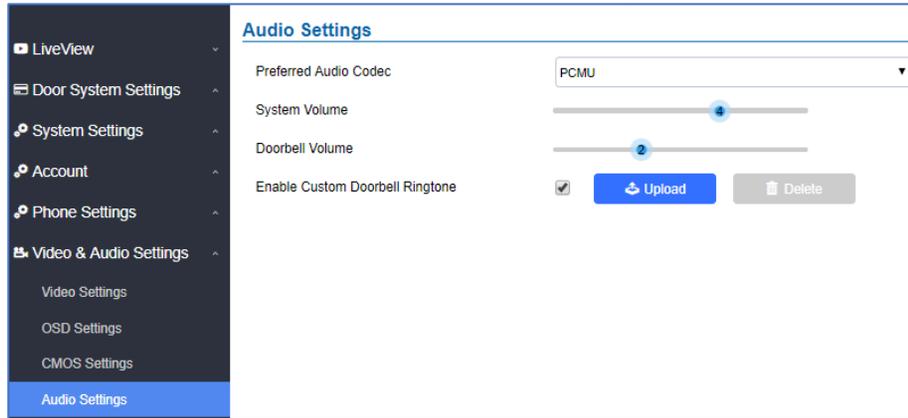


Figure 89: Audio Settings Page

Table 21: Audio Settings

Preferred Audio Codec	Configures the audio codec. Three codecs are available: PCMU, PCMA and G.722 are supported.
System Volume	Adjusts the speaker volume connected.
Doorbell Volume	Adjusts the doorbell volume.
Enable Custom Doorbell Ringtone	User can check this option in order to use the custom Doorbell Ringtone. Default Ringtone is used when this option is disabled.

- Click on  to upload the ringtone file, then press 
- Click on  to delete the existent custom ringtone.
- Support upload WAV, PCM audio file(size <= 600K). Format limit to:
 - WAV:**
 1. Sample Rate: 8k or 16k.
 2. Channel: Mono-channel or Dual-channel.
 - PCM:**
 1. Sample Rate: 8K.
 2. Channel: Dual-channel.

Note: Empty audio file is not accepted.

Privacy Masks

This page allows users to configure privacy masks up to 4 different regions by selecting different regions requiring privacy mask as displayed on the following figure.

When privacy mask enabled, the video at related region will be masked by black color and no video displayed inside that mask.



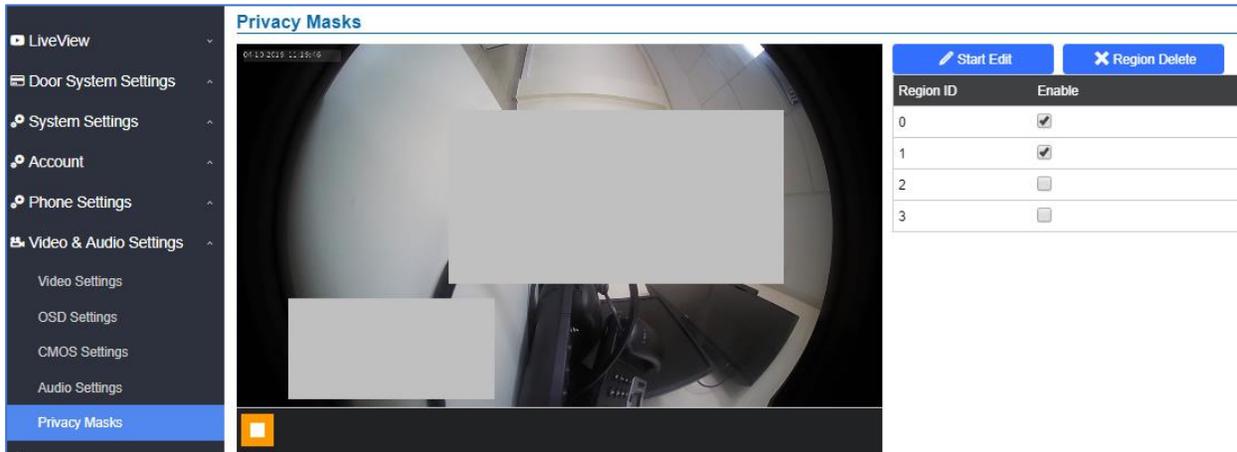


Figure 90: Privacy Masks Configuration Page

Alarm Settings

This page allows users to configure alarm schedule and alarm actions.

Alarm Events Config

This page allows users to configure GDS3710 events to trigger programmed actions within predefined schedule.

GDS3710

- LiveView
- Door System Settings
- System Settings
- Account
- Phone Settings
- Video & Audio Settings
- Alarm Settings
 - Alarm Events Config
 - Alarm Schedule Settings
 - Alarm Action Settings
 - Alarm Phone List
- Email & FTP Settings
- Maintenance
- Status

Alarm Events Config

Motion Detection

Enable Motion Detection	<input checked="" type="checkbox"/>	Region Config
Sensitivity	<input type="range" value="51"/>	
Select Alarm Schedule	All Day	Edit Schedule
Select Alarm Action Profile	profile1	Edit Profile

Digit Input

Digit Input 1		Alarm Input
Digit Input 1 Status		Normal Close
		Current state is OPEN
Select Schedule 1		All Day
Select Alarm Action Profile 1		profile1
		Edit Profile
Digit Input 2		Open Door
Digit Input 2 Open Door Option		<input checked="" type="checkbox"/> Door 1 <input type="checkbox"/> Door 2
Select Schedule 2		All Day
		Edit Schedule

Alarm Config

Enable Silent Alarm Mode	<input type="checkbox"/>	
Enable Hostage Code	<input type="checkbox"/>	
Enable Tamper Alarm	<input type="checkbox"/>	
Enable Alarm for PIN Input Error	<input checked="" type="checkbox"/>	
Select Alarm Action Profile		profile1
		Edit Profile
Enable Non-scheduled Access Alarm	<input type="checkbox"/>	

Save

Figure 91: Events Page

Alarm can be triggered either by motion detection or by GDS3710 input.

Motion Detection

Users can select a specific region to trigger the alarm using motion detection.



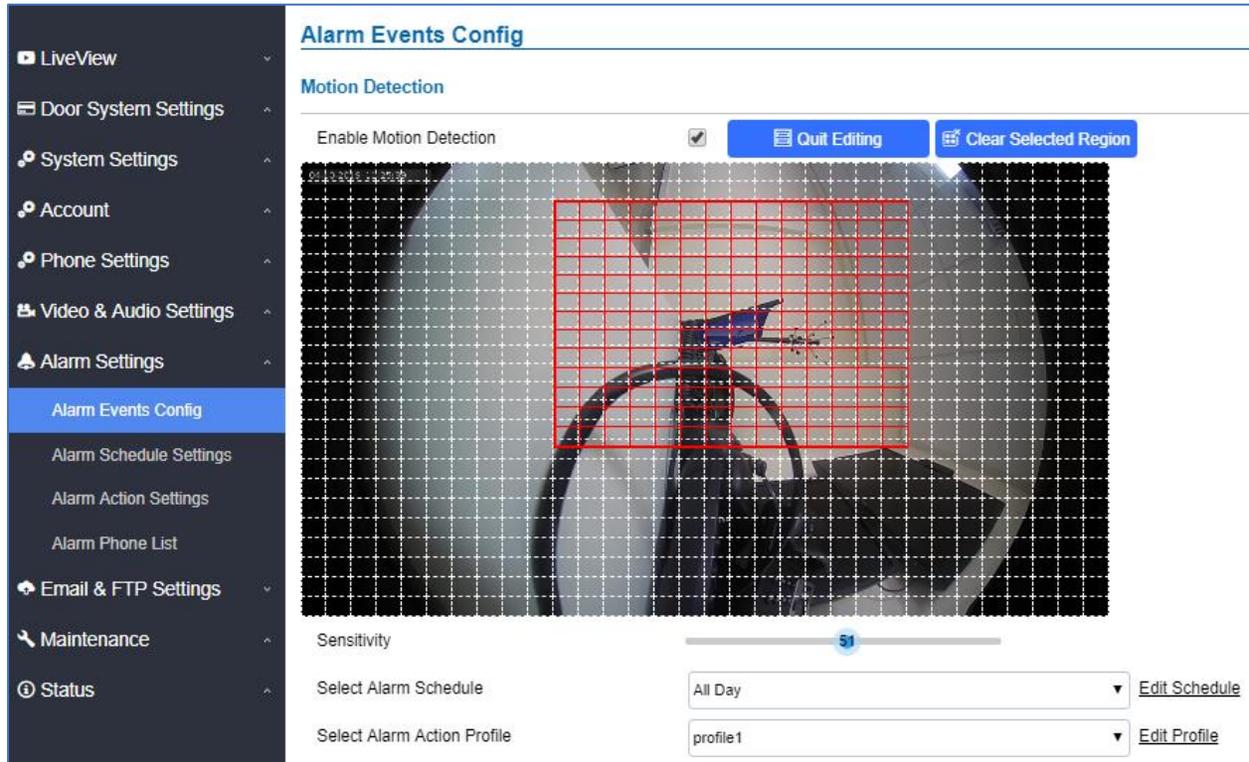


Figure 92: Region Config

Table 22: Motion Detection

Enable Motion Detection	Enables the motion detection feature.
Region Config	Configures the motion detection region.
Quit Config	Exits the motion detection region config menu.
Clear Selected Region	Selects a zone on the screen then click on “Clear” to delete the region.
Sensitivity	Specifies the region sensitivity (value between 0-100%).
Select Alarm Schedule	Selects the alarm schedule.
Select Alarm Action Profile	Selects the programmed Alarm Action profile.

Digital Input

Digit Input	
Digit Input 1	Alarm Input ▼
Digit Input 1 Status	Normal Close ▼ Current state is OPEN
Select Schedule 1	All Day ▼ Edit Schedule
Select Alarm Action Profile 1	profile1 ▼ Edit Profile
Digit Input 2	Open Door ▼
Digit Input 2 Open Door Option	<input checked="" type="checkbox"/> Door 1 <input type="checkbox"/> Door 2
Select Schedule 2	All Day ▼ Edit Schedule

Figure 93: Digital Input

Table 23: Digital Input

Digital Input 1	<p>Selects the Input method (alarm Input or Door Open). Default disabled.</p> <p>Digital Input Port operates in 3 Modes:</p> <ol style="list-style-type: none"> Alarm Input: Connect sensor to trigger alarm. Open door: Connect a switch to open door from inside. Abnormal Door Control: This is a major security enhancement for GDS37xx when device be tampered to open the door abnormally. <i>Please check Siren alarming when door opened abnormally section.</i> <p>If Digital Input port is connected to a switch, it will not work during the time of power outage, device booting or firmware upgrading.</p>
Digit Input 1 Open Door Option	<ul style="list-style-type: none"> When Digital Input is set to Open door then user can select the doors to be affected when Alarm IN 1 is triggered.
Input Digit 1 Status	<ul style="list-style-type: none"> If set to Normal Open: Configured alarm will be triggered when Digital Input Status switch from Close to Open. If set to Normal Close: Configured alarm will be triggered when Digital Input Status switch from Open to Close. <p>By default, Input Digit 1 Status is “Disabled”.</p>
Select Alarm Schedule 1	Selects the predefined Alarm Schedule.
Select Alarm Action Profile 1	Selects the predefined Alarm Action for Profile 1.
Digital Input 2	<p>Selects the Input method (alarm Input or Door Open). Default disabled.</p> <p>Digital Input Port operates in 2 Modes:</p> <ol style="list-style-type: none"> Alarm Input: Connect various of sensor to trigger alarm.



	<p>2. Open Door: Connect a switch to open door from inside.</p> <p>If Digital Input port is connected to a switch, it will not work during the time of power outage, device booting or firmware upgrading.</p>
Digit Input 2 Open Door Option	When Digital Input is set to Open door then user can select the doors to be affected when Alarm IN 2 is triggered.
Input Digit 2 Status	<ul style="list-style-type: none"> If set to Normal Open: Configured alarm will be triggered when Digital Input Status switch from Close to Open. If set to Normal Close: Configured alarm will be triggered when Digital Input Status switch from Open to Close. <p>By default, Input Digit 2 Status is “Disabled”.</p>
Select Alarm Schedule 2	Selects the predefined Alarm Schedule.
Select Alarm Action Profile 2	Selects the predefined Alarm Action for Profile 2.
Alarm Output Duration(s)	Select the duration of the alarm output: 5/10/15/20/25/30 seconds. This option is hidden when ALMOUT1 Feature is set to Open Door.

Enable Silent Alarm Mode

If Silently Alarm Mode is enabled, GDS3710 will disable alarm sound and background light for specified alarms types (Digital Input, Motion Detection...) when they are triggered.

Note: This option affects only alarm sound/light, other actions will still be applied.

Table 24: Silently Alarm Mode

Enable Silent Alarm Mode	Enable/Disable silent alarm mode.
Silently Alarm Options	<p>When the silently alarm mode is enabled, users can specify to which alarm options the silently mode will be applied to.</p> <p>The available options are: Digital Input, Motion Detection, Tamper Alarm, and Password Error.</p>

Hostage Code

Hostage password can be used in a critical situation for instance a kidnaping or an emergency, users need to enter the following sequence to trigger the actions set for the Hostage Mode: “* **HostagePassword #**”.

Table 25: Hostage Code Alarm

Enable Hostage Code	Enable/Disable the Hostage password mode.
Hostage Code	Configures the password for the hostage mode.
Select Alarm Action Profile	<p>Select the Alarm action to be taken when the hostage password is typed on the GDS3710 keypad.</p> <p>Note: No sound alarm will be triggered in this mode.</p>



Tamper Alarm

Tamper alarm is anti-hack from Hardware level. When this option is checked, if the GDS3710 is removed from the installation board, it will trigger configured alarm actions. There is an embedded mechanism on the GDS3710 that allows it to detect when it is removed.

Table 26: Tamper Alarm

Enable Tamper Alarm	When activating this mode, GDS3710 will keep alarming until the alarm is dismissed.
Select Alarm Action Profile	Select the type of alarms actions to be triggered for the tamper alarm mode.

Keypad Input Error Alarm


Table 27: Keypad Input Error Alarm

Enable Keypad Input Error Alarm	Enable/Disable the Input Error Alarm, GDS3710 will trigger alarm actions at every 5 incorrect attempts.
Select Alarm Action Profile	Select the type of alarms actions to be triggered after 5 incorrect attempts.

Non-Scheduled Access Alarm

Table 28 : Non-Scheduled Access Alarm

Enable Non-Scheduled Access Alarm	When enabling this feature, GDS3710 will trigger alarm to related administrator to be aware when legitimated users access the door out of the allowed configured schedule
Select Alarm Action Profile	Select the type of alarms actions to be triggered.

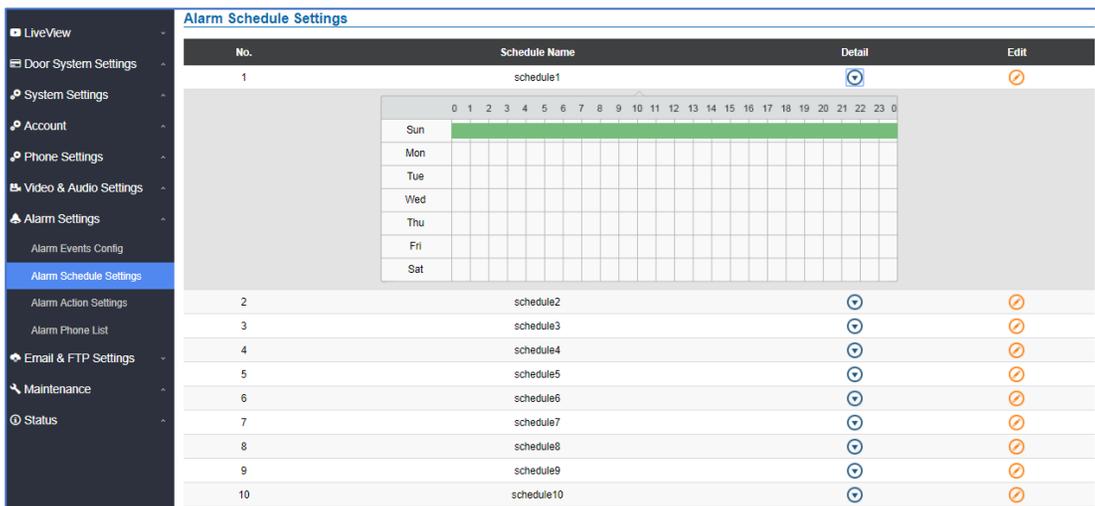

The screenshot shows the 'Alarm Schedule Settings' interface. On the left is a navigation menu with options like LiveView, Door System Settings, System Settings, Account, Phone Settings, Video & Audio Settings, Alarm Settings, Alarm Events Config, Alarm Schedule Settings (highlighted), Alarm Action Settings, Alarm Phone List, Email & FTP Settings, Maintenance, and Status. The main area displays a table of 10 schedules:

No.	Schedule Name	Detail	Edit
1	schedule1		
2	schedule2		
3	schedule3		
4	schedule4		
5	schedule5		
6	schedule6		
7	schedule7		
8	schedule8		
9	schedule9		
10	schedule10		

Below the first row, a calendar view for 'schedule1' is shown, with days of the week (Sun-Sat) and hours (0-23) on the axes. The Sunday row is highlighted in green.

Figure 94: Alarm Schedule



GDS3710 supports up to 10 alarm schedules to be configured, with time span specified by users. User can edit the alarm schedule by clicking  button. Usually the 24 hours' span is 00:00 ~ 23:59, which is 24 hours' format.

Users can copy the configuration to different date during the schedule programming.

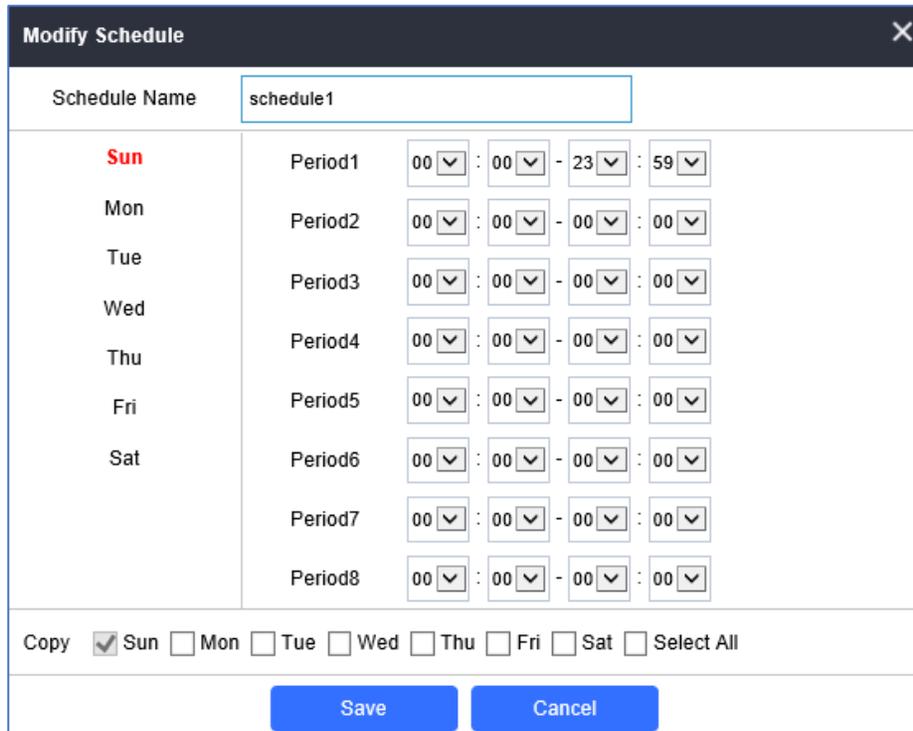


Figure 95: Edit Schedule

Alarm Action When Illegal Card Swiped

When this feature is enabled, any illegal card swiped trying to access the door will trigger alarm based on user's configuration.

Table 29: Alarm action when illegal card swiped

Enable Non-authorized RFID Card Access Alarm	Enable/Disable the option to activate the profile to be executed when unauthorized card swipes.
Select Alarm Action Profile	Select the type of alarms actions to be triggered after unauthorized card was swiped.

Alarm Action Settings

This page specifies the configuration of Profile used by the Alarm Actions. A Profile is required before the Alarm Action can take effect.



Alarm Action Settings					
No.	Alarm Action Profile Name	Detail	Edit	Test	
1	profile1	<div style="display: flex; justify-content: space-between;"> <div style="width: 45%;"> <p><input checked="" type="checkbox"/> Upload to Alarm Center</p> <p><input checked="" type="checkbox"/> Audio Alarm to SIP Phone</p> <p><input checked="" type="checkbox"/> Send Email</p> </div> <div style="width: 45%;"> <p><input checked="" type="checkbox"/> Audio Alarm</p> <p><input checked="" type="checkbox"/> Alarm Output</p> <p><input checked="" type="checkbox"/> Upload Snapshot</p> </div> </div>			
2	profile2				
3	profile3				
4	profile4				
5	profile5				
6	profile6				
7	profile7				
8	profile8				
9	profile9				
10	profile10				

Figure 96: Alarm Action

User can edit the alarm action by clicking  button, the following window will popup.

Modify Alarm Action Profile ✕

Alarm Action Profile Name

Upload to Alarm Center

Audio Alarm to SIP Phone

Send Email

Audio Alarm

Alarm Output

Upload Snapshot

Save

Cancel

Figure 97: Edit Alarm Action

To test an alarm action profile, users can click on  button and the GDS will initiate all actions specified on the select alarm profile.

Table 30: Alarm Actions

Upload to Alarm Center	If selected, the GDS Manager will popup alarm window and sound alarm in the computer speaker.
-------------------------------	---

Audio Alarm to SIP Phone	If selected, GDS3710 will call pre-configured (video or audio) phone and will play sound alarm.
Send Email	If selected, an email with snapshot will be sent to the pre-configured email destination.
Audio Alarm	If selected, GDS3710 will play alarm audio using built-in speaker.
Alarm Output	If selected, the alarm will be sent to the equipment (for example: Siren) connected to Alarm Output interface.
Upload Snapshot	If selected, snapshots at the moment where the event is triggered will be sent to preconfigured destination (e.g.: FTP or email).

Alarm Phone List

This page allows users to configure the Alarm Phone List, which are phone numbers or extensions list that the GDS3710 will call out when event is triggered (e.g.: doorbell pressed).

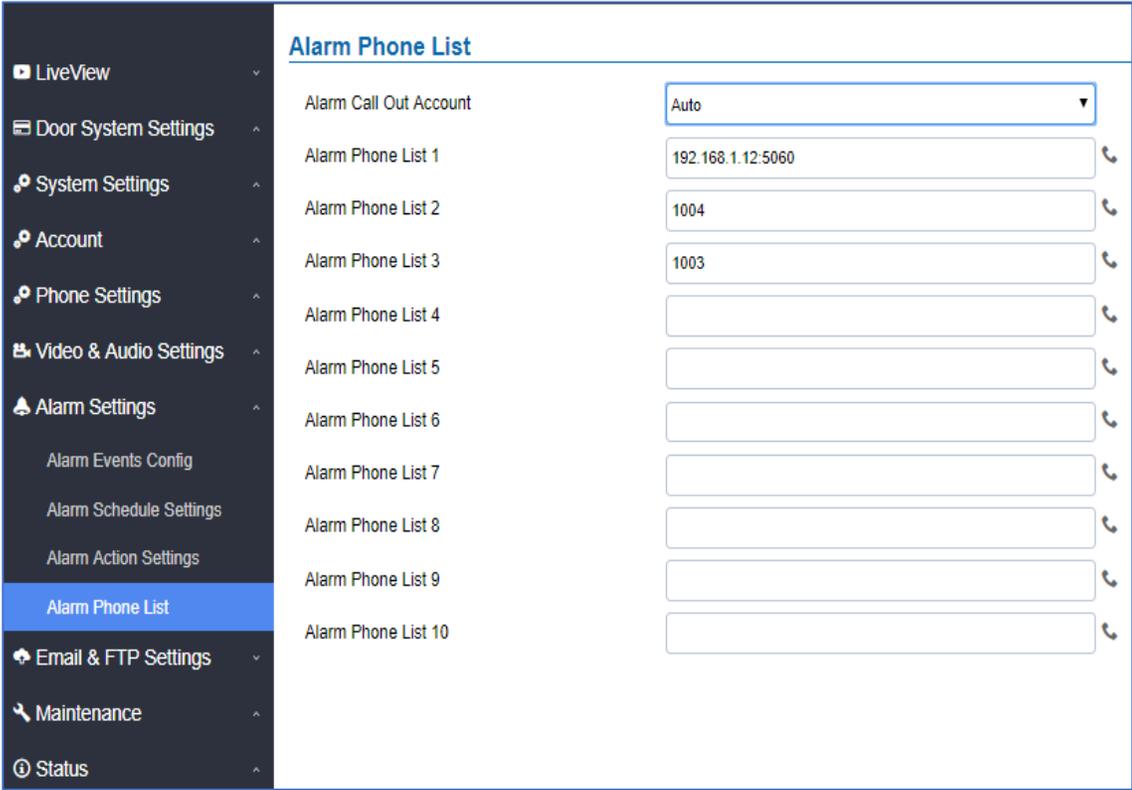


Figure 98: Alarm Phone List

Table 31: Alarm Phone List

Alarm Call Out Account	Select the SIP Account to be used by the GDS when alarm out is triggered.
-------------------------------	---

Alarm Phone List 1-10

Add or delete number from the phone alarm list. (When IP address is used then the port needs to be appended, example: 192.168.1.12:5060).

Once the event is triggered (Motion Detection, Door Bell Pressed...), the GDS3710 will call the first number, once time out is reached and no answer is returned from the first number, the GDS3710 will try the next number on the list and so on. Once the remote phone answers the call, an alarm will be played to notify users that an event is triggered.

Email & FTP Settings

This page contains Email and FTP Settings.

Email Settings

This page allows users to configure email client to send out an email when the alarm is triggered.

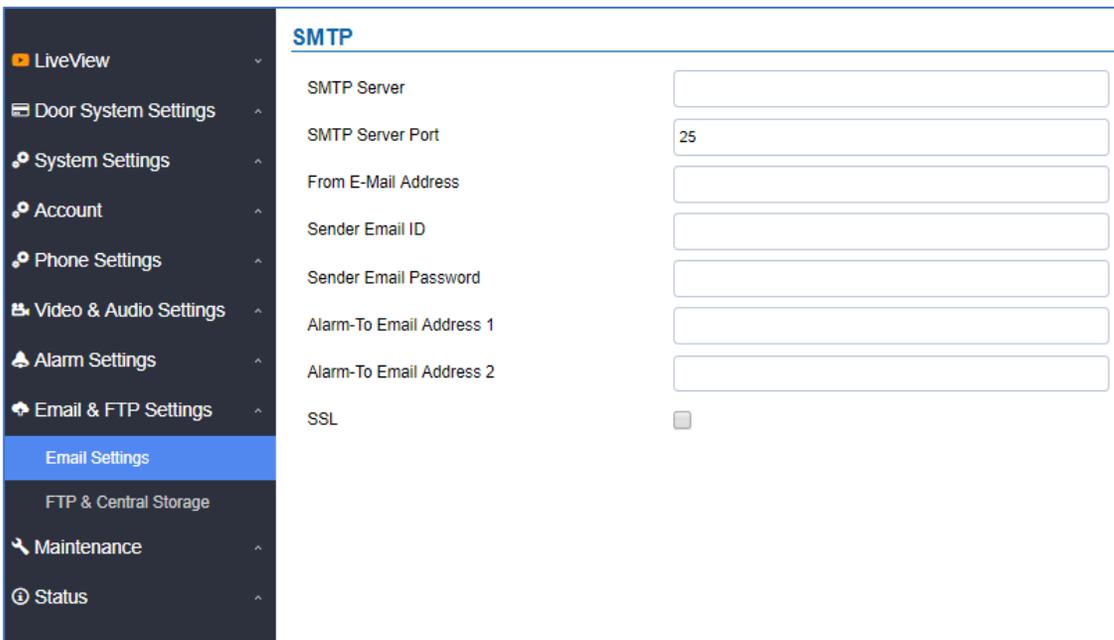



Figure 99: Email Settings - SMTP Page

Table 32: Email Settings - SMTP

SMTP Server	Configures the SMTP Email Server IP or Domain Name.
SMTP Server Port	Specifies the Port number used by server to send email.
From E-mail address	Specifies email address of alarm email sending from, usually client email ID.
Sender Email ID	Specifies sender's User ID or account ID in the email system used.
Sender Email Password	Specifies sender's password of the email account.

Alarm-To Email Address 1	Specifies the 1 st email address to receive the alarm email.
Alarm-To Email Address 2	Specifies the 2 nd email address to receive the alarm email.
SSL	Check if the SMTP email server requires SSL.

Notes:

- Click “Save” to save the email configuration information.
- Click “Email Test” after configuration, if settings are correct, a test email will send out and “E-mail test successfully”  message on the top page will appear.


FTP & Center Storage

This page allows users to configure the FTP Settings in order to upload capture images.

Table 33: Picture Storage Settings

Storage Server Type	Selects whether to upload pictures to the GDS Manager or upload them to the FTP server.
FTP Server	Configures the IP address of the FTP server when selected to upload images to.
FTP Server Port	Specifies the FTP address port.
FTP User Name	Specifies the FTP server account name.
FTP Password	Specifies the FTP server password.
FTP Path	Specifies the storage path.
FTP Test	Click to test the connection with FTP server.

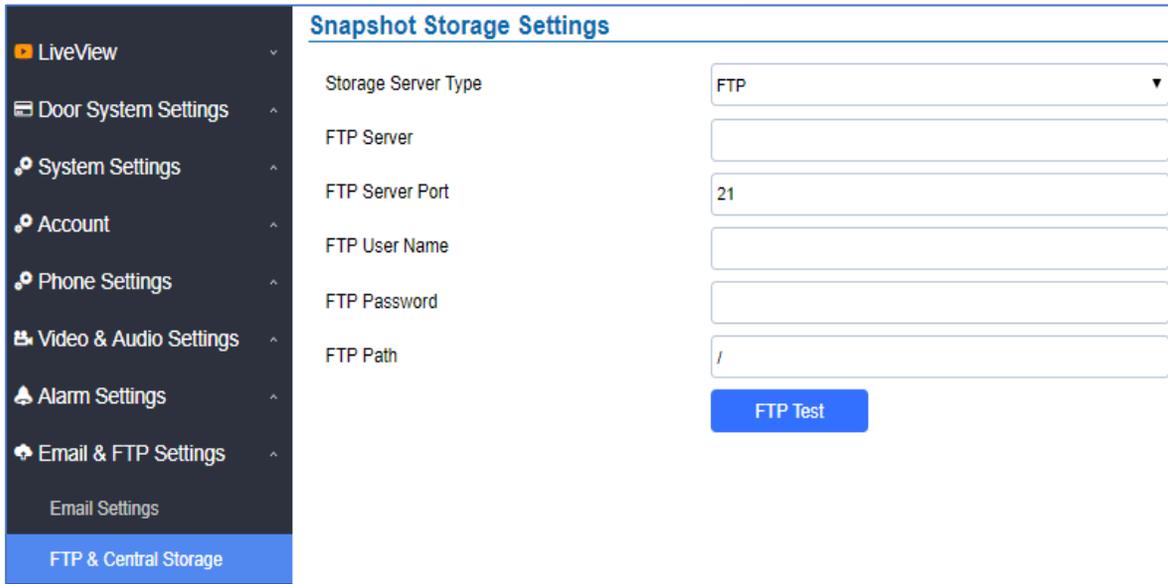Note: Blank fields when using Storage Server Type as Central Storage might imply no configuration in GDSManager.



The screenshot shows the 'Snapshot Storage Settings' page. On the left is a dark sidebar menu with options: LiveView, Door System Settings, System Settings, Account, Phone Settings, Video & Audio Settings, Alarm Settings, Email & FTP Settings, Email Settings, and FTP & Central Storage (highlighted). The main content area has the title 'Snapshot Storage Settings' and the following fields: Storage Server Type (dropdown menu with 'FTP' selected), FTP Server (text input), FTP Server Port (text input with '21'), FTP User Name (text input), FTP Password (text input), and FTP Path (text input with '/'). A blue 'FTP Test' button is located below the FTP Path field.

Figure 100: Picture Storage Settings

Notes:

- If the connection to the FTP server is successful, a “.txt” file containing a success message will be uploaded to the FTP server. And the following message will pop up on the webGUI:

- Central Storage will use GDS Manager built-in FTP server to store screenshots.

FTP Filenames

When setting up FTP server to store snapshots (when doorbell pressed, or door Unlocked), the GDS will create folder with device MAC address (if multiple GDS3710s are sending snapshots to same FTP server).

In EACH folder based on MAC address or device, the file folder will be created by DATE, to organize and classify the snapshots received during different DATE for easy analysis.

In EACH folder classified with DATE, the snapshot file name is based on following naming schema:

Table 34: FTP Filenames

FTP Filename with	Description
CARD	Meaning that open door operation is using RFID card.
LPIN (Local PIN)	Meaning that open door operation is via Local PIN (Private PIN, or Unified PIN, or Guest PIN).



RPIN (Remote PIN)	Meaning that open door operation is via remote PIN or DTMF PIN. (by local or remote SIP extensions, or GS_Wave/Cellphone, or GDSManager if installed in operation).
RING	Meaning the snapshot taken when somebody pressed the Door Bell button.

The following figure illustrates the FTP filenames sent to the FTP server when the above operations have been taken:

```

[To Parent Directory]
Friday, March 02, 2018 9:39 AM 76504 BA854E CARD 2018-03-02 100355 7558019 0.jpg
Friday, March 02, 2018 9:39 AM 82105 BA854E CARD 2018-03-02 100356 0.jpg
Friday, March 02, 2018 9:39 AM 83406 BA854E CARD 2018-03-02 100356 7558019 1.jpg
Friday, March 02, 2018 9:39 AM 82427 BA854E CARD 2018-03-02 100357 0.jpg
Friday, March 02, 2018 9:39 AM 83266 BA854E CARD 2018-03-02 100358 0.jpg
Friday, March 02, 2018 9:39 AM 85094 BA854E CARD 2018-03-02 100359 0.jpg
Friday, March 02, 2018 9:39 AM 87633 BA854E CARD 2018-03-02 100400 0.jpg
Friday, March 02, 2018 9:39 AM 86810 BA854E CARD 2018-03-02 100401 0.jpg
Friday, March 02, 2018 7:46 AM 76148 BA854E LPIN 2018-03-02 080942 0.jpg
Friday, March 02, 2018 7:46 AM 75696 BA854E LPIN 2018-03-02 080943 0.jpg
Friday, March 02, 2018 7:46 AM 79922 BA854E LPIN 2018-03-02 080944 0.jpg
Friday, March 02, 2018 7:46 AM 81914 BA854E LPIN 2018-03-02 080945 0.jpg
Friday, March 02, 2018 7:46 AM 79908 BA854E LPIN 2018-03-02 080946 0.jpg
Friday, March 02, 2018 7:46 AM 79514 BA854E LPIN 2018-03-02 080947 0.jpg
Friday, March 02, 2018 7:46 AM 80353 BA854E LPIN 2018-03-02 080948 0.jpg
Friday, March 02, 2018 8:36 AM 81201 BA854E LPIN 2018-03-02 090050 0.jpg
Friday, March 02, 2018 8:36 AM 82609 BA854E LPIN 2018-03-02 090051 0.jpg
Friday, March 02, 2018 8:36 AM 79362 BA854E LPIN 2018-03-02 090052 0.jpg
Friday, March 02, 2018 8:36 AM 86139 BA854E LPIN 2018-03-02 090053 0.jpg
Friday, March 02, 2018 8:36 AM 85269 BA854E LPIN 2018-03-02 090054 0.jpg
Friday, March 02, 2018 8:36 AM 84463 BA854E LPIN 2018-03-02 090055 0.jpg
Friday, March 02, 2018 8:36 AM 86007 BA854E LPIN 2018-03-02 090056 0.jpg
Friday, March 02, 2018 8:50 AM 82610 BA854E LPIN 2018-03-02 091348 0.jpg
Friday, March 02, 2018 8:50 AM 81378 BA854E LPIN 2018-03-02 091349 0.jpg
Friday, March 02, 2018 8:50 AM 83379 BA854E LPIN 2018-03-02 091350 0.jpg
Friday, March 02, 2018 8:50 AM 83745 BA854E LPIN 2018-03-02 091351 0.jpg
Friday, March 02, 2018 8:50 AM 87227 BA854E LPIN 2018-03-02 091352 0.jpg
Friday, March 02, 2018 8:50 AM 87199 BA854E LPIN 2018-03-02 091353 0.jpg
Friday, March 02, 2018 8:50 AM 84078 BA854E LPIN 2018-03-02 091354 0.jpg
Friday, March 02, 2018 9:44 AM 77783 BA854E LPIN 2018-03-02 100955 0.jpg
  
```

Figure 101 : FTP filenames

Maintenance Settings

This page shows the GDS3710 Maintenance parameters.

Upgrade

This page contains the upgrade and provisioning parameters of the GDS3710.



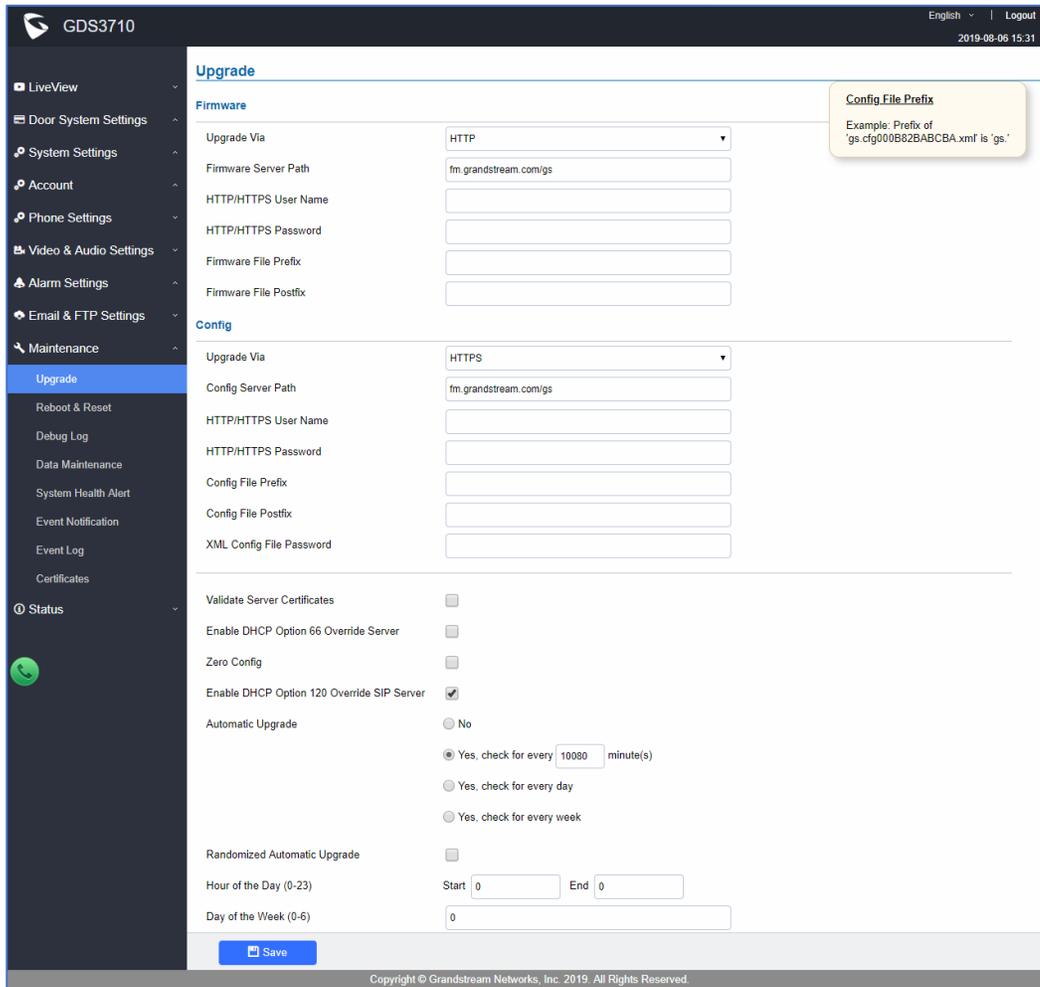


Figure 102: Upgrade Page

Table 35: Upgrade

Upgrade Via	Selects the upgrade method (TFTP, HTTP, and HTTPS).
Firmware Server Path	Configures the IP address or the FQDN of the upgrade server.
HTTP/HTTPS User Name	The user name for the HTTP/HTTPS server.
HTTP/HTTPS Password	The password for the HTTP/HTTPS server.
Firmware File Prefix	Enables your ITSP to lock configuration updates. If configured, only the firmware file with the matching encrypted prefix will be downloaded and flashed into the phone.
Firmware File Postfix	Enables your ITSP to lock firmware updates. If configured, only the firmware with the matching encrypted postfix will be downloaded and flashed into the phone.
Upgrade via	Selects the upgrade method (TFTP, HTTP, and HTTPS).
Config Server Path	Configures the IP address or the FQDN of the configuration server.



HTTP/HTTPS User Name	The user name for the HTTP/HTTPS server.
HTTP/HTTPS Password	The password for the HTTP/HTTPS server.
Config File Prefix	Enables your ITSP to lock configuration updates. If configured, only the configuration file with the matching encrypted prefix will be downloaded and flashed into the phone.
Config File Postfix	Enables your ITSP to lock configuration updates. If configured, only the configuration file with the matching encrypted postfix will be downloaded and flashed into the phone.
XML Config File Password	Specifies the password for the configuration file.
Validate Server Certificate	Enable this option in order to validate certificate with trusted ones during TLS connection.
Automatic Upgrade Interval	Specifies the upgrade interval in minutes.
Enable DHCP Option 66 Override Server	Activates DHCP option 66 to override upgrade/config servers.
Zero Config	Enables Zero Config feature for auto provisioning.
Enable DHCP Option 120 Override SIP Server	Enables DHCP Option 120 from local server to override the SIP Server on the phone. The default setting is enabled.
Automatic Upgrade	Enables automatic upgrade and provisioning. Set schedule for provisioning for either every X minutes, every day or every week. Default is No.
Randomized Automatic Upgrade	Enable and define the start/End hours of the day and days of the week where the GDS will randomly checking for update.
Disable SIP NOTIFY Authentication	If this option is checked, the Device will not challenge NOTIFY with 401. Default setting is Enabled.

LED Pattern:

During the upgrade process and starting from firmware 1.0.3.32, the GDS will give indication about the progress of the process using LED lighting as follow:

- 1) Doorbell button blue LED will flash when firmware files are downloading.
- 2) Digit 1,2,3 blue LED will flash during upgrading from 0 to 25%, then stays on.
- 3) Digit 4,5,6 blue LED will flash during upgrading from 25 to 50%, then stays on.
- 4) Digit 7,8,9 blue LED will flash during upgrading from 50 to 75%, then stays on.
- 5) Digit *,0,# blue LED will flash during upgrading from 75 to 100%, then stays on.
- 6) After all key's blue LEDs light on then flash twice then reboot itself to finish the upgrade process.



Reboot & Reset

This page allows user to reboot and reset the GDS3710.

Reboot & Reset

Reboot Reboot

Auto Reboot Everyday 00 : 00

Reset Reset

Retain Network Data Only v

Figure 103: Reset & Reboot Page

Table 36: Reset & Reboot

Reboot	When clicked, the GDS3710 will restart (soft reboot).
Auto Reboot	With this feature, user can configure convenient selected schedule for the device reboot by itself, per week or per day, to make a smooth performance.
Reset	There are two options for the reset function.
Clear All Data	All data will be reset, GDS3710 will be set to factory default.
Retain Network Data Only	All data will be erased except for Network data like IP address...
Retain Only Card Information	All data will be erased except for cards information.
Retain Network Data and Card Information	All data will be erased except for Network Data and Card Information.

Debug Log

This page allows user to configure SYSLOG to collect information to help troubleshooting issues with GDS3710.



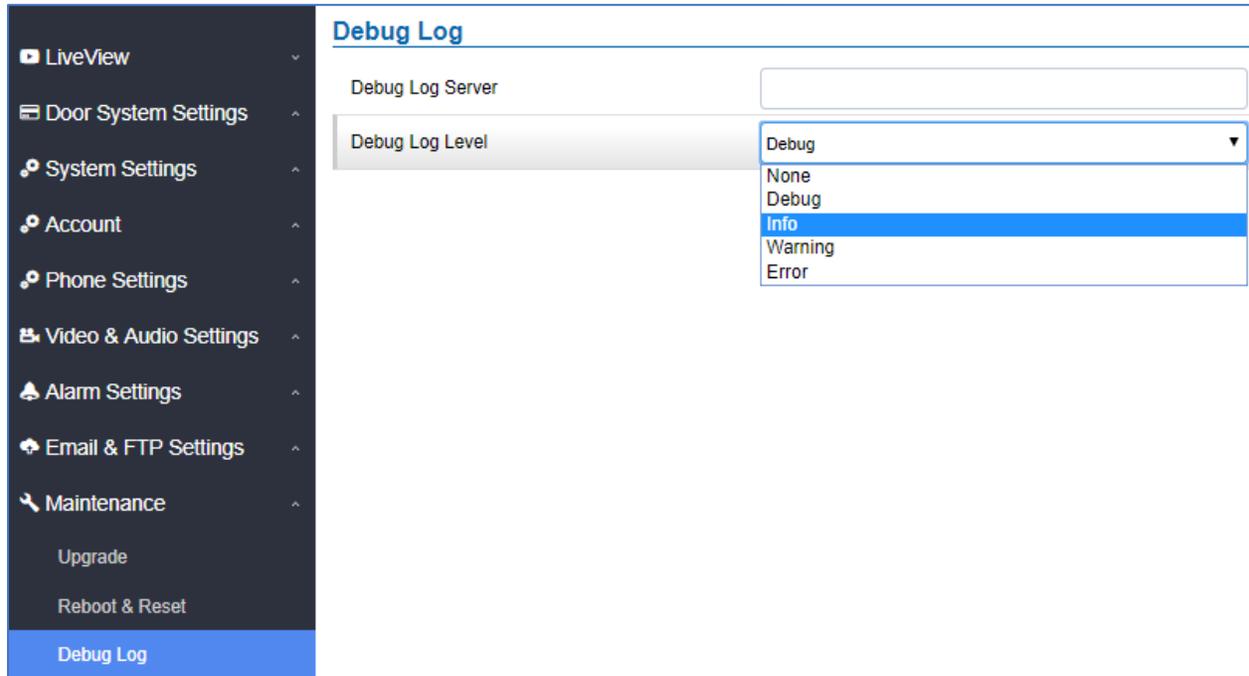


Figure 104: Debug Log Page

- Five levels of Debugging are available, None, Debug, Info, Warning, Error.
- Once the Syslog Server and the level entered, press “Save” and then Reboot the GDS3710 to apply the settings.

Data Maintenance

This page allows users to manage the GDS3710 configuration file by importing/exporting configuration files.



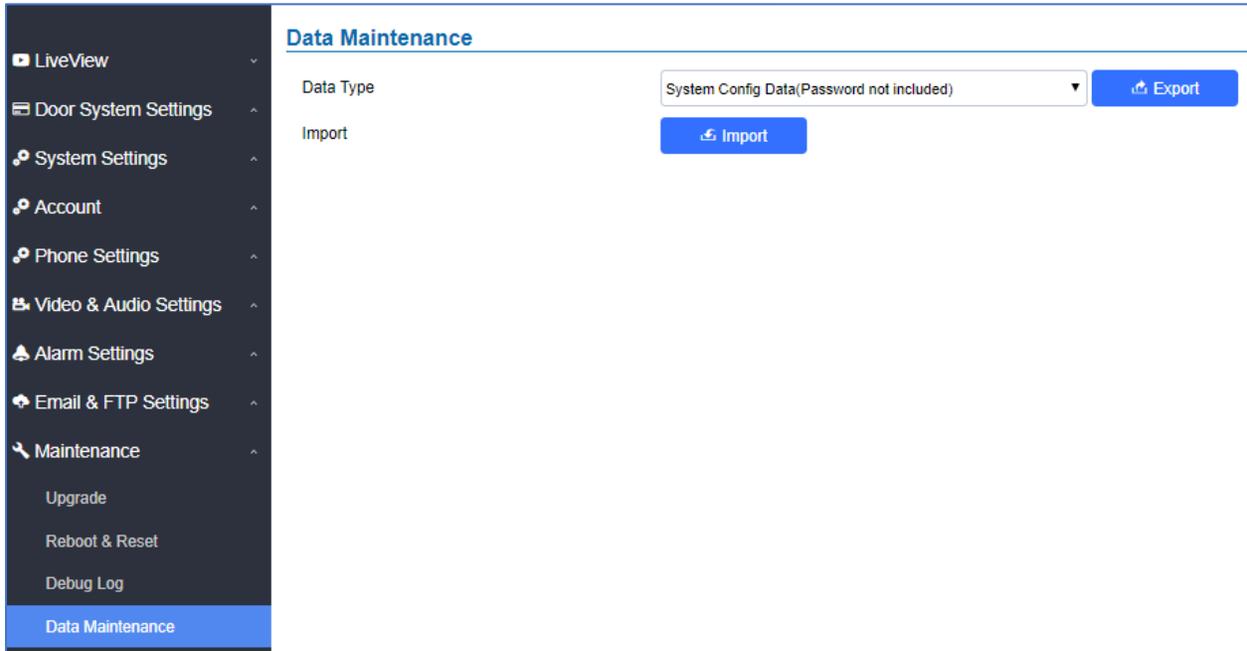


Figure 105: Data Maintenance Page

Click on  to save the GDS3710 configuration in a predefined directory.

Note: Users can either select to include all the passwords (SIP, FTP, Remotes access...) on the configuration files exported or not including the passwords as displayed on the previous figure.

System Health Alert

This option allows users to receive alert emails regarding SIP Registration Status of accounts, System Running Status or System Temperature in real time or in a periodic manner.

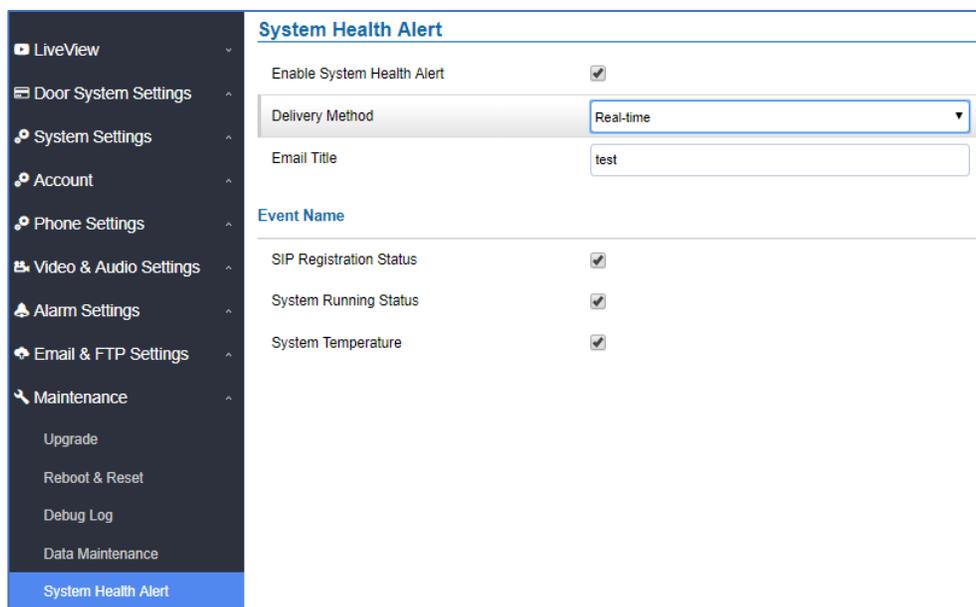


Figure 106: System Health Alert Page



Enable System Health Alert	When this option is checked, then the GDS will send alert emails regarding the events selected under Event Name section using the already configured [Email Settings].
Delivery Method	When set to Realtime, the GDS will be sending successively alert emails every second. When set to Periodic, user can define the time interval between alert emails.
Email Title	Customize the Email title. Maximum length is 256 character.
SIP Registration Status	When checked, Email will contain Offline/Online indication for all 4 accounts.
System Running Status	When checked, Email will contain the system uptime.
System Temperature	When checked, Email will contain Temperature value of the system in °C and °F, as well as whether the temperature is normal or not.

Event Notification

This page allows users to configure the event notification details that will be used by GDS3710 to communicate to an HTTP server to log the events. When the feature is enabled and configured, all the event logs will be uploaded to server: RFID open door, PIN open door, SIP Call, Alarm, etc.

Examples:

- After an RFID Card swiping, GDS3710 will send to the configured HTTP server the following HTTP POST containing "Use card open door" event:

```
POST / HTTP/1.1
Host: 192.168.6.107
Authorization: Basic Og==
Connection: keep-alive
Content-Length: 90

Date: 2017-11-09; Time: 14:07:27; Event describe: Use card open door. Card ID: 378690700.
```

- After making a Call, when doorbell pressed, GDS3710 will send to the configured HTTP server the following HTTP POST containing "Phone call" event:

```
POST/HTTP/1.1
Host:192.168.6.107
Authorization:BasicOg==
Connection:keep-alive
Content-Length:62

Date: 2017-11-09; Time: 14:13:12; Event describe: Phone call.
```



These HTTP POST messages can be used by a 3rd party software to integrate the GDS3710.

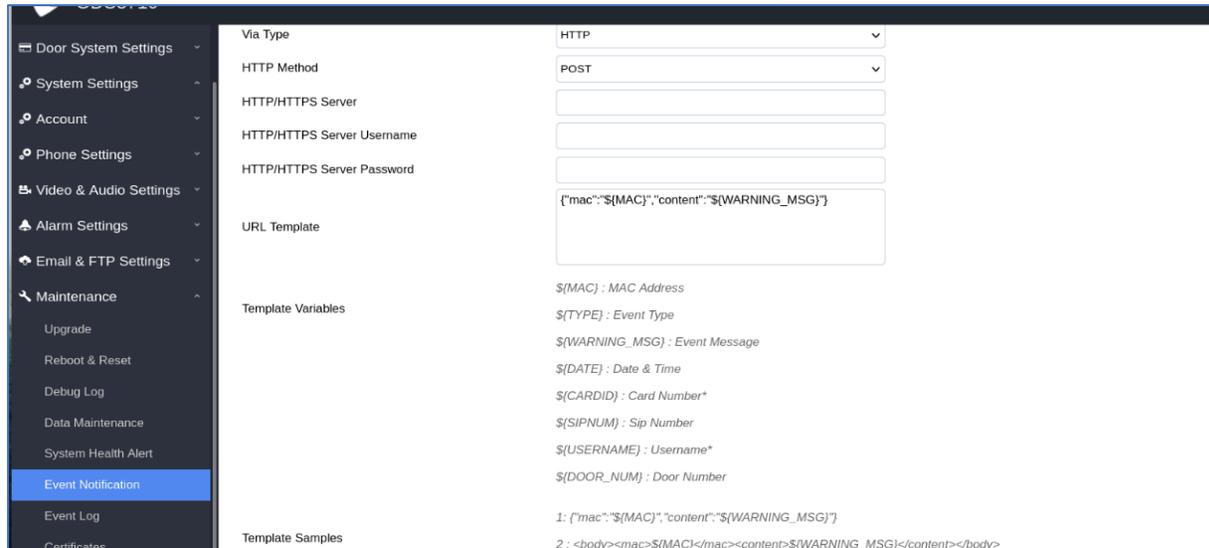


Figure 107: Log Manager Page

Table 37 : Log Manager Settings

Enable Event Notification	Enables Event Notification feature
Via Type	Choose which protocol will be used to connect to the logs server (HTTP or HTTPS).
HTTP Method	Choose which HTTP(s) method will be used to send the logs to the server (POST or GET).
HTTP/HTTPS Server	Enter the IP address of domain name for the logs server.
HTTP Server Username	Configure the username of your HTTP(s) server
HTTP Server Password	Configure the password of your HTTP(s) server
URL Template	<p>Specify the template for the event log messages that will be sent to the server, users can use the following variables to customize the message:</p> <ul style="list-style-type: none"> • <code> \${MAC} </code> : MAC Address • <code> \${TYPE} </code> : Event Type • <code> \${WARNING_MSG} </code> : Event Message • <code> \${DATE} </code> : Date & Time • <code> \${CARDID} </code> : Card Number • <code> \${SIPNUM} </code> : SIP Number

Event Log

Users could check all device logs directly from the GDS web UI under the menu “**Maintenance → Event log**”.

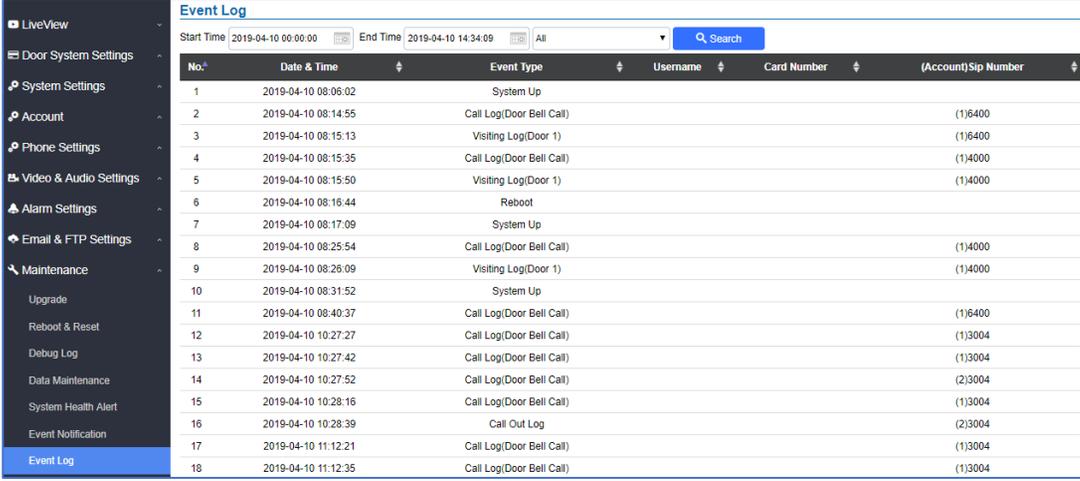
In order to get logs for a specific date interval, select the Start Time and End Time, then select which Event

type you want to check using the drop-down list, and click on  to display the records.

The following Event Types are included for filtering:

- Open Door via Card
- Visiting Log
- Open Door via PIN
- Open Door via DI
- Open door by SI
- Call Log
- Open Door via Card and PIN
- Open Door via Remote PIN
- Motion Detection
- DI Alarm
- Door & Lock Abnormal Alarm
- Dismantle by Force
- System Up
- Reboot
- Reset
- Config Update
- Firmware Update
- Non-scheduled Access
- Hostage Alarm
- Invalid Password
- Temperature Alarm
- unauthorized card swiped on Wiegand






No.	Date & Time	Event Type	Username	Card Number	(Account) Sip Number
1	2019-04-10 08:06:02	System Up			
2	2019-04-10 08:14:55	Call Log(Door Bell Call)			(1)6400
3	2019-04-10 08:15:13	Visiting Log(Door 1)			(1)6400
4	2019-04-10 08:15:35	Call Log(Door Bell Call)			(1)4000
5	2019-04-10 08:15:50	Visiting Log(Door 1)			(1)4000
6	2019-04-10 08:16:44	Reboot			
7	2019-04-10 08:17:09	System Up			
8	2019-04-10 08:25:54	Call Log(Door Bell Call)			(1)4000
9	2019-04-10 08:26:09	Visiting Log(Door 1)			(1)4000
10	2019-04-10 08:31:52	System Up			
11	2019-04-10 08:40:37	Call Log(Door Bell Call)			(1)6400
12	2019-04-10 10:27:27	Call Log(Door Bell Call)			(1)3004
13	2019-04-10 10:27:42	Call Log(Door Bell Call)			(1)3004
14	2019-04-10 10:27:52	Call Log(Door Bell Call)			(2)3004
15	2019-04-10 10:28:16	Call Log(Door Bell Call)			(1)3004
16	2019-04-10 10:28:39	Call Out Log			(2)3004
17	2019-04-10 11:12:21	Call Log(Door Bell Call)			(1)3004
18	2019-04-10 11:12:35	Call Log(Door Bell Call)			(1)3004

Figure 108: Event Logs

For more information about event logs, please visit this [guide](#).

Notes:

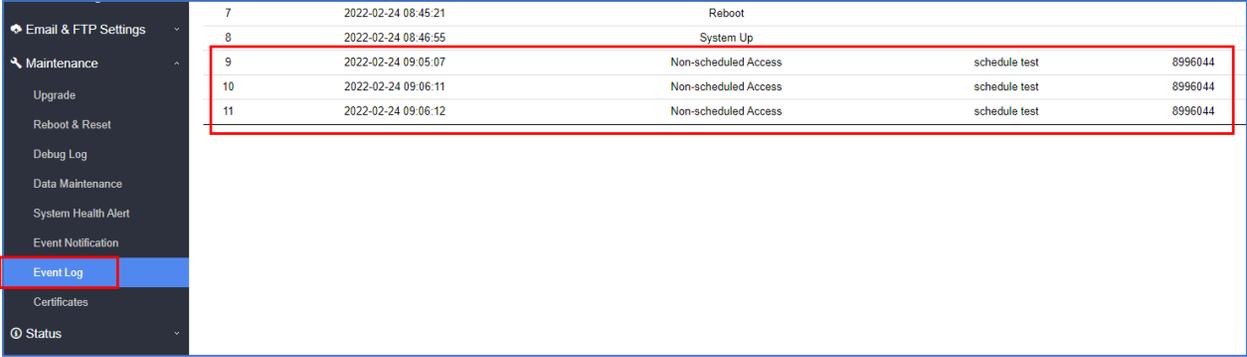- The maximum size of log storage space of GDS3710 is about 64M.
- The size of each event log is 48 bytes.
- If the log data exceeded the maximum storage space, then the oldest log will be automatically released which will be 128K of old data.
- Log non-scheduled access alarm in event log. Customers enabled RFID card access based on schedule need the system to log the access attempt out of the pre-programmed schedule to ensure better security and management.



7	2022-02-24 08:45:21	Reboot			
8	2022-02-24 08:46:55	System Up			
9	2022-02-24 09:05:07	Non-scheduled Access	schedule test	8996044	
10	2022-02-24 09:06:11	Non-scheduled Access	schedule test	8996044	
11	2022-02-24 09:06:12	Non-scheduled Access	schedule test	8996044	

Figure 109 : Log NON-Scheduled Access Alarm in Event Log

Certificates

This page allows users to upload up to 6 Trusted CA certificate files which will be trusted by the GDS during SSL exchange.

Also users are allowed to configure the device with custom certificate signed by custom CA certificate under the Custom Certificate section.

Certificates				
Trusted CA Certificates				
No.	Issued By	Expiration	Upload	Delete
1			Upload	Delete
2			Upload	Delete
3			Upload	Delete
4			Upload	Delete
5			Upload	Delete
6			Upload	Delete
Custom Certificate				
No.	Issued By	Expiration	Upload	Delete
1			Upload	Delete

Figure 110: Upload Certificate files

In order to upload your Trusted CA certificate:

Click on  button to upload a file and some related information to the uploaded file will be displayed, such as “**Issued by**” and “**Expiration date**”.

Trusted CA Certificates				
No.	Issued By	Expiration	Upload	Delete
1	-	2018-07-17 15:46:03	Upload	Delete
2			Upload	Delete

User could press  to delete one of the files.

In order to upload your Custom certificate:

Click on  button to upload a file and some related information to the uploaded file will be displayed, such as “**Issued by**” and “**Expiration date**”.

Custom Certificate				
No.	Issued By	Expiration	Upload	Delete
1			Upload	Delete

User could press  to delete one of the files.

Status

This page displays GDS3710 system and network information.

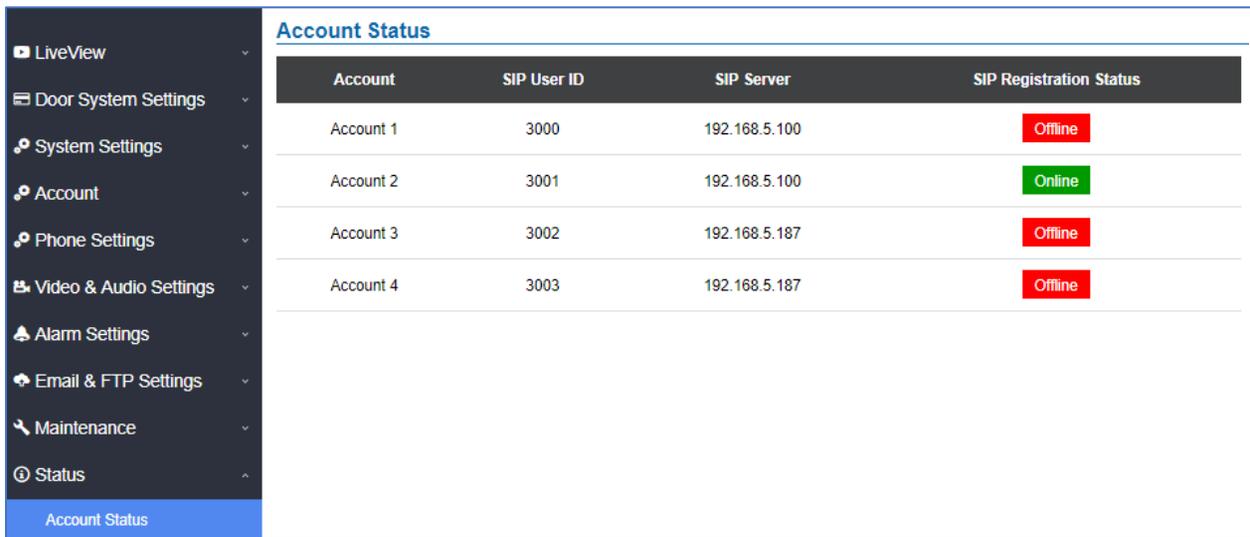


Account Status

This page displays of configured accounts' SIP user ID, SIP server as well as the SIP Registration status, from Account 1 to Account 4.

Notes:

- When the SIP account is registered, the SIP Registration status display will be **Online**
- When SIP account is unregistered, the SIP Registration status display will be **Offline**



Account Status			
Account	SIP User ID	SIP Server	SIP Registration Status
Account 1	3000	192.168.5.100	Offline
Account 2	3001	192.168.5.100	Online
Account 3	3002	192.168.5.187	Offline
Account 4	3003	192.168.5.187	Offline

Figure 111: System Info Page

System Info

This page displays information such as the product model, the hardware version, firmware...

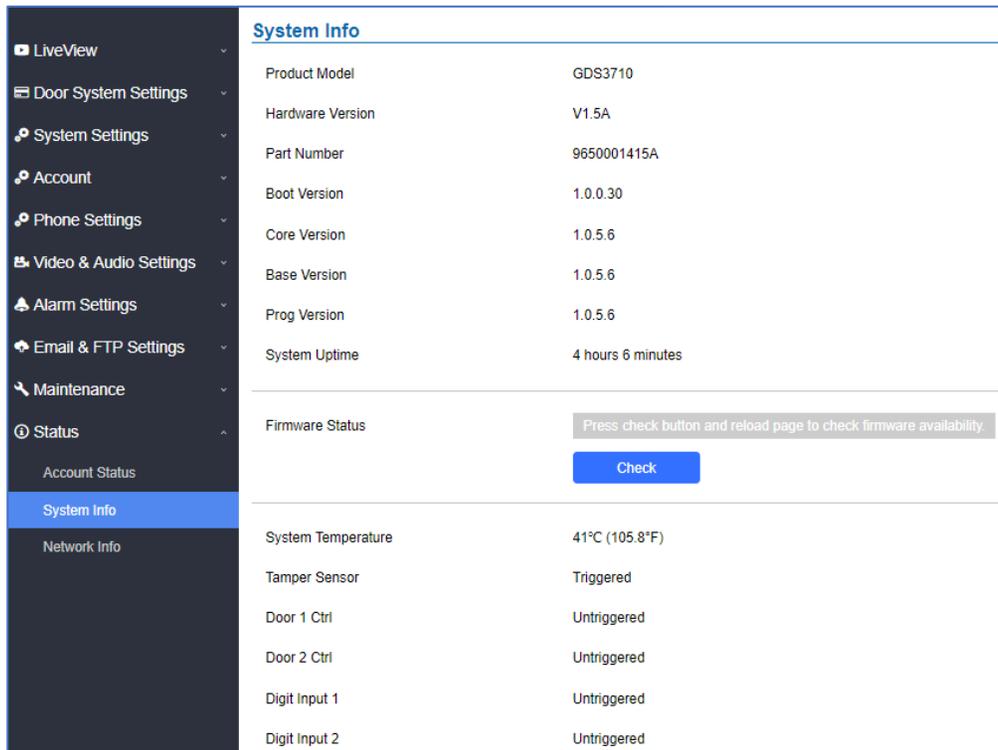


Figure 112: System Info Page


Table 38: System Info

Product Model	Displays the Product Model.
Hardware Version	Displays the Hardware Version.
Part Number	Displays the Part Number.
Boot Version	Displays the Boot Version.
Core Version	Displays the Core Version.
Base Version	Displays the Base Version.
Prog Version	Displays the Prog Version.
System Up Time	Displays the time since the first boot of the GDS3710.
SIP Registration Status	Sows whether the SIP account is registered or not.
Firmware Status	Click the <input type="button" value="Check"/> button to check whether the firmware in the firmware server has an updated version, if so, update immediately.
System Temperature	Shows the current system temperature (in °C and °F).
Tamper Sensor	Shows if the Temper Sensor is triggered or not.

Digit Output	Shows if the Alarm Out is triggered or not. If ALMOUT1 Feature is set to Open Door, then two fields will show up indicating the state of both door 1 and door 2.
Input Digit 1	Shows if alarm IN 1 is triggered.
Input Digit 2	Shows if alarm IN 2 is triggered.

Network Info

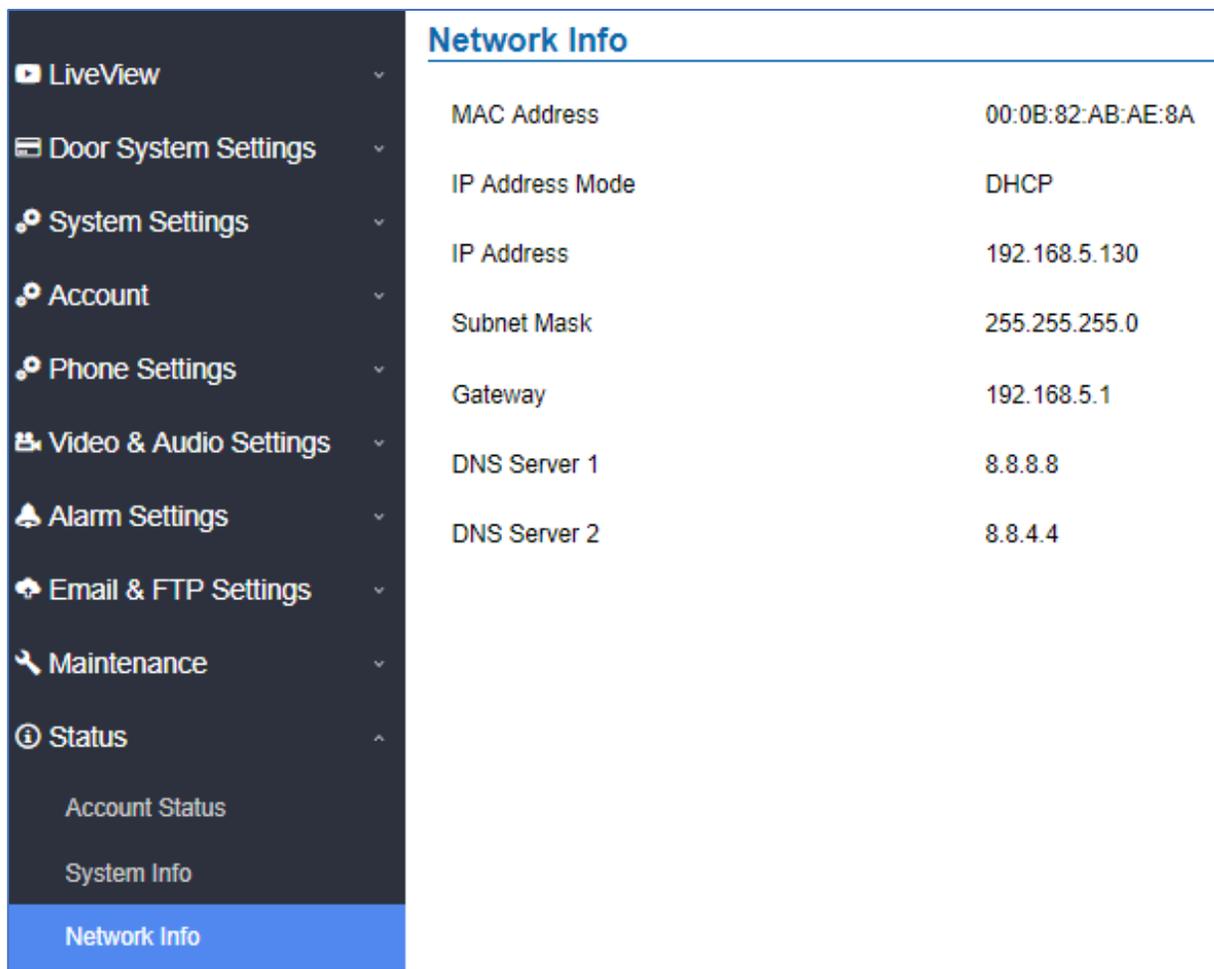This page displays the network system information of GDS3710.



Network Info	
MAC Address	00:0B:82:AB:AE:8A
IP Address Mode	DHCP
IP Address	192.168.5.130
Subnet Mask	255.255.255.0
Gateway	192.168.5.1
DNS Server 1	8.8.8.8
DNS Server 2	8.8.4.4

Figure 113: Network Info Page

Table 39: Network Info

MAC Address	Displays the GDS3710 MAC Address.
IP Address Mode	Displays the IP address mode used.
IP Address	Displays the IP address of the GDS3710.



Subnet Mask	Displays the Subnet Mask used.
Gateway	Displays the GDS3710 Gateway.
DNS Server 1	Displays the Preferred DNS Server.
DNS Server 2	Displays the secondary DNS Server.



CONNECTING GDS3710 WITH GXV32XX

The GDS3710 Door System offers a powerful integration with GXV32xx and allows users to open the door, initiates call to the GDS3710 and gets real time audio/video stream.

The GXV3275 can be connected with the GDS3710 in two different ways, either using peering mode (without a SIP server) or through a SIP server. For more details, please refer to following guide:

http://www.grandstream.com/sites/default/files/Resources/Connecting_the_GDS3710_with_GXV32XX_Configuration_Guide.pdf



CONNECTING GS WAVE WITH GDS3710 DOOR SYSTEM

The GDS3710 Door System can interact with the GS Wave softphone application to allow users to open door, initiate call to the GDS3710, offering more mobility during security monitoring and increasing connectivity to essential communications and real-time audio/video stream.

- **GS Wave Android:** For more details about needed steps for configuring the GDS3710 to connect with Grandstream Wave Android™ version, please refer to following guide:

http://www.grandstream.com/sites/default/files/Resources/Connecting_GDS3710_with_GS_Wave_Android_Guide.pdf

- **GS Wave iOS:** For more details about needed steps for configuring the GDS3710 to connect with Grandstream Wave iOS™ version, please refer to following guide:

http://www.grandstream.com/sites/default/files/Resources/Connecting_GDS3710_with_GS_Wave_iOS_Guide.pdf



GDS3710 HTTP API

Grandstream Door System supports HTTP API (Application Programming Interface).

For more details, please refer to following guide:

http://www.grandstream.com/sites/default/files/Resources/gds37xx_http_api.pdf

The document explains in detail the external HTTP-based application programming interface and parameters of functions via the supported method. The HTTP API is firmware dependent. Please refer to the related firmware Release Note for the supported functions.

Administrator Privilege is required, and administrator authentication verification has to be executed before any operation to the related parameter configuration.



FACTORY RESET

Restore to Factory Default via Web GUI

To perform factory reset to the GDS3710 via the Web GUI, please refer to following steps:

1. Access to GDS3710 Web GUI using the using the shipped default password.
2. Navigate to Maintenance → Reboot & Reset.
3. Select the reset type from Rest drop down menu and press reset button as displayed on the following screenshot.

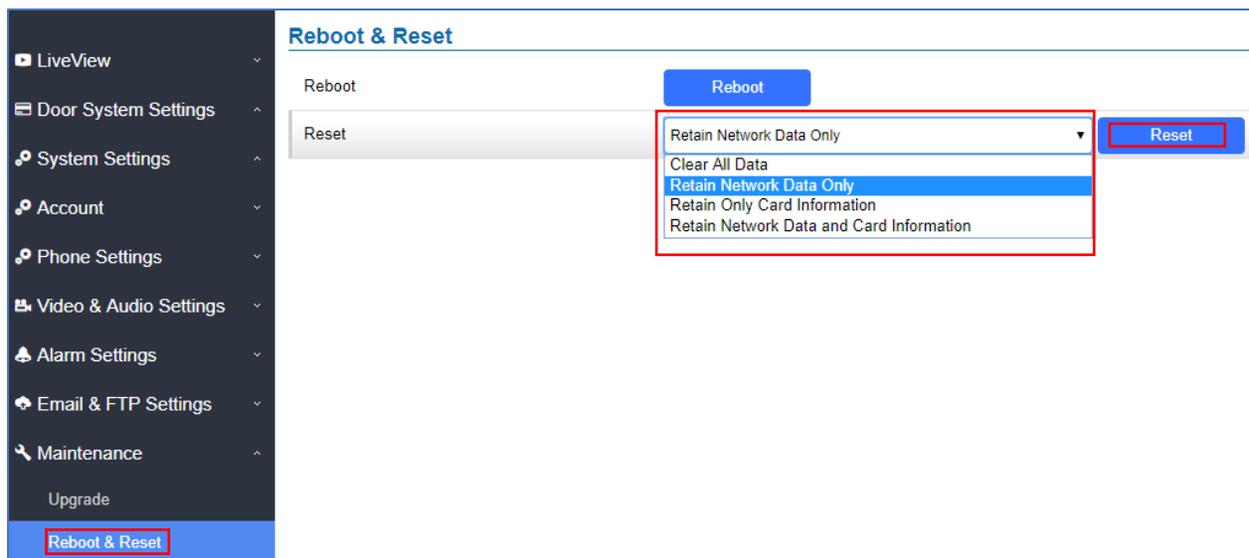


Figure 114: Reset via Web GUI

Hard Factory Reset

Some users did not keep the revised password safely and forgot the changed password. Due to GDS3710 did NOT have built-in reset button (Grandstream purposely designed this way to enhance security), this will make the GDS3710 inaccessible even for the true owner who lost the changed password.

Starting from firmware 1.0.2.21, Grandstream introduced a special way to do hard factory reset using the Wiegand Interface Cable shipped with GDS3710. Below is a photo of the normal connection of the provided Wiegand cable.

Important note: Power must **NOT** be lost while performing hard factory reset.





Figure 115: Wiegand Interface Cable

To perform hard factory reset to the GDS3710, please refer to following steps:

1. Power OFF the GDS3710.
2. Take the provided Wiegand cable, connect (or shorting) the related color wires as illustrated on the following picture. Please make sure the connection is correct and solid:
 - Connect **WHITE** and **BROWN** cable together.
 - Connect **GREEN** and **ORANGE** cable together.

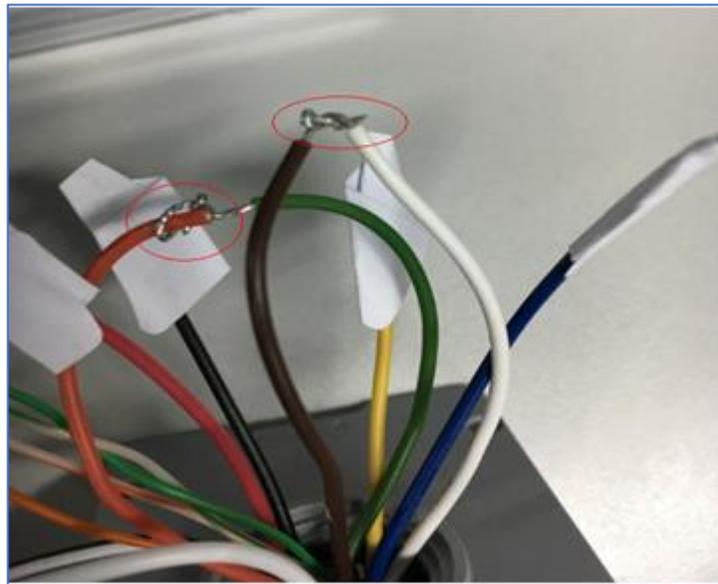


Figure 116: Wiegand Cable Connection

3. Power ON the GDS3710. In about 10 seconds, the key pad LED lighting will change from solid lighting to blinking, the blinking time window is about 30 seconds. The user needs to enter the following key combination ***0#** while the LED is blinking.

Notes:

- If the correct key combination inputted, the last key input will play with a long tone, illustrating the correct key combination entered, then the GDS3710 will get into factory reset mode.
 - During the blinking time window, if the user does not finish the key combination operation, or pressed the wrong key combination, the GDS3710 will play short beep quickly three times illustrating error. Nothing will happen and the GDS3710 will get into normal booting process. User who wants to do hard factory reset has to perform the operation from the beginning again.
4. After 3 ~ 5 minutes the GDS3710 will finish performing the reset process, then the user can log into the GDS3710 web GUI using the shipped default password.
 5. User has to power OFF the GDS3710, unplug the Wiegand cable, power ON the GDS3710 again and make sure the GDS3710 is running correctly.

Restore to Factory Default Via SIP NOTIFY

1. Access your GDS3710 UI by entering its IP address in your favorite browser.
2. Go to Phone Settings # page.
3. Enable “Allow Reset Via SIP NOTIFY” by checking this option. (Default is disabled)
4. Once a **SIP NOTIFY** with “**event: reset**” is received, the GDS3710 will perform factory reset after authentication phase.

Notes:

- Received SIP NOTIFY will be first challenged for authentication purpose before taking factory reset action.
- The authentication can be done either using admin password (if no SIP account is configured) or via SIP account credentials (SIP User ID and Password).



Restore factory password via special key combination

This feature allows customers to reset the device administrator password to factory default via keypad operation through some special key combination.

When performing this operation, ONLY password will be reset back to factory default. All other setting or parameters will NOT be changed and will remain the same. This feature is specially designed for field engineers or technicians when dispatched in field but for some reason the administrator password is not available therefore not able to access the GDS37xx device to do the related maintenance.

Here are the steps to do such password reset operation via keypad:

Encoding Rules:

Alphabet A – Z mapping to digit 1 – 26 respectively, no difference in lower or up case.

Table 117: Encoding rule

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26

Note:

1. MAC address of the GDS37xx (check the sticker at back of the device)
2. Default password of the GDS37xx (check the sticker at the back of the device)
3. Correct decoding the last 6 MAC address into digits (refer to encoding rule)
4. Correct decoding the default password into digits (refer to encoding rule)
5. Finish keypad input within 1 minute

Operation Steps:

- 1) When device is idle, input the special keypad combination with format: *****last_6_MAC**#**
- 2) Device will reach restore mode after correct digits in Step 1) entered. The backlight of keypad will flash quickly to tell operator the device is now in password reset/restore mode.
- 3) Operator will enter the correct decoded default password ending with # with format: **default_password_code#** via the keypad within 60 seconds.
- 4) If wrong code combination entered, the GDS37xx will beep with error sound (three short beeps) then exit the password reset mode, and the backlight will stop flashing.
- 5) If the correct default password decoded entered within 60 seconds, GDS37xx will play a long beep sound (advising correct operation), the device will reboot itself automatically.



6) If keypad entry time out (not finish the input within 60 seconds), the device will exit this password reset mode automatically and stop the backlight flashing. After successful password reset, operator will then be able to log into the GDS37xx webUI with default password, all the configuration inside the device will be the same and will NOT be changed.

For example:

Decoding the string into digits and write to paper before doing the operation:

- Device with last 6 MAC address: 33DDDD
- Decoding the last 6 MAC to digits would be: 334444
- Default password is: xwpxz6AA
- Decoding the default password to digits would be: 2423162426611

1) Enter ***334444**# via keypad, get into the password reset mode, the keypad backlight will flash quickly.

2) Within 60 seconds, enter 2423162426611#, the device will play one long beep then reboot itself.

2) Wait the device finishing boot up, log in the webUI using the default password, xwpxz6AA



EXPERIENCING THE GDS3710

Please visit our website: <http://www.grandstream.com> to receive the most up-to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our [product related documentation](#), [FAQs](#) and [User and Developer Forum](#) for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all your questions. Contact a technical support member or [submit a trouble ticket online](#) to receive in-depth support.

Thank you again for purchasing Grandstream Door Phone System, it will be sure to bring convenience and color to both your business and personal life.

